



#### Installation Guide For Styles PRY8616AN and PRY8616WS

### **Tools Required**

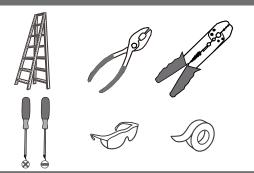

## **Light Source**

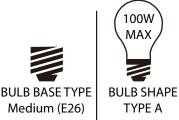

2 BULBS REQUIRED
BULBS NOT INCLUDED

#### $oldsymbol{\Delta}$ Warnings and Cautions


Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.


Turn off power to the fixture and allow the bulbs to cool before replacing.

## **Package Contents**

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contat your original place of purchase.

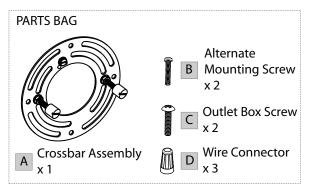

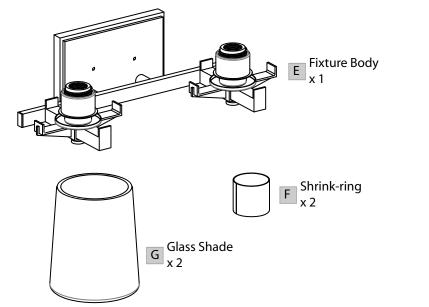


#### Table of Contents




Assembly

STEP 2


Crossbar












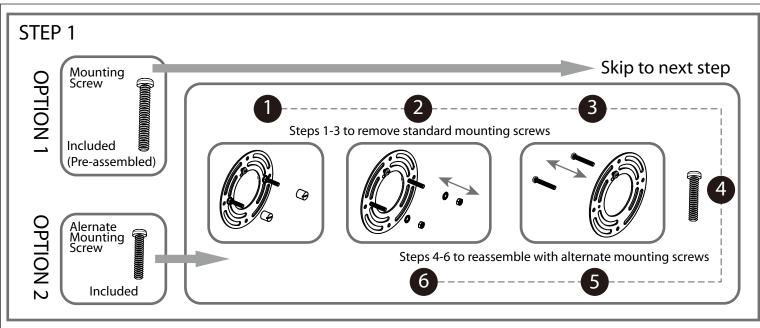

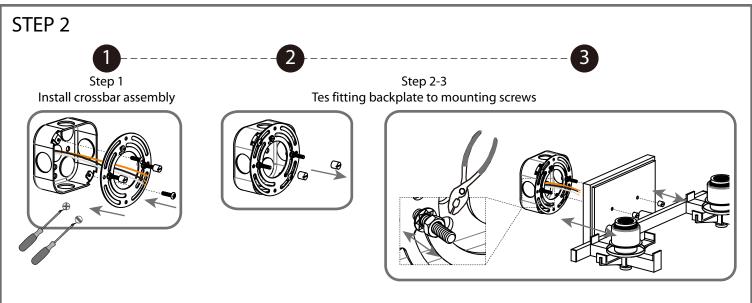


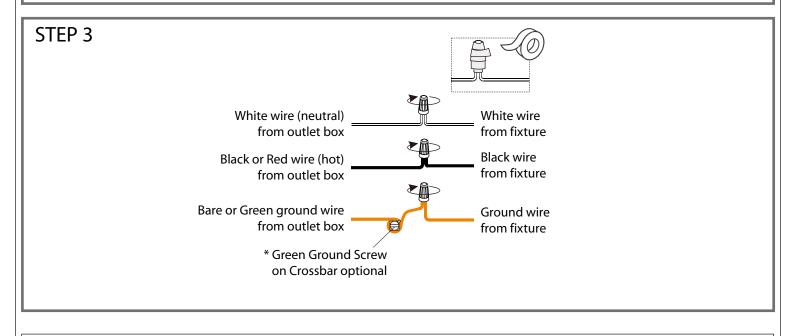

# STEP 4

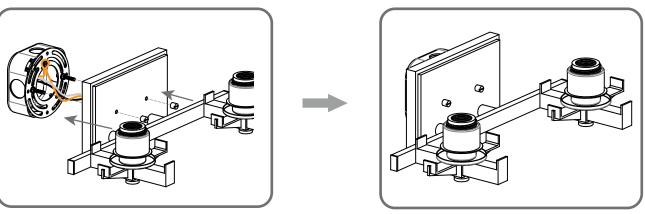




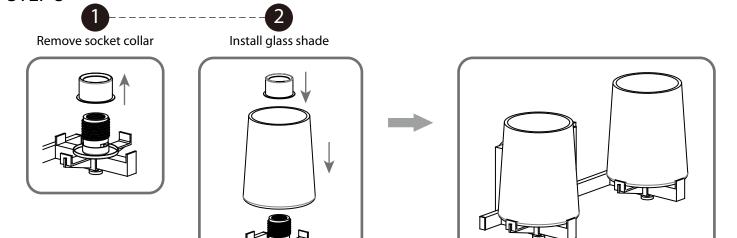


# STEP 6

The gap of the shrink-ring is against the backplate.

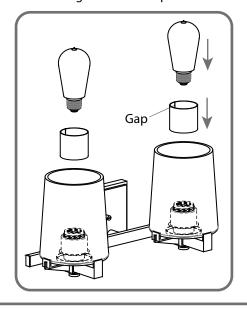



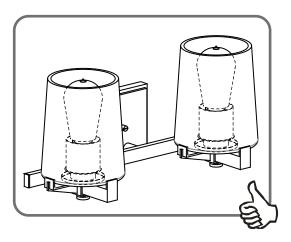

©2020 Quoizel Inc.

visit us on-line at www.quoizel.com

Released Date: 2020-08-24