QUOIZEL.

Assembly Instruction Sheet #IS-SNN9009 For Styles SNN9009K, SNN9009PN and SNN9009W

Please go to www.quoizel.com for product cleaning tips. Go to the Care + Maintenance selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (1) Medium Base bulb 100W Maximum, Alternate bulb (1) 23W CFL.

Estimated Assembly Time: 20-30 minutes


Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

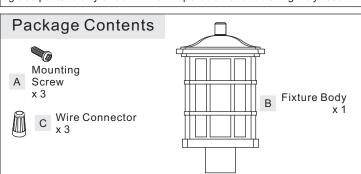


(Step 3 Continued)

connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.



STEP 1 - Install Bulb


- A. Remove the Fixture Hood from the Cage by unscrewing Screws on the Fixture Hood.
- B. This fixture uses standard bulb with a medium screw base. Maximum 100 watts. Insert bulb and screw snugly into place.
- C. Attach the Fixture Hood back onto the top edge of the Cage and secure with the previously removed Screws. Hand tighten until snug.

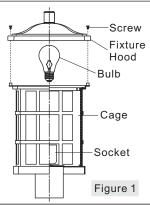

STEP 4 - Attach Fixture Body to Post


- A. Coat the top 1" of the Post with Clear Silicone Caulk (not supplied) and position the Post Fitter onto the Post. Be sure to seat it completely, aligning the holes in the Fitter with the 1/16" Pilot Holes drilled into the Post.
- B. Secure the Fixture to Post with (3) Mounting Screws (A).

Your fixture is now assembled and ready to use. Enjoy!

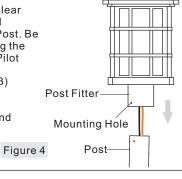


STEP 2 - Drill Pilot Holes on Post

- A. Carefully fit the Post Fitter over the end of the Post (not supplied), making sure the Post Fitter is fully seated
- B. Mark the drill point for the (3)
 Mounting Screws, using (3)
 Mounting Holes as reference. After
 marking hole locations, remove
 fixture from post and drill 1/16" pilot
 holes for screws.

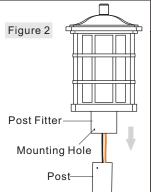

HOW TO REPLACE GLASS PANELS

- A. Unlock Screws on the Fixture Hood and remove Fixture Hood from the Cage.
- B. Remove Bulb from inside of the Cage.
- C. Remove Lock Screws from the Cage and remove Glass Holders. Replace Glass Panels from the Cage and then re-install Glass Holders to secure them. Secure with removed Lock Screws.
- D. Re-install the Bulb and re-attach the Fixture Hood to the Cage. Secure with Screws and hand tighten until snug.

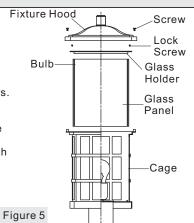

STEP 3 - Wire Connections

A. Use standard wire connectors (C) to make all wire connections. (Connectors are not included with fixture.) Twist