


## ASSEMBLY INSTRUCTIONS

ITEM NO.: 7-9006-3

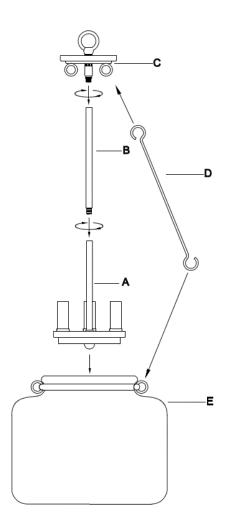

$$B \rightarrow A \rightarrow C \rightarrow D \rightarrow E$$

- 1. Carefully unpack and identify all parts referring to illustration for parts identification.
- 2. Turn the power to the installation point OFF.
- 3. Thread the center rod (B) into the top of fixture body (A). Hand tighten until snug.
- 4. Thread the bottom of Assembly (C) onto the top center of center rod (B). until snug.
- 5. Attach both ends of the tie rod (D) to the Assembly (C) and the glass shade (E).
- 6. Referring to the installation instruction with the product for the wiring and installation.
- 7. Install proper bulbs (not provided) to the sockets referring to the marking and/or labels on the fixture for maximum wattage.
- 8. Restore the power to the installation point ON.
- 9. Assembly is completely. Retain this sheet for future reference.