


#### **Instructions for electrician STEPS 2 - 18**


**WARNING:** THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX.

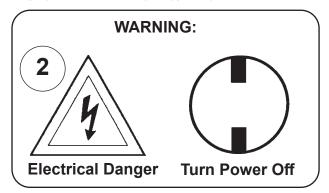

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

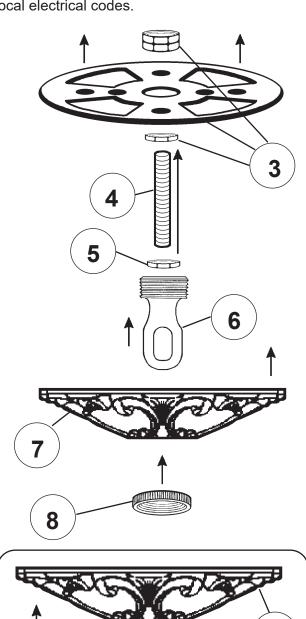


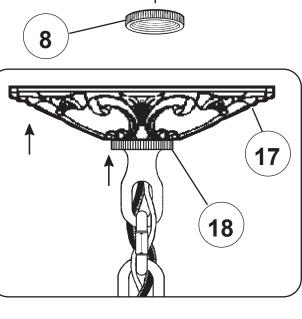

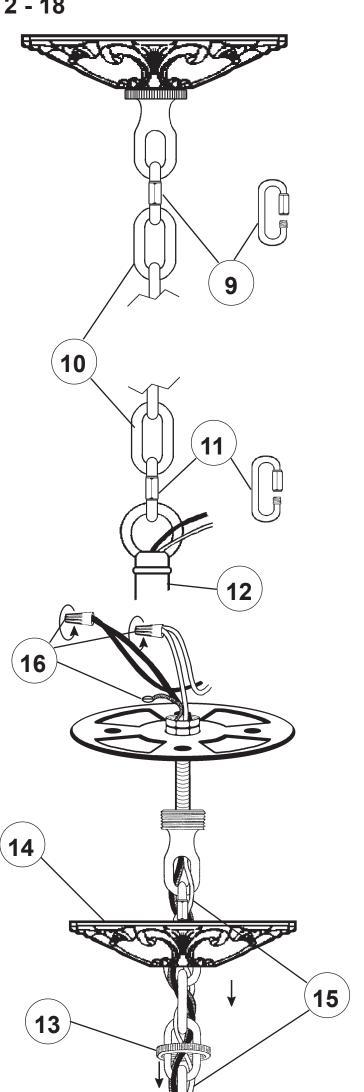


### CHANDELIER 5008- \_\_\_ TRIM DIAGRAM

(Finish Option)

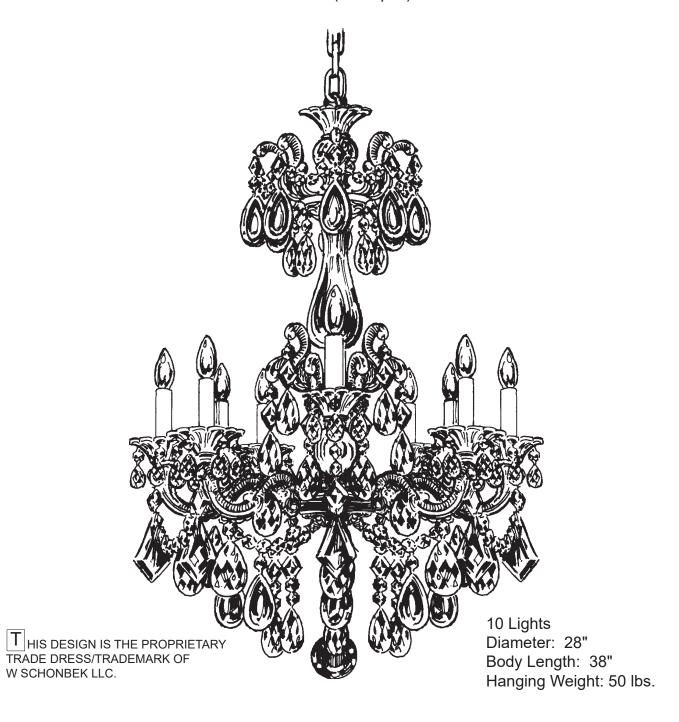



See diagram on back page Follow steps in exact order Save this trim diagram for future reference




#### Instructions for crystal trimming **STEPS 19 - 34**




27

trimming.

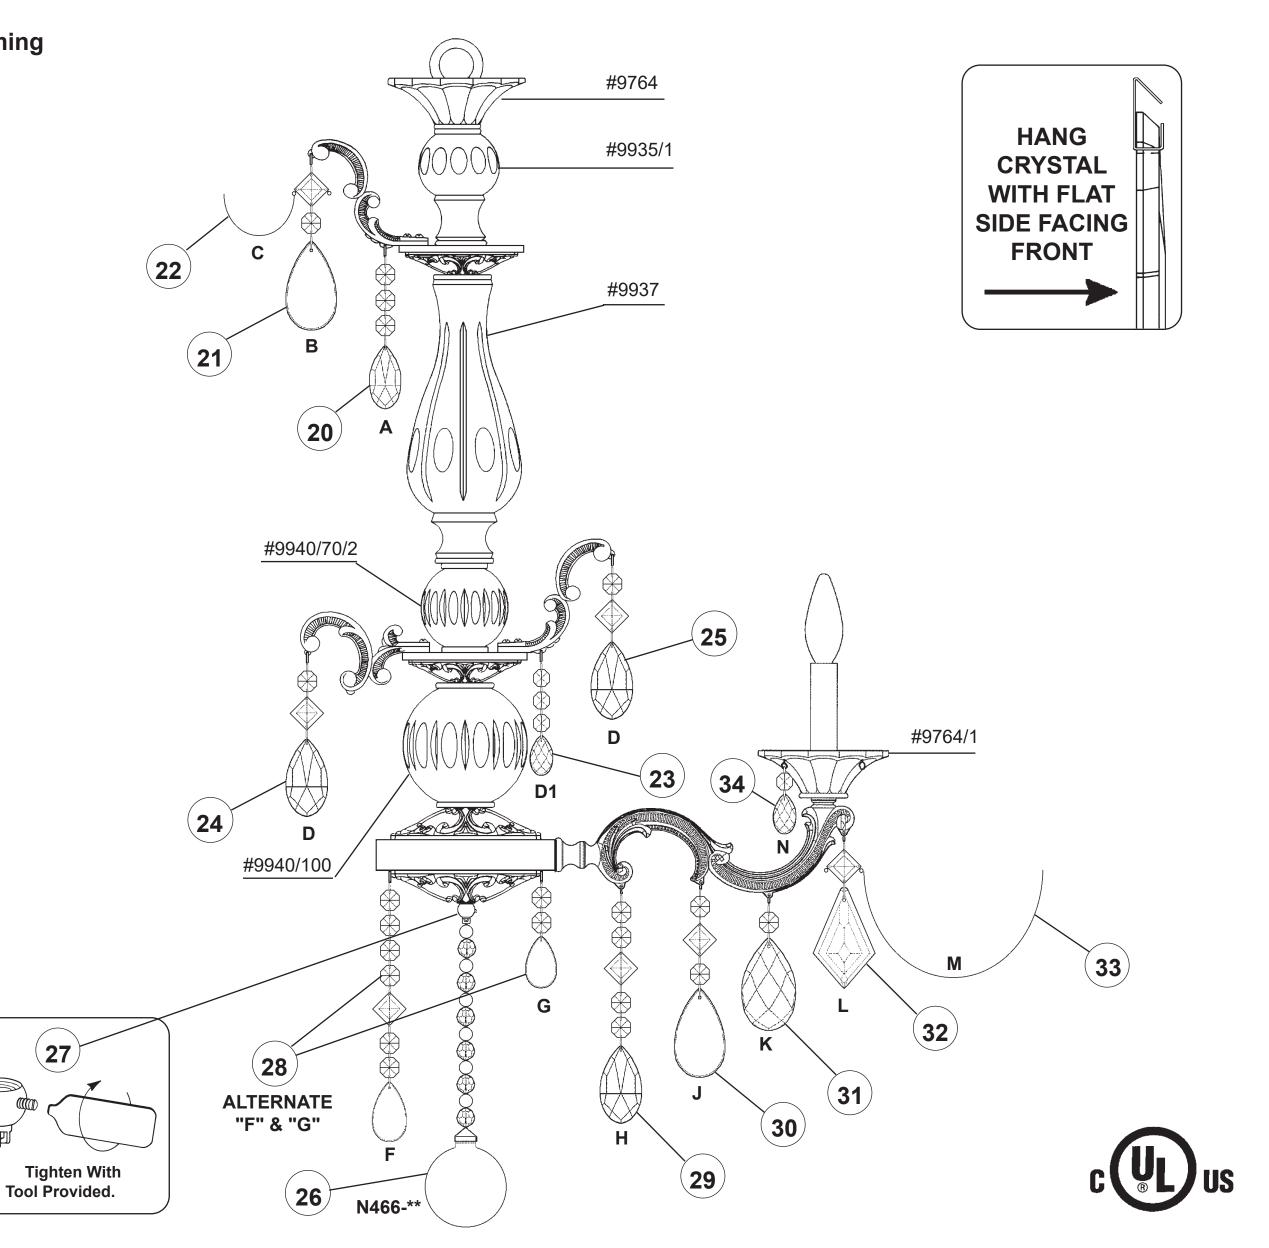



## Instructions for electrician STEPS 2 - 18


**WARNING:** THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX.

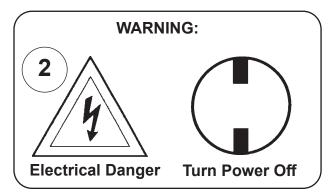


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes

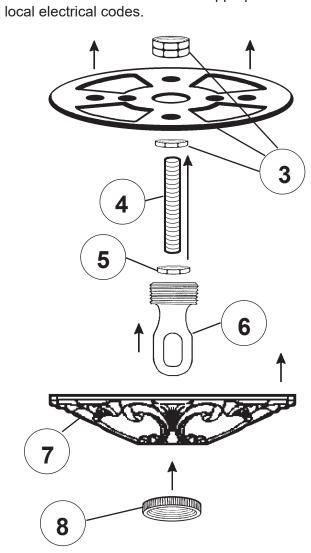

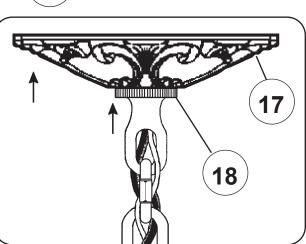

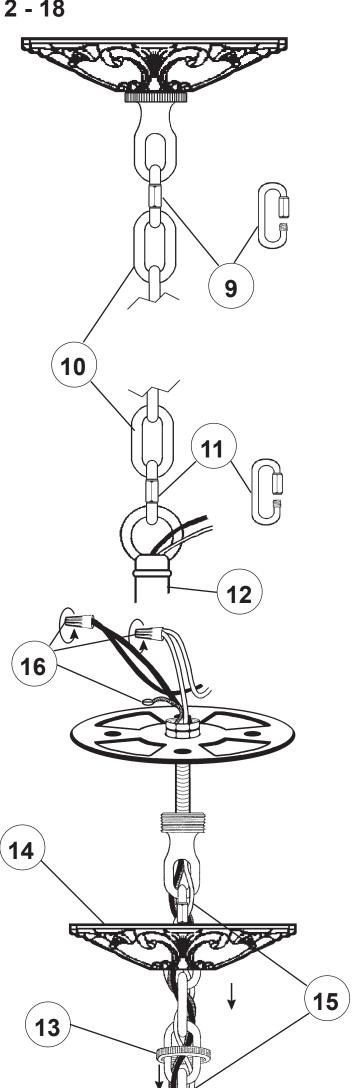


## CHANDELIER 5008- \_\_\_ R TRIM DIAGRAM

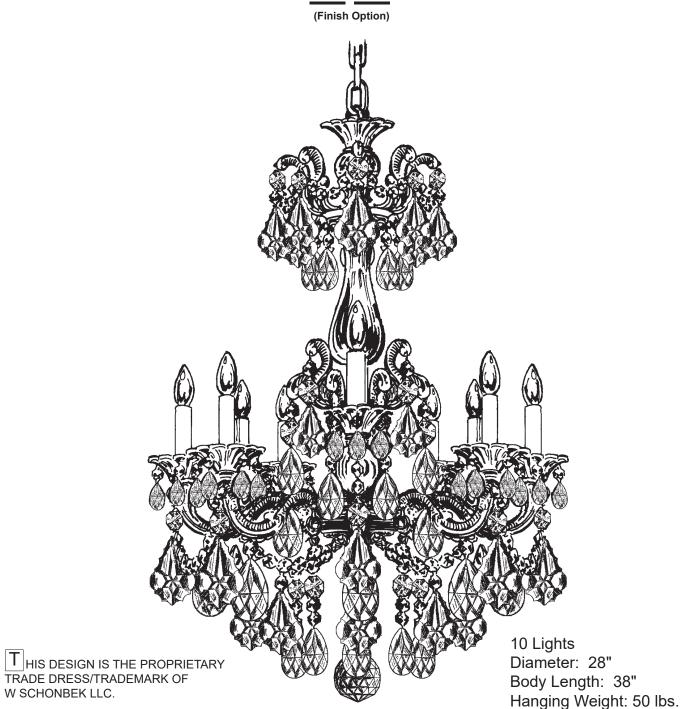




See diagram on back page Follow steps in exact order Save this trim diagram for future reference

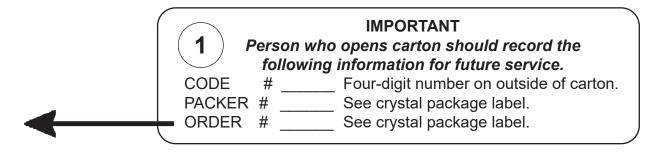


# Instructions for crystal trimming STEPS 19 - 34

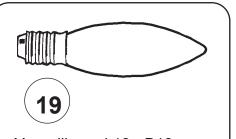


You will need 10 - B10 25 Watts Recommended 60 Watts Max

Install bulbs and be sure to test fixture BEFORE trimming.

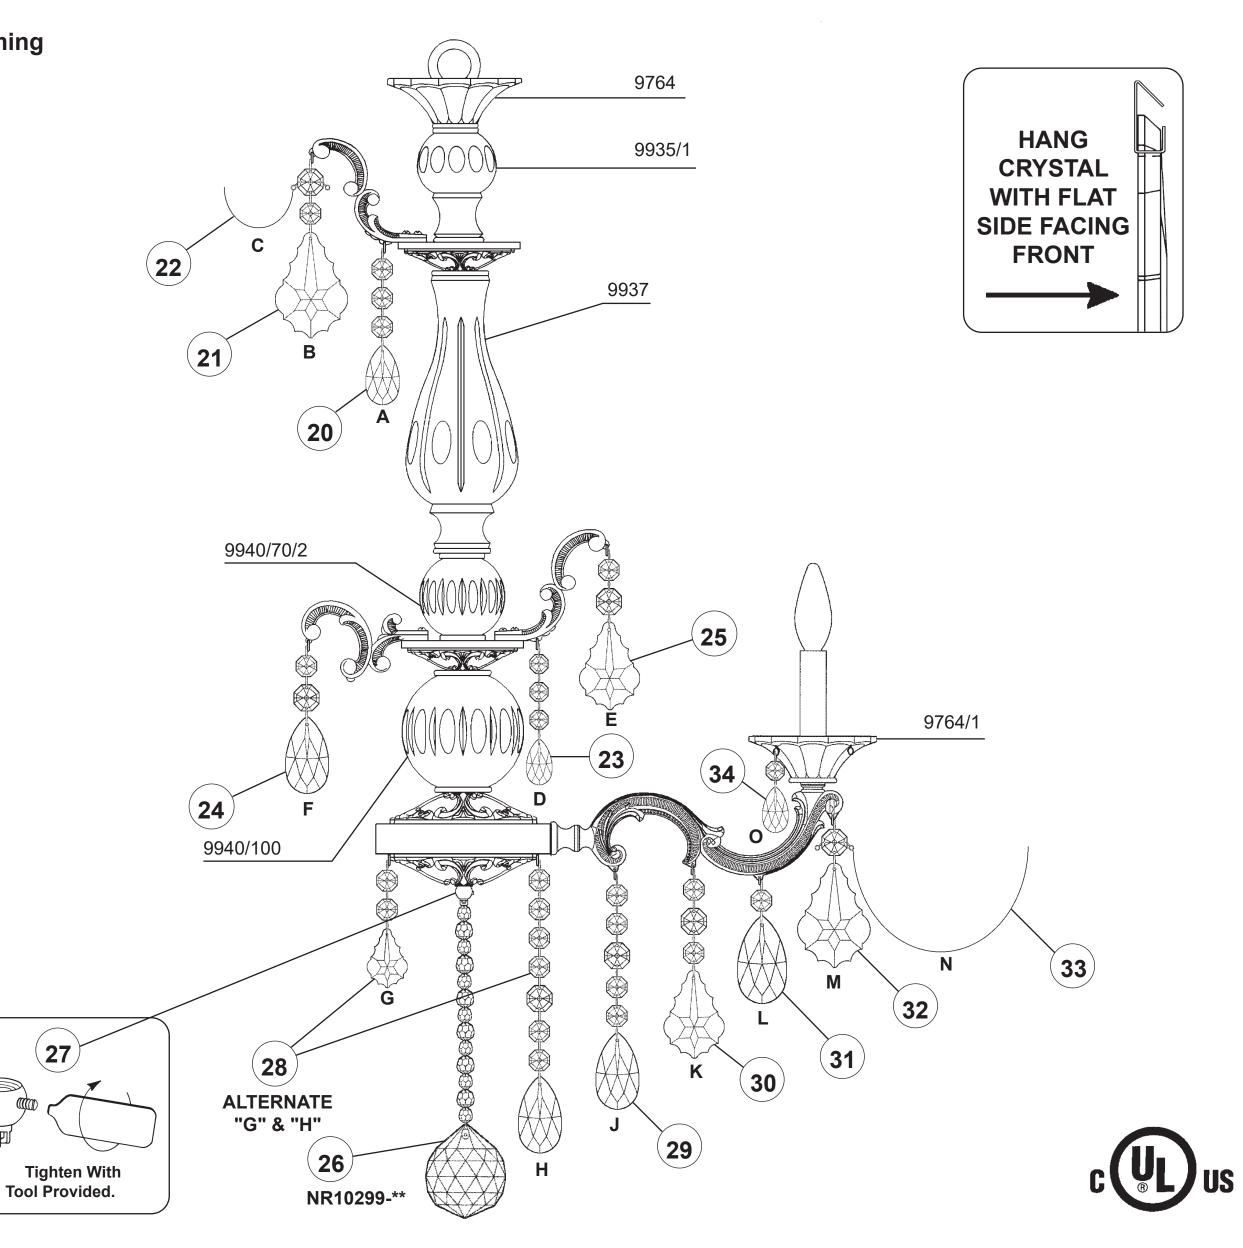



## Instructions for electrician STEPS 2 - 18


**WARNING:** THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX.

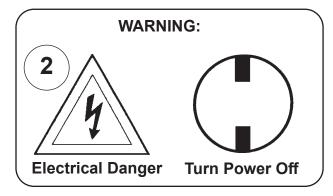

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

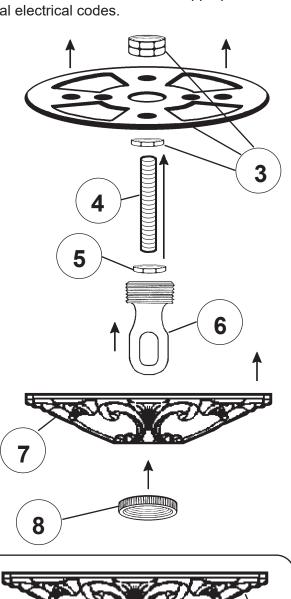

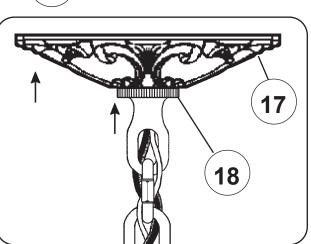

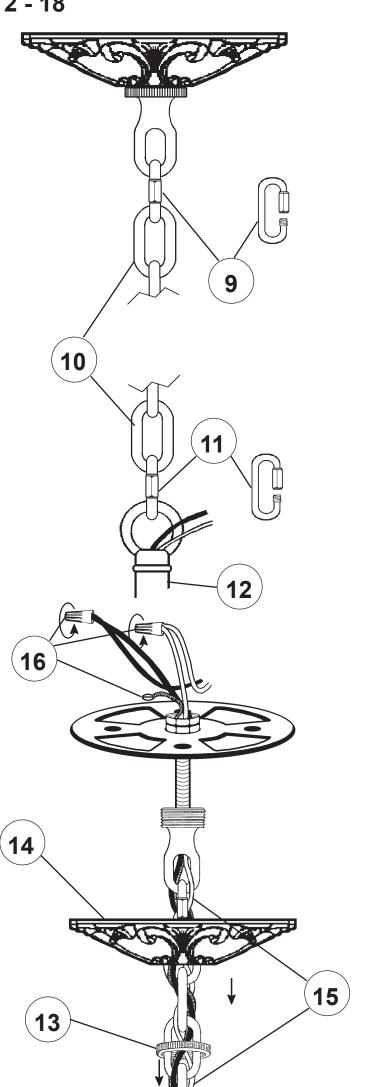

### **CHANDELIER 5008-**

This design is the proprietary

TRADE DRESS/TRADEMARK OF

W SCHONBEK LLC.

TRIM DIAGRAM

10 Lights


Diameter: 28" Body Length: 38"

Hanging Weight: 50 lbs.


(Finish Option)
(Trim Option)



See diagram on back page Follow steps in exact order Save this trim diagram for future reference

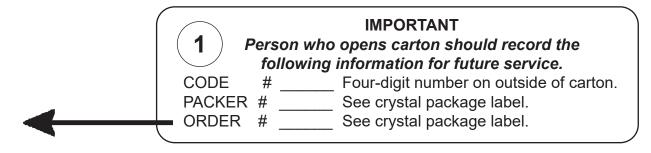

# Instructions for crystal trimming STEPS 19 - 34

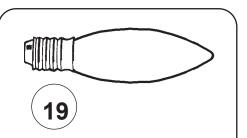

You will need 10 - B10 25 Watts Recommended 60 Watts Max

Install bulbs and be sure to test fixture BEFORE trimming.

