


ASSEMBLY AND INSTALLATION | VERSION 2

- 1, Connect the Pipe (1),(2),(3),(4),(5) together with the fixture. Then screw with the Swivel.
- 2, OUTLET BOX by the two MOUNTING SCREWS .
- 3, Screw the butterfly nut, key washer and metal washer from the threaded tube.
- 4, Make wire connections:
 - Twist together the white wire from the fixture with the white wire from outlet box. Cover with wire connector
 - Twist together the black wire from the fixture with the black wire from outlet box. Cover with wire connector
 - Loop the GROUND WIRE to CROSS BAR with a GREEN SCREW.
- 5, Place the CANOPY against the OUTLET BOX by screwing the Ball Nut .
- 6, Attach the SHADE(not included) onto the SOCKET , screw SOCKET RING tightly .
- 7, Install bulbs.(Please do not exceed the maximum capacity which is recommended on the sockets).

INSTALLATION IS NOW COMPLETED.

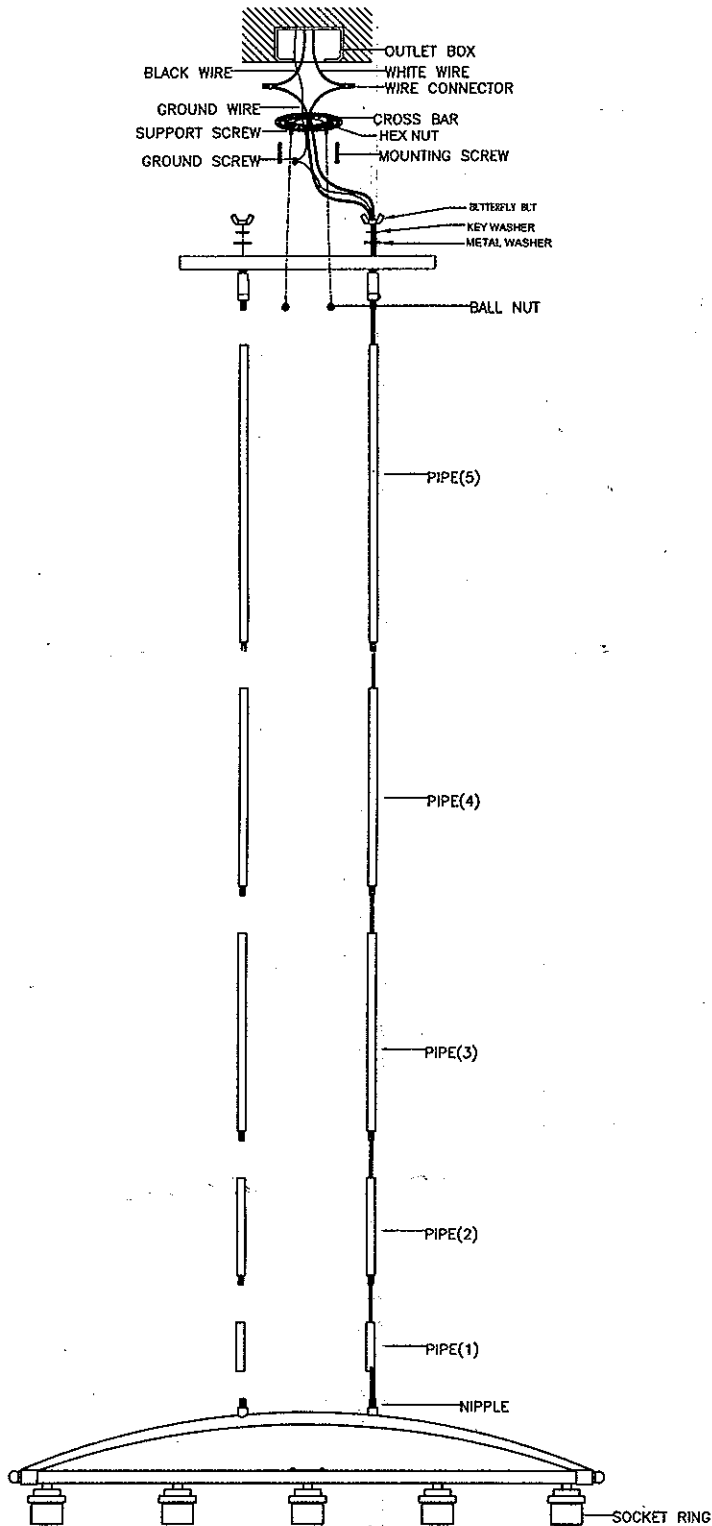

VERSION 2

ITEM NO. 2435-BN, 2435-DG