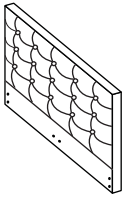
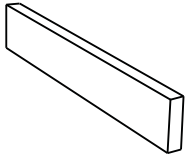





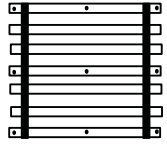










ITEM NAME/NOM D'ITEM: MODERNITY QUEEN BED/KING BED

ITEM #/NO. ITEM: 100568/100569

PARTS LIST/LISTE DES PIÈCES

(1)	(2)	(3)	(4)	(9)
 X1	 X1	 X4	 X2	A.  4mm x1
(5)	(6)	(7)	(8)	B.  M6x30mm x8
 X1	 X2	 X3	 X2	C.  M6x40mm x3
				D.  M6x60mm x4
				E.  4x32mm x20
				F.  Ø6mm x8
				G.  Ø6mm x8
				H.  M6x10mm x3

ASSEMBLY INSTRUCTION/INSTRUCTION D' ASSEMBLAGE

I

II

III

IV

Screw the slat 1,4,7,8,11,14

For missing parts or damaged parts, please call

USA : 1-866-798-6663
 Canada : 514-382-6661