


Assembly and Installation Instructions for Model's

500660DW

Warning please make sure the electrical breaker is shut off before commencing with this installation
Please note a 4 x 4 deep Octagonal J-Box box is required for the installation of this fixture.

CAUTION - RISK OF FIRE

Installation of this fixture should be done by a licensed electrician or by a person familiar with local electrical codes and the construction and operation of this fixture.

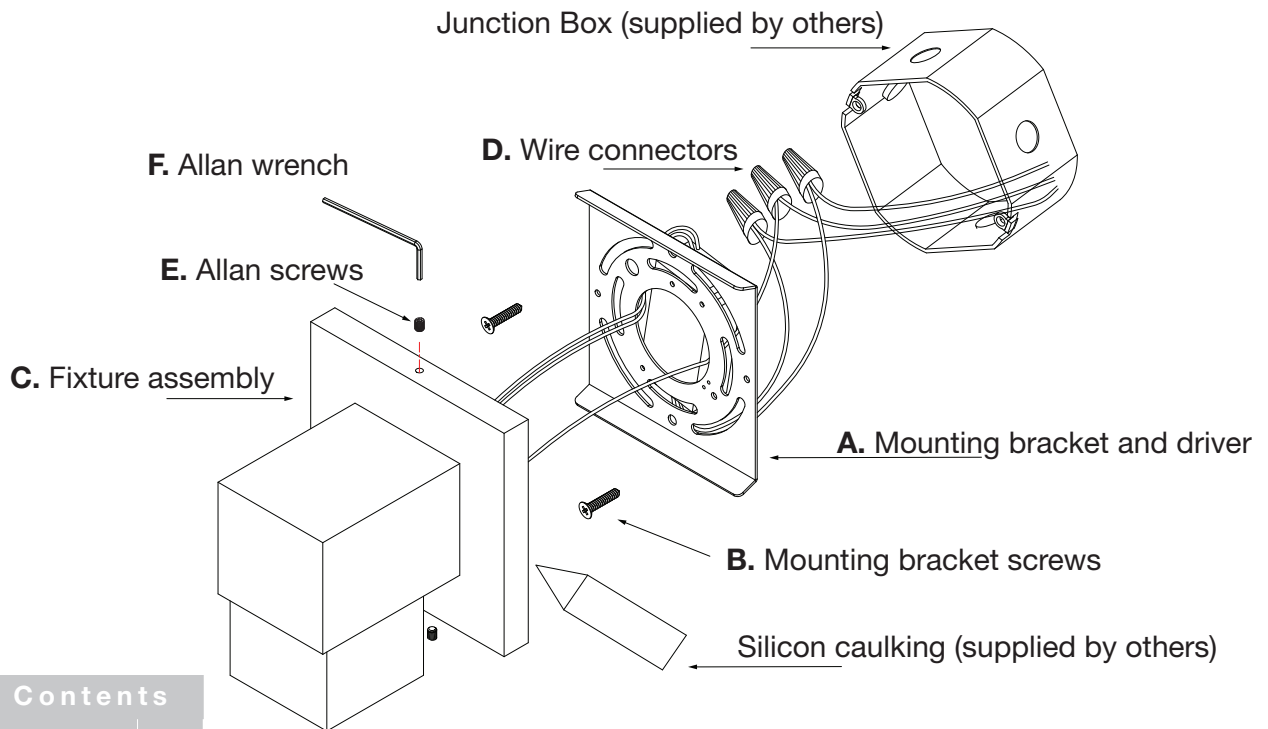

Package Contents		
Part	Description	Qty
A	Mounting bracket and driver	1
B	Bracket screws	2
C	Fixture assembly	1
D	Wire connectors	3
E	Allan screws	2
F	Allan wrench	1

Installing the fixture *please ensure the electrical breaker is switched off before commencing*

- 1 Attach the supplied Mounting bracket with Driver attached (**A**) to the Junction-Box, secure in place with the two supplied Bracket screws (**B**).
- 2 Connect the supply wires to the White supply wire to the White fixture wire, Black supply wire to Black fixture wire and the ground Bare Copper or Green wire to the Green fixture wire using the supplied Wire connectors (**D**). Once the electrical wire connectors are securely fastened it is recommended to tape these connectors with electrical tape.
- 3 Attach the Fixture assembly (**C**) to the Mounting bracket (**A**) and secure with the Allan screws (**E**) and supplied Allan wrench (**F**).
- 4 Caulk the fixture with Silicon Caulk (supplied by others) on all sides to prevent water seepage.
- 5 Switch on the electrical breaker switch and your new fixture is ready for many years of trouble free use.