IN11095ORB/IN11095PN INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions as you may need them a later date.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustration.


ASSEMBLY AND INSTALLATION

- 1. Attach cover onto the coupling, then thread the loop onto the coupling.
- 2. Install bulb: (not included). (Don't exceed the maximum capacity recommended on the Sockets).
- 3. Hold the ball shade against the socket holder and attach with ball nut.
- 4. Use two C rings to attach the chain to the loops.
- 5. Space the metal rings evenly.
- 6. Secure the cross bar with the mounting screws to the outlet box.
- 7. Lower the canopy onto the top nut and pass the top loop through canopy.
- 8. Attach the nipple into the cross bar with washer and hex nut.
- 9. Attach top loop to the nipple.
- 10. Make wire connections:
 - ---The ridged wire (unmarked) from the fixture to white wire from power source.
 - ---The smooth wire (marked) from the fixture to black wire from power source.
 - ---Attach the ground wire to cross bar with a green screw.
- 11. Place the canopy over the outlet box and secure the canopy with top nut.

1500 Cherokee Parkway, Suite 100, Acworth, GA 30102 P: 866-845-5451 • F: 866-816-6165

E: service@acclaim-lighting.com



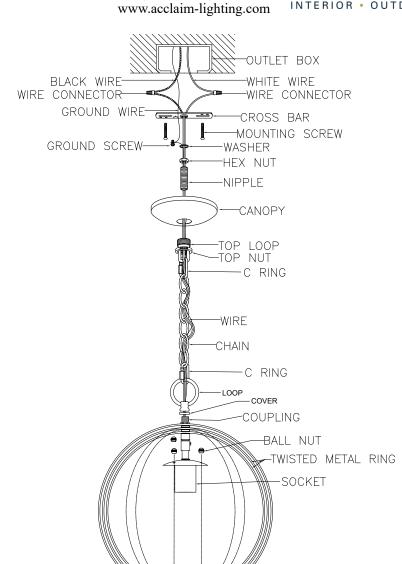

SCREW

BALL SHADE