

1500 Cherokee Parkway, Suite 100, Acworth, GA 30102

Phone: (866) 845-5451 • Fax: (866) 816-6165

E: service@acclaim-lighting.com • www.acclaim-lighting.com

IN21165 INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

WARNING: Risk of Fire. Consult a qualified electrician to ensure correct branch circuit conductor. Min 90°C supply conductors.

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL


All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

ASSEMBLY AND INSTALLATION

- 1. Connect stems (12)(13)(14) one by one, then fix them into lamp body (15) and thread the stem (12) into canopy (11).
- 2. Secure the mounting bar (7) with box screws (8) to the outlet box (1).
- 3. Pull out the outlet wire and ground wire from the outlet box (1). Make wire connections
- --Ribbed wire (w/o marking) from light to White wire (2) from power source.
- --Smooth wire (w/o marking) from light to Black wire (3) from power source.
- -- Loop the ground wire (4) to mounting bar (8) with a ground screw (7).
- 4. Align holes on side of mounting bar (7) and holes on side of canopy (11), then secure with Allen screw (9).
- 5. Put glass shade (16) around socket inside lamp body (15), and secure with socket ring (17)

INSTALLATION IS NOW COMPLETED

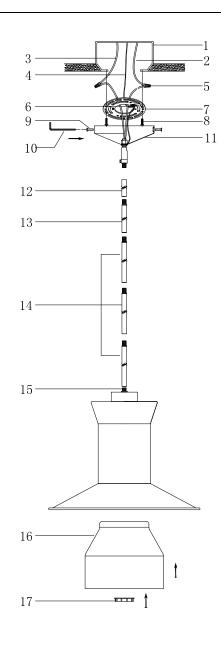

- 1. OUTLET BOX
- 2. WHITE WIRE
- 3. BLACK WIRE
- 4. GROUND WIRE
- 5. WIRE CONNECTOR
- 6. GROUND SCREW
- 7. MOUNTNG BAR
- 8. BOX SCREW
- 9. ALLEN SCREW
- 10. ALLEN WRENCH
- 11. CANOPY
- 12. STEM
- 13. STEM
- 14. STEM
- 15. LAMP BODY
- 16. GLASS SHADE
- 17. SOCKET RING