

1500 Cherokee Parkway, Suite 100, Acworth, GA 30102

Phone: (866) 845-5451 • Fax: (866) 816-6165

E: service@acclaim-lighting.com • www.acclaim-lighting.com

# IN41043 INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

#### **CAUTION**

WARNING: Risk of Fire. Consult a qualified electrician to ensure correct branch circuit conductor. Min 90°C supply conductors.

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

### **GENERAL**


All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

## ASSEMBLY AND INSTALLATION

- 1. Secure the mounting bar (7) with box screws (8) to the outlet box (1).
- 2. Pull out the outlet wire and ground wire from the outlet box (1). Make wire connections
- --Ribbed wire (w/o marking) from light to White wire (2) from power source.
- --Smooth wire (w/o marking) from light to Black wire (3) from power source.
- --Loop the ground wire (4) to mounting bar (7) with a green screw (6).
- 3. Align holes on the side of backplate to holes on the side of mounting bar (7), then secure with Allen screw (10).
- 4. Put candle sleeve (13) onto socket (12), then put crystal bobeche (14) through candle sleeve (13)
- 5. Set fabric shade (15) on top of candle sleeve (13)

#### INSTALLATION IS NOW COMPLETE

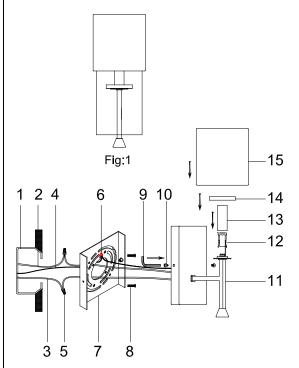

- 1. OUTLET BOX
- 2. WHITE WIRE
- 3. BLACK WIRE
- 4. GROUND WIRE
- 5. WIRE CONNECTOR
- 6. GREEN SCREW
- 7. MOUNTING BAR
- 8. BOX SCREW
- 9. ALLEN WRENCH
- 10. ALLEN SCREW
- 11. LAMP BODY
- 12. SOCKET
- 13. CANDLE SLEEVES
- 14. CRYSTAL BOBECHE
- 15. FABRIC SHADE