

ASSEMBLY AND INSTALLATION INSTRUCTION


For Low Voltage Three Light W/Aircraft Cord

WARNING : Before starting installation, turn off power by removing fuses or turning off circuit breakers. turning off the power by using the light switch is not sufficient to prevent electrical shock. If you feel you do not have electrical experiences needed, the fixture installed by a qualified licensed electrician.


CAUTION : This is just an installation "guide ". Pls check with your local certified electrician for proper installation per your city code. We can not be held liable for the use or misuse of the installation guide provided.

Preparation for wiring :

1. Thread cable of each light into fitting and canopy. Measure the desired length of A and then thread strain relief like the picture shows. Adjust the strain relief to B and leave additional length of 6" from B to C and cut off the unnecessary cord.

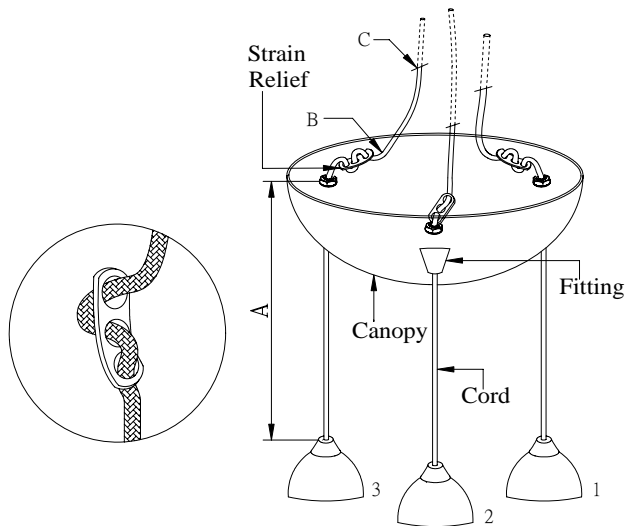

2. Within the length of 1-1/2" A on the cord near the end, mark B (See Fig 1), heat the sleeves of cord (if sleeves is available) for a while and use knife slightly cut the sleeves (See Fig 2)
- CAUTION : Cutting too deep may cut off the neutral woven wire and hot wire inside.**
3. Peel off the sleeves A (See Fig 2), then squeeze the neutral woven wire near the cable end about 1-1/2" position, pick a hole with a screw driver (See Fig 3) and pull the hot wire out of the hole of neutral (See Fig 4), and strip about 3/8" insulation from Hot wire by stripper . Twist the neutral wire of cord for wiring.

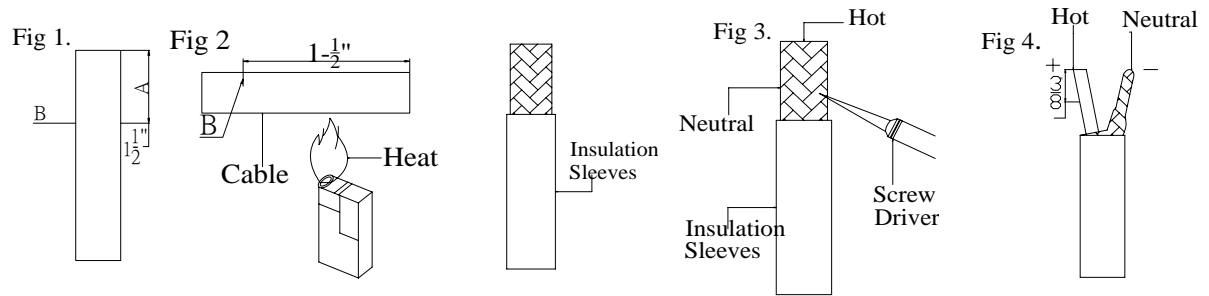

Wiring :

1. Collect Hot wires from each cord to attach BK wire provided; Neutral wires from each cord to attach WH wire provided by larger wire connectors (A) provided and rotate them until they are tight
2. Connect BK fixture wire to one of the wire from transformer ; WH fixture wire to another wire from the transformer by small wire connectors (B) and rotate them until they are tight.
3. Mount strap (C) to outlet box with 2 pcs of mounting screws (D) .
4. Hold the canopy (E) firmly and attach BK transformer wire to BK house wire; WH Transformer wire to WH house wire ; Grounding House wire and Grounding fixture wire to Grounding screw on strap
5. Tuck extra wires carefully into outlet box.
6. Push the canopy toward nipple (F) until nipple protrude the hole in the canopy, and meanwhile pull down the cords.
7. Cap and rotate the knob (G) until it is tight. Install the recommended bulb. Screw the cylinder tempered glass to protect the lamp. 8. Turn on the power.

