


# CORBETT

## FAMILY NAME 511-20 Installation Instructions

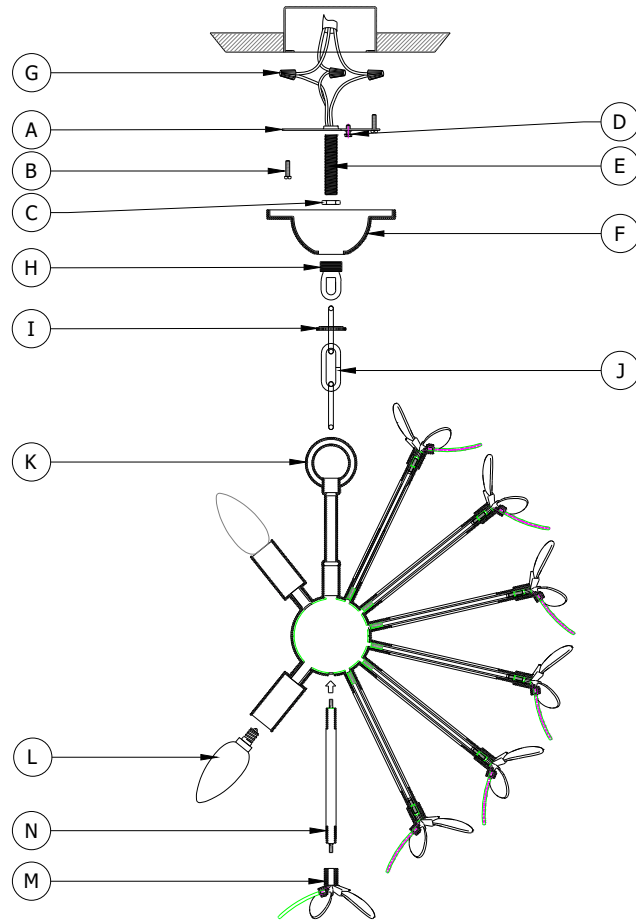

### FIXTURE INSTALLATION

1. Attach the MOUNTING PLATE (A) onto the junction box using the MOUNTING SCREWS (B). This fixture is designed to be mounted on standard round or octagon junction box. The junction box must be securely mounted to the structure of the building.
2. Remove the SCREW COLLAR (I) from the COLLAR LOOP (H). Fully thread the NIPPLE (E) onto the COLLAR LOOP (H). Thread the HEX NUT (C) onto the NIPPLE (E). Then thread the NIPPLE (E) onto the MOUNTING PLATE (A). Adjust the NIPPLE (E) so that the threads of the COLLAR LOOP (H) extends  $\frac{1}{4}$ " beyond the CANOPY (F). Secure using HEX NUT (C).
3. Insert the COLLAR LOOP (H) into the CANOPY (F) and secure using the SCREW COLLAR (I).
4. Open the CHAIN LINK (J) and attach to the FIXTURE ASSEMBLY (K) and COLLAR LOOP (H). Feed the wires through the CHAIN LINK (J), COLLAR LOOP (H), NIPPLE (E), and MOUNTING PLATE (A).
5. Remove the SCREW COLLAR (I) from the COLLAR LOOP (H) then let the SCREW COLLAR (I) and CANOPY (F) slide through the CHAIN LINK (J).
6. Cut off excess wires, and strip the insulation off the end of the leads.
7. Attach the Ground wire to the ground inside the junction box (Generally green or bare copper wire) or the GROUND SCREW (D) on the MOUNTING PLATE (A). NEVER CONNECT GROUND WIRE TO "HOT" WIRE! FAILURE TO FOLLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!
8. Connect the fixture's SPT Neutral (SPT WIRE WITH NO WRITINGS) wire lead to the neutral (Generally white) wire in the outlet box. Fasten the wires together with an approved fastener (WIRE NUT) (G). Starting 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener. MAKE SURE THERE ARE NO EXPOSED WIRE OF STRANDS THAT COULD CAUSE A DANGEROUS SHORT CIRCUIT!
9. Connect the fixture's SPT hot (SPT WITH WRITINGS) wire lead to the hot (Generally black) wire in the junction box. Fasten the joined wires same as previous step. NEVER REVERSE HOT AND NEUTRAL WIRES. FAILURE TO FOLLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!
10. Push the wires back into the junction box. Lift up the CANOPY (F) up to the ceiling, and screw the SCREW COLLAR (I) onto the COLLAR LOOP (H).
11. Screw the BULB (L) into the SOCKET of the FIXTURE ASSEMBLY (K). THIS FIXTURE IS RATED FOR **10 WATT TYPE B LAMP**. DO NOT EXCEED THE RECOMMENDED WATTAGE!
12. Install the STEM (N) unto the FIXTURE ASSEMBLY (K) then attach the PETALS (M) unto the STEM (N).
13. Restore power to the outlet at the breaker or fuse box.

PART(S)	REPLACEMENT PART NAME	NUMBER
A,B,C,D,E,G	HARDWARE KIT	HDW-511-20
F	CANOPY	CPY-511-20
H,I	SCREW COLLAR LOOP	SCL-511-20
J	CHAIN	CHN-511-20
M	PETALS	DEC-511-04
N	STEM	STM-511-20