
CORBETT

ANATASE 518-02 Installation Instructions

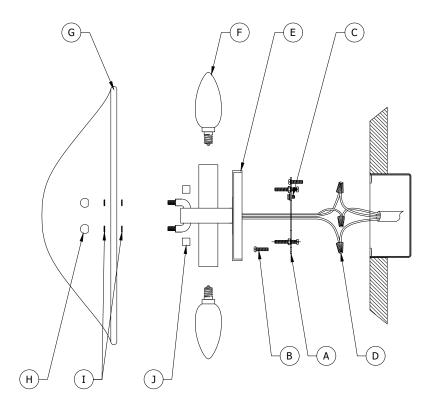

PART(S)	REPLACEMENT PART NAME	NUMBER
A,B,C,D	HARDWARE KIT	HDW-01
J	BARREL NUTS	NUT-518-02-A
G	GLASS	GLS-518-02
Н	BALL NUT	NUT-518-02-B

FIXTURE INSTALLATION

- Attach the MOUNTING PLATE (A) onto the junction box using the MOUNTING SCREWS (B). This
 fixture is designed to be mounted on standard round or octagon junction box. The junction box must
 be securely mounted to the structure of the building.
- Attach the Ground wire (Green) to the ground inside the outlet box (Generally green or bar copper wire) or the GROUND SCREW (C) on the MOUNTING PLATE (A). NEVER CONNECT GROUND WIRE TO "HOT" WIRE! FAILURE TO FOLLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!
- 3. Connect the white fixture lead to the neutral (Generally white) wire in the outlet box. Fasten the wires together with an approved fastener (WIRE NUT) (D). Starting 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener. MAKE SURE THERE ARE NO EXPOSED WIRE OF STRANDS THAT COULD CAUSE A DANGEROUS SHORT CIRCUIT!
- Connect the black fixture leads to the hot (Generally black) wire in the junction box. Fasten the joined wires same as previous step. NEVER REVERSE HOT AND NEUTRAL WIRES. FAILURE TO FOLLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!
- Attach the FIXTURE ASSEMBLY (E) to the MOUNTING PLATE (A) and secure with the BARREL NUTS (J).
- 8. Attach the GLASS (G) into the FIXTURE ASSEMBLY (E) and secure using BALL NUTS (H) along with SILICON WASHER (I).
- Screw the BULB (F) into the SOCKET of the fixture. THIS FIXTURE IS RATED FOR 10 WATT TYPE B LAMP. DO NOT EXCEED THE RECOMMENDED WATTAGE!
- 10. Restore power to the outlet at the breaker or fuse box.