


CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS



Crystorama.com

ASSEMBLY INSTRUCTION MODEL ADD-303-AG-SM

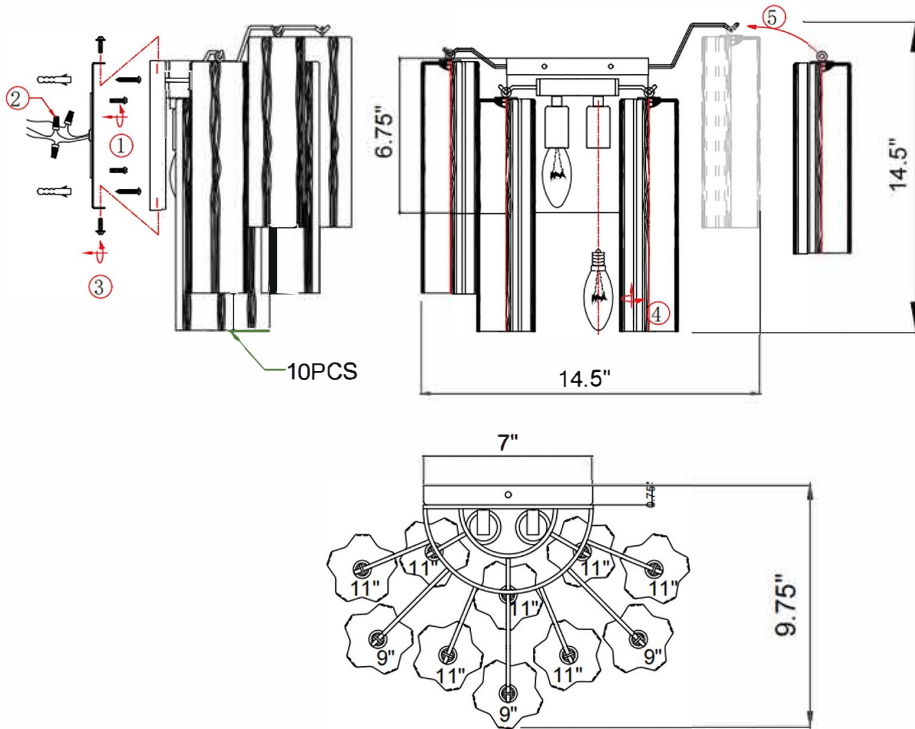

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 2 Candelabra Base Bulb
40 Watts Recommended 60 Watts Max.
USE LED BULBS FOR EXTENDED USE
(This fixture is Damp rated)

How to Install

1. Place the mounting plate over the outlet box and mark the two points on the wall surface at the same distance as between the holes on the mounting plate
2. Drill the holes at the marked points. Insert plastic wall anchors into the hole. Place the mounting plate over the outlet box and secure with the anchor screws.
3. Place the backplate over the mounting plate and secure with the screws.
4. Screw recommended bulb into socket.
5. Starting from the bottom of the frame. Dress the glass as illustrated.

Glass Sets

1. 3pcs Smoke glass 3.25 x9"
2. 7pcs Smoke glass 3.25x11"

 **WARNING:** This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

PART NUMBER MODEL ADD-303-AG-SM

Part Number

Part Numbers

- A. (1)-Mounting hardware:
 (1)-Mounting Plate
 (2)-Machine screws
 (3)-Wire nuts
 (4)-Plastic wall anchor/screws
- B. (1)-Backplate, W7"H6.75"D0.75"
 (XBN302AGBKP7IN)
- C. (2)-Screws
- D. (1)-Frame
- E. (3)-Smoke Glass D3.25"H9"
 (XBN303AGSMGLA9IN)
 (7)-Smoke Glass D3.25"H11"
 (XBN303AGSMGLA11IN)

