




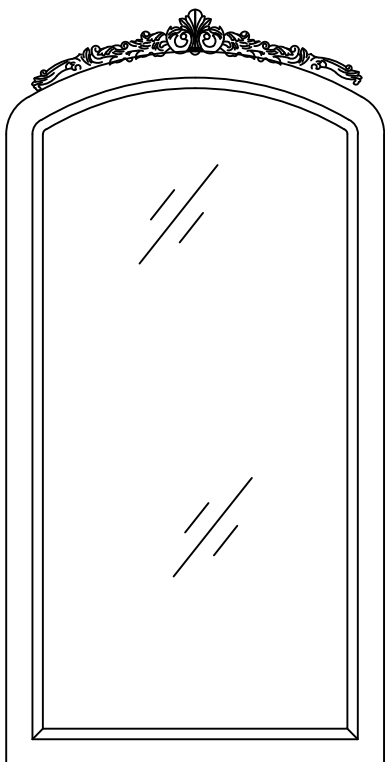

ASSEMBLY INSTRUCTION MODEL# ARN-M700-BB

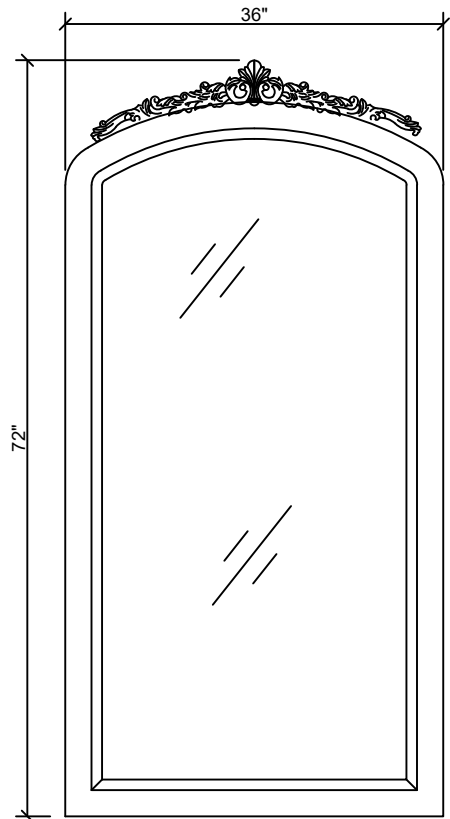

FRONT VIEW

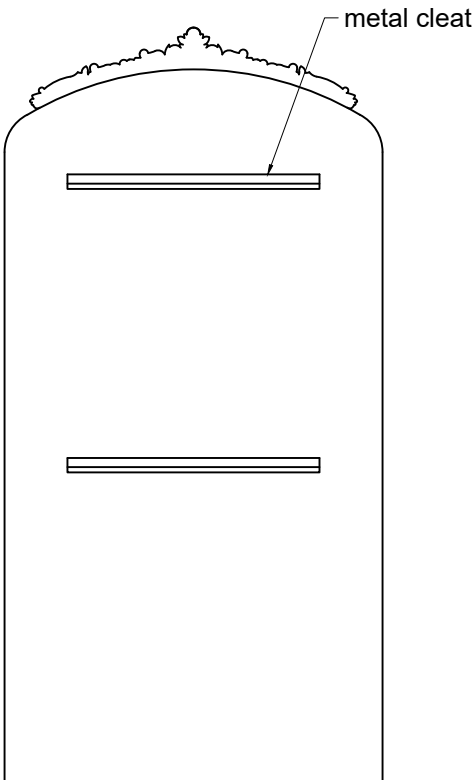

BACK VIEW

 **WARNING:** This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)



## INSTALLATION INSTRUCTIONS

### ITEMS INCLUDED

Anchor(A):  Ø7.5[mm]x36[mm]x6 Wall cleat:







x2

Screws(B):  Ø4[mm]x40[mm]x6

### NECESSARY TOOLS (NOT INCLUDED)

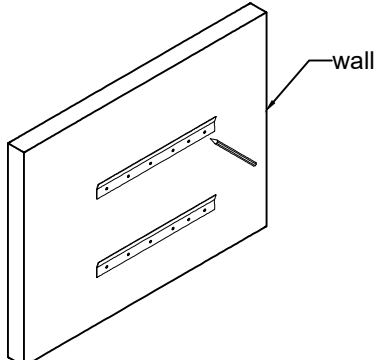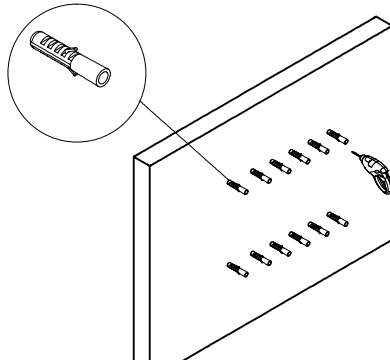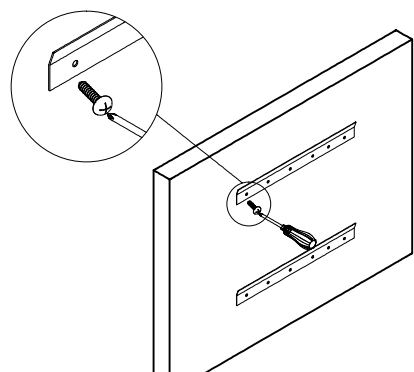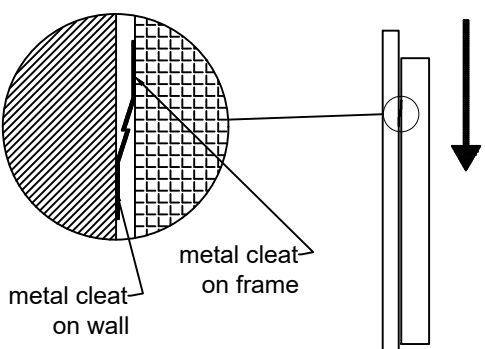

|                                                                                     |                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <p><b>Step 1</b></p> <p>Place one of the metal cleats at the desired wall location and mark the points at the center of the hole on the metal cleat using the pencil. Place the second metal cleat at the same spacing as between the two cleats on the back of the mirror and mark the points at the center of the hole on the metal cleat.</p> |
|   | <p><b>Step 2</b></p> <p>Drill the holes at the marked points and insert the anchors into the hole.</p>                                                                                                                                                                                                                                           |
|  | <p><b>Step 3</b></p> <p>Mount the metal cleat onto the wall surface using the screws supplied. Make sure that the metal cleat is straight using a level.</p>                                                                                                                                                                                     |
|  | <p><b>Step 4</b></p> <p>Carefully lift from the mirror frame sides and hang onto the metal cleat</p>                                                                                                                                                                                                                                             |