




CRYSTORAMA LIGHTING

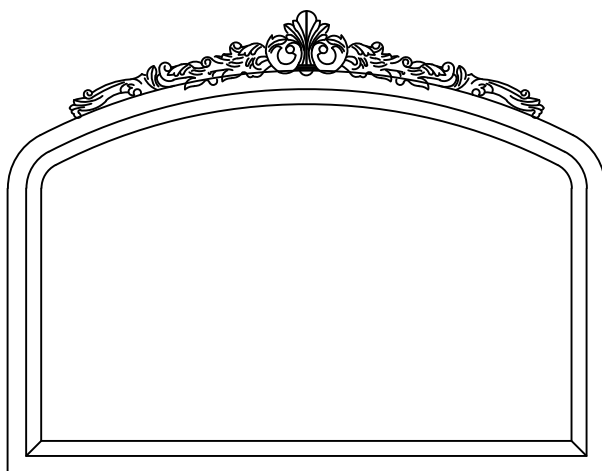

ASSEMBLY INSTRUCTION MODEL# ARN-M701-BB

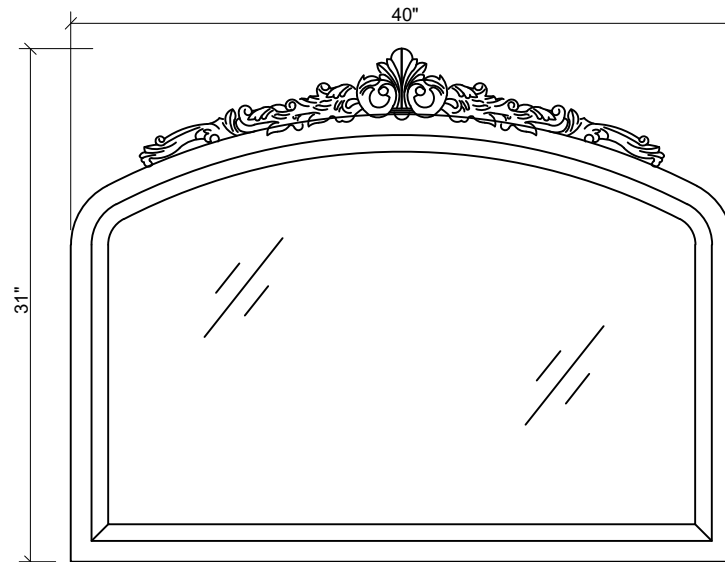

FRONT VIEW

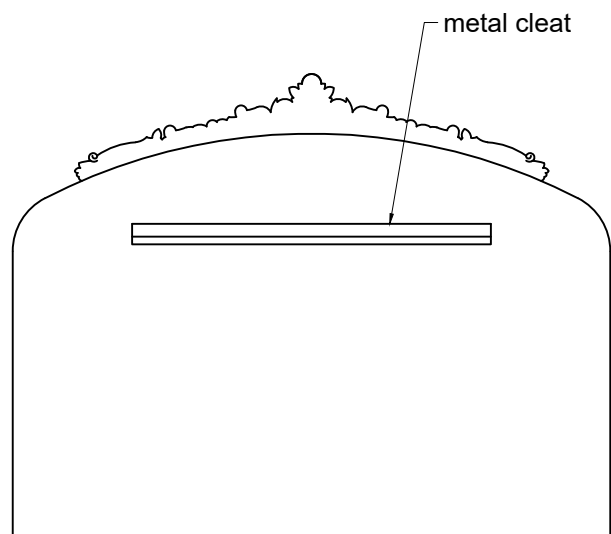

BACK VIEW

INSTALLATION INSTRUCTIONS





ITEMS INCLUDED

Anchor(A):  Ø7.5[mm]x36[mm]x6 Wall cleat:  x1

Screws(B):  Ø4[mm]x40[mm]x6

NECESSARY TOOLS (NOT INCLUDED)

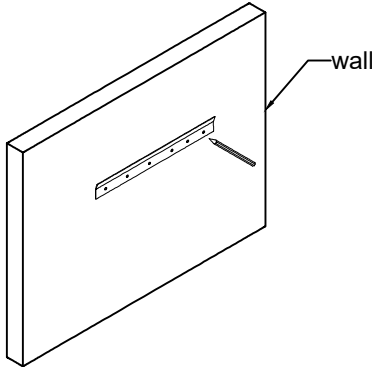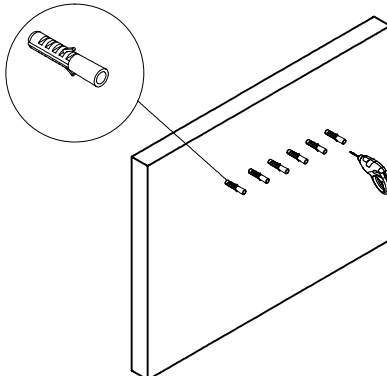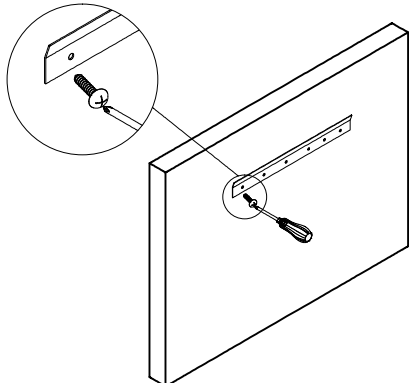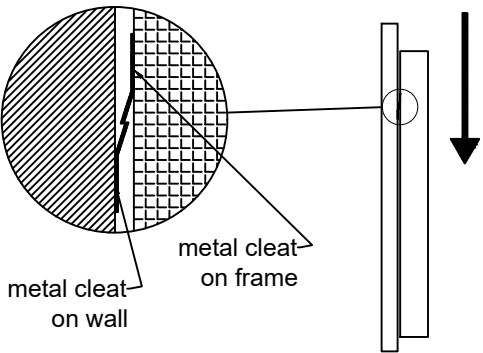

	Step 1 Place the metal cleat at the desired wall location and mark six points at the center of the hole on the metal cleat using the pencil.
	Step 2 Drill the holes at the marked points and insert the anchors into the hole.
	Step 3 Mount the metal cleat onto the wall surface using the screws supplied. Make sure that the metal cleat is straight using a level.
	Step 4 Carefully lift from the mirror frame sides and hang onto the metal cleat