


CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS




Crystorama.com


ASSEMBLY INSTRUCTION MODEL# BRH-M546-GA

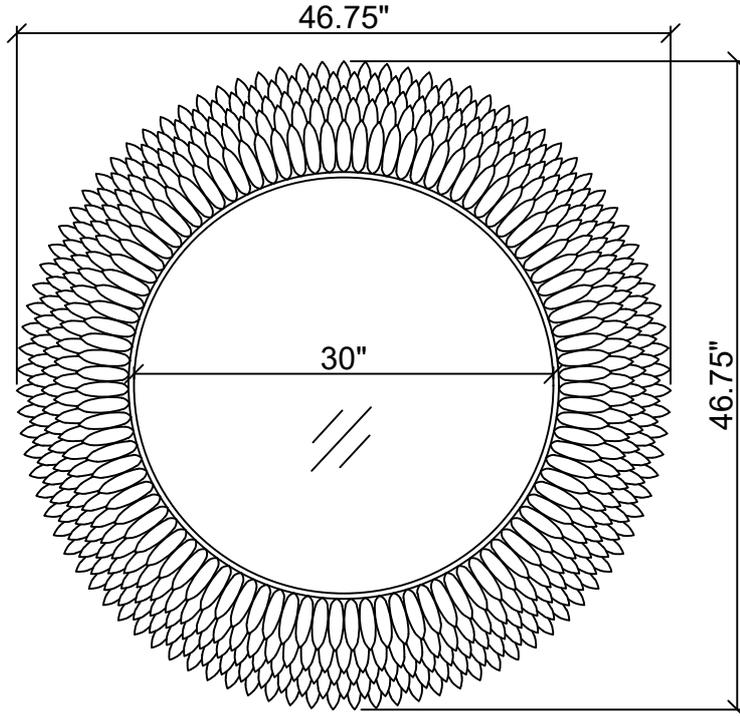

1. Place the glass suction cup firmly against the surface of the mirror and make sure it is fully attached.
2. Gently pull on the suction cup to confirm that it is securely fastened to the mirror.
3. Grasp the handles of the suction cups with both hands and lift it simultaneously.

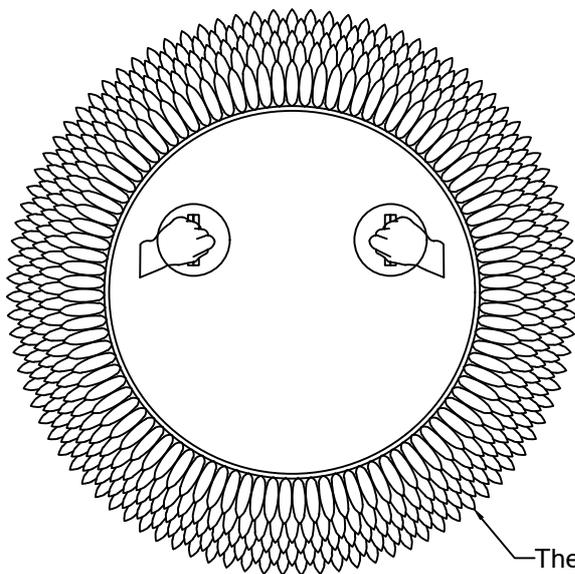

FRONT VIEW

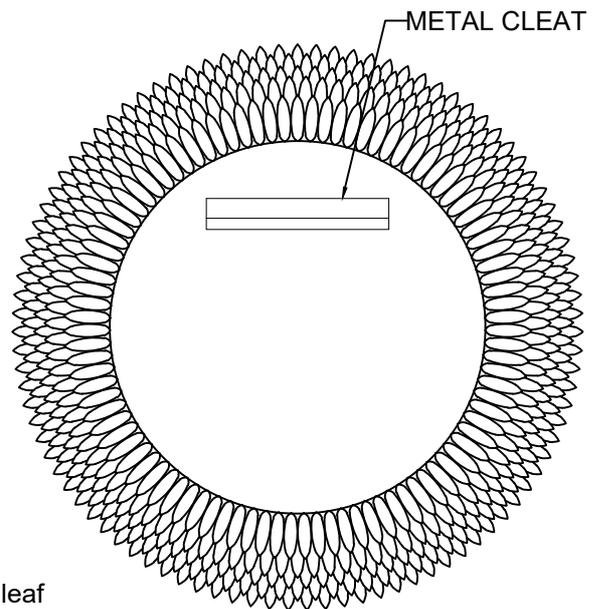

BACK VIEW





INSTALLATION INSTRUCTIONS

ITEMS INCLUDED

Anchor(A):  $\text{Ø}7.5[\text{mm}]\times 36[\text{mm}]\times 4$ Wall cleat:  x1
Screws(B):  $\text{Ø}4[\text{mm}]\times 40[\text{mm}]\times 4$

NECESSARY TOOLS (NOT INCLUDED)

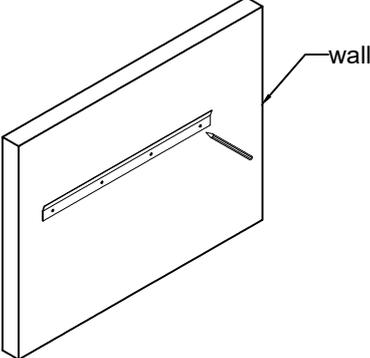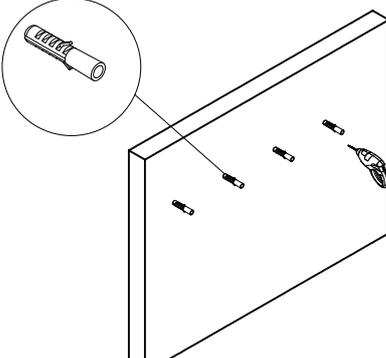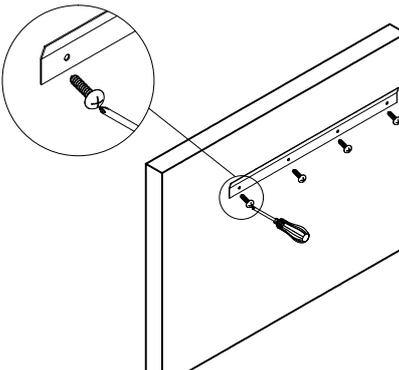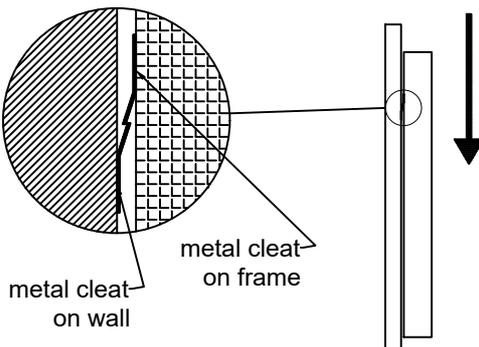

	<p>Step 1</p> <p>Place the metal cleat at the desired wall location and mark three points at the center of the hole on the metal cleat using the pencil.</p>
	<p>Step 2</p> <p>Drill the holes at the marked points and insert the anchors into the hole.</p>
	<p>Step 3</p> <p>Mount the metal cleat onto the wall surface using the screws supplied. Make sure that the metal cleat is straight using a level.</p>
	<p>Step 4</p> <p>Align the mirror with the metal cleat mounted on the wall and carefully push it into place to secure it.</p>