

CRYSTORAMA


LIGHTING THE WAY FOR SIXTY YEARS



ASSEMBLY INSTRUCTION MODEL #CAL-2400-PN




All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 3 - Med.Bulb
40 Watts Recommended 60 Watts Max
USE LED BULBS FOR EXTENDED USE

THIS FIXTURE IS DRY RATED

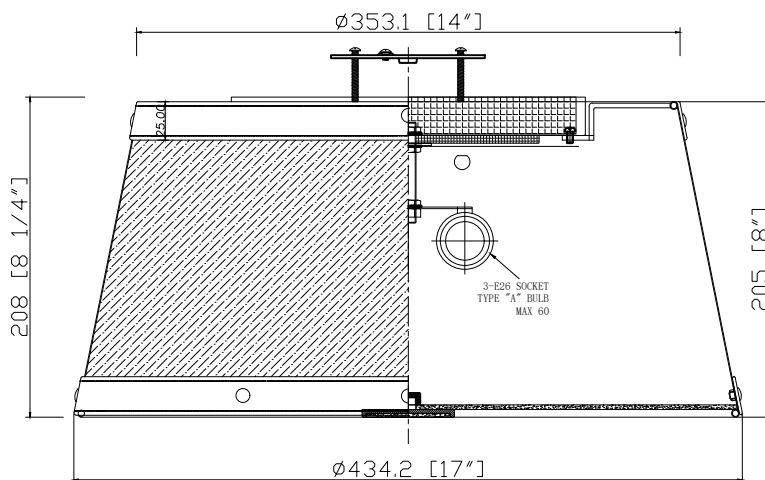

How to Install

1. Install the mounting bracket onto the outlet box.
2. Place the ceiling pan over the mounting bracket and secure with the two ball nuts.
3. Install the bulb(not included) into the socket.
4. Raise the shade up to the ceiling allowing the screw heads on the top of the shade to protrude through the key hole on the ceiling pan.Rotate the shade clockwise to secure it onto the ceiling pan.

How to replace the bulb:

Rotate the shade counter-clockwise to take the shade off to change the bulb.



WARNING: This product can expose you to Lead, which is known to the State of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS



ASSEMBLY INSTRUCTION MODEL #CAL-2400-PN

Part Number

Part Numbers

- A. (1)-Mounting hardware
- B. (1)-Ceiling pan
(XAR2400PNCAN8.25IN)
- C. (2)-Ball nut
- D. (3)- Socket
- E. (1)-Fabric shade
(XAR2400PNSHA17IN)
- F. (1)- Acrylic diffuser
(XAR2400DIF16.75IN)
- G. (1)-Bottom Cap
(XAR2400PNFINIAL)

