



CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS



Crystorama.com

ASSEMBLY INSTRUCTION MODEL# CEC-M770-GA

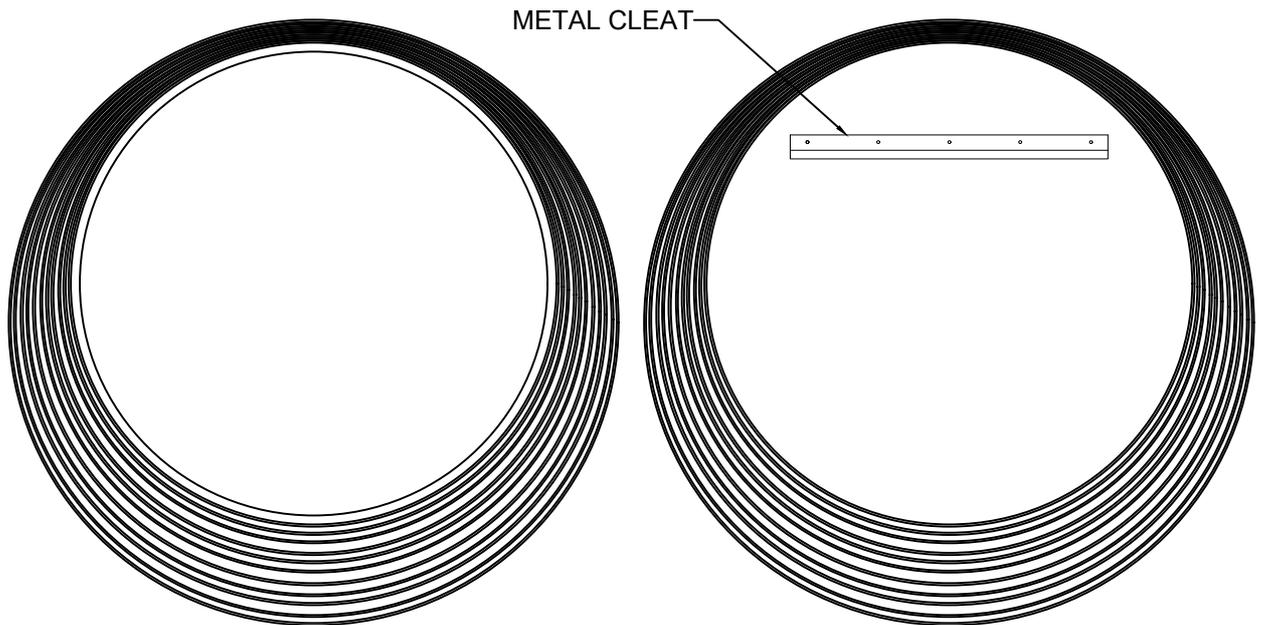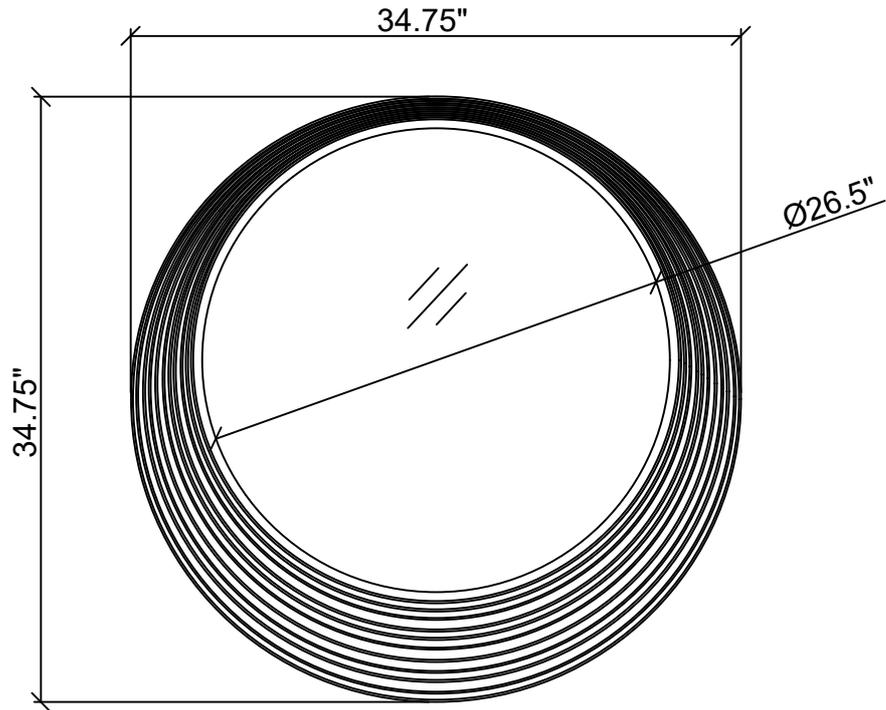

FRONT VIEW

BACK VIEW







INSTALLATION INSTRUCTIONS

ITEMS INCLUDED

Anchor(A):  $\text{Ø}7.5[\text{mm}] \times 36[\text{mm}] \times 5$ Wall cleat:  x1
Screws(B):  $\text{Ø}4[\text{mm}] \times 40[\text{mm}] \times 5$

NECESSARY TOOLS (NOT INCLUDED)

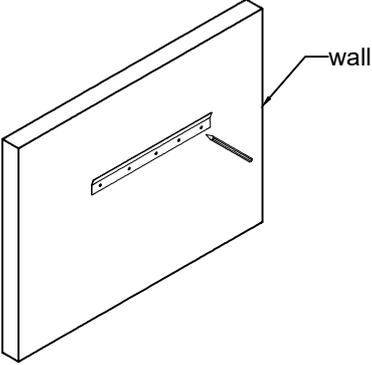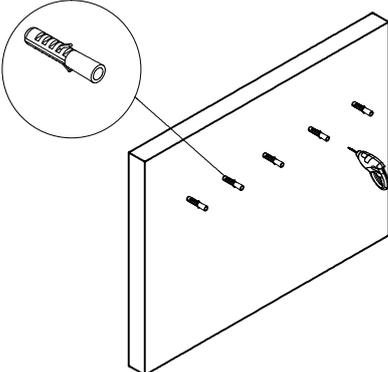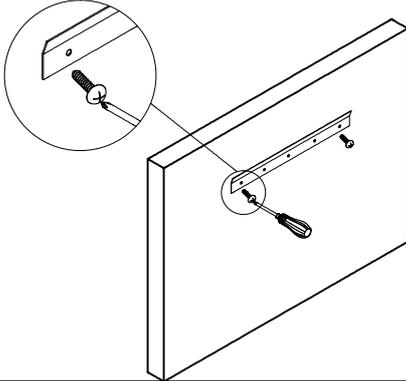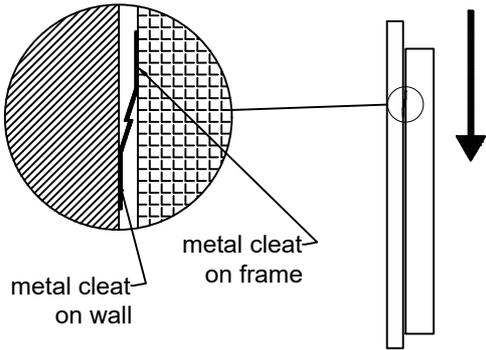

	<p>Step 1</p> <p>Place the metal cleat at the desired wall location and mark five points at the center of the hole on the metal cleat using the pencil.</p>
	<p>Step 2</p> <p>Drill the holes at the marked points and insert the anchors into the hole.</p>
	<p>Step 3</p> <p>Mount the metal cleat onto the wall surface using the screws supplied. Make sure that the metal cleat is straight using a level.</p>
	<p>Step 4</p> <p>Carefully lift from the mirror frame sides and hang onto the metal cleat.</p>