




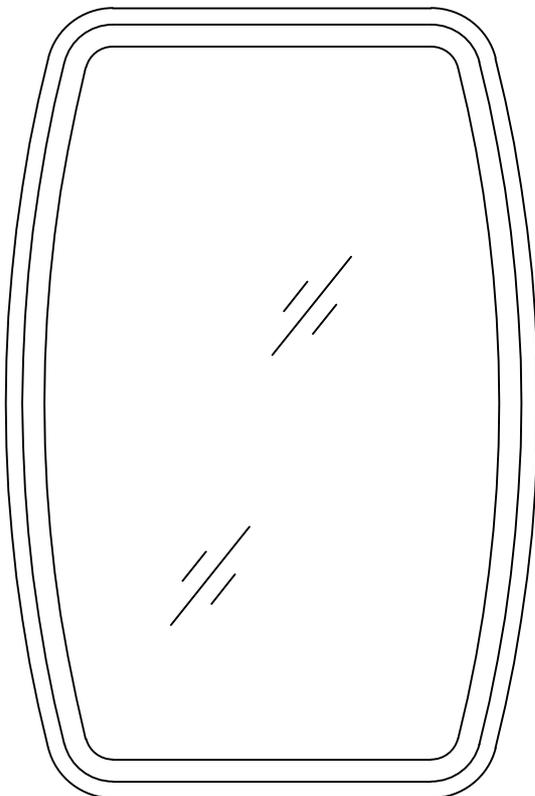

## ASSEMBLY INSTRUCTION MODEL# LIN-M400-WD

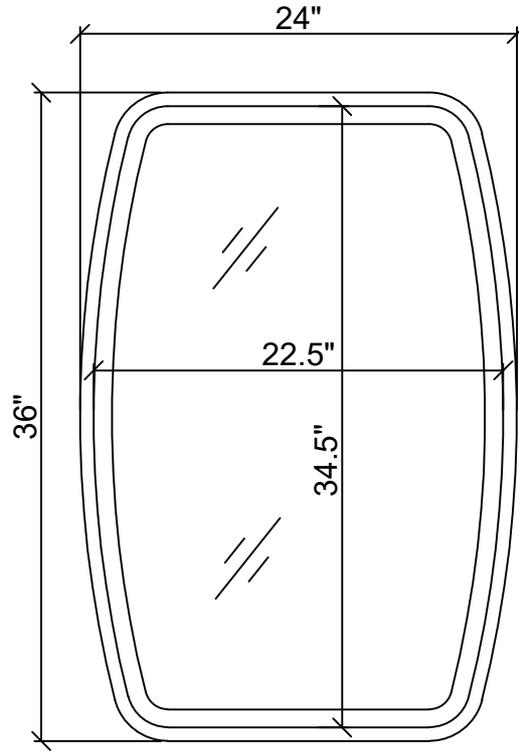

FRONT VIEW

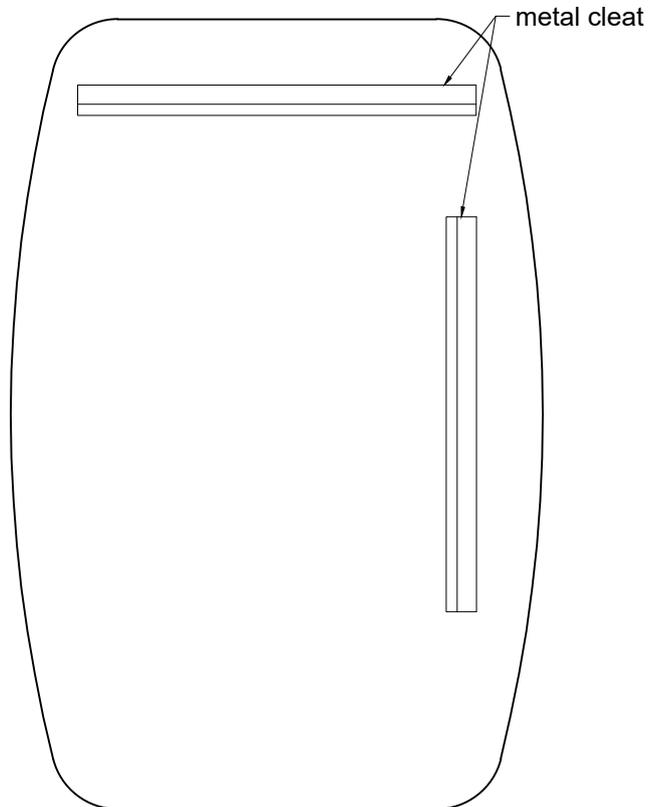

BACK VIEW







## INSTALLATION INSTRUCTIONS

### ITEMS INCLUDED

Anchor(A):   $\varnothing 7.5[\text{mm}] \times 36[\text{mm}] \times 3$  Wall cleat:  x1  
Screws(B):   $\varnothing 4[\text{mm}] \times 40[\text{mm}] \times 3$

### NECESSARY TOOLS (NOT INCLUDED)

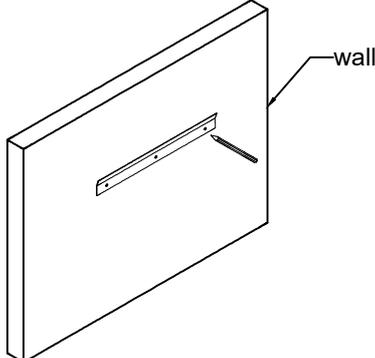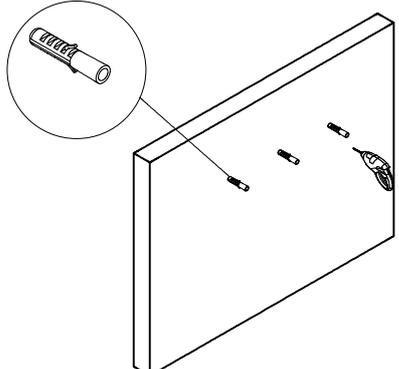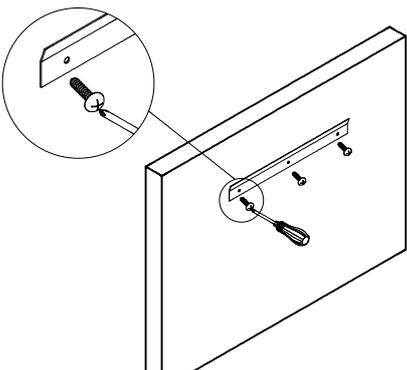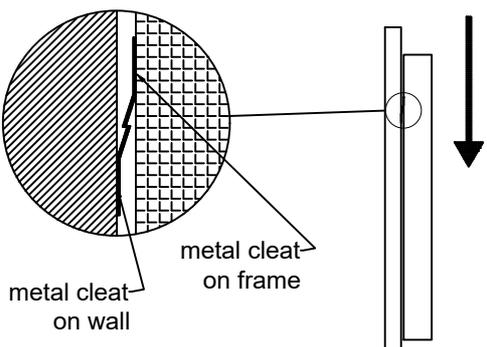

	<p><b>Step 1</b></p> <p>Place the metal cleat at the desired wall location and mark three points at the center of the hole on the metal cleat using the pencil.</p>
	<p><b>Step 2</b></p> <p>Drill the holes at the marked points and insert the anchors into the hole.</p>
	<p><b>Step 3</b></p> <p>Mount the metal cleat onto the wall surface using the screws supplied. Make sure that the metal cleat is straight using a level.</p>
	<p><b>Step 4</b></p> <p>Carefully lift from the mirror frame sides and hang onto the metal cleat.</p>