


CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS





ASSEMBLY INSTRUCTION MODEL# LIN-M428-MK

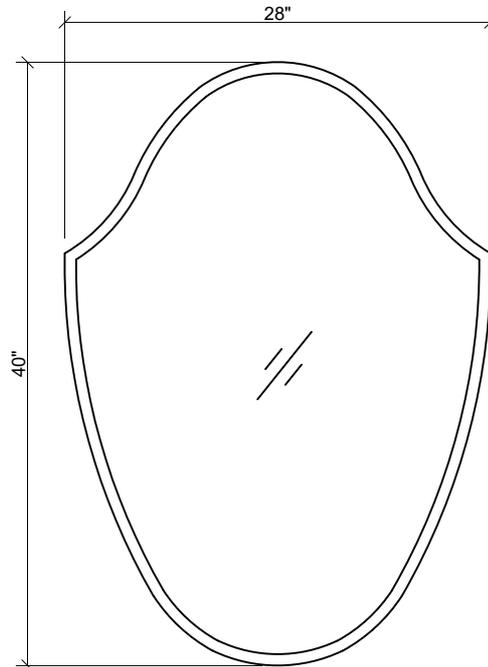


Option 1

Option 2

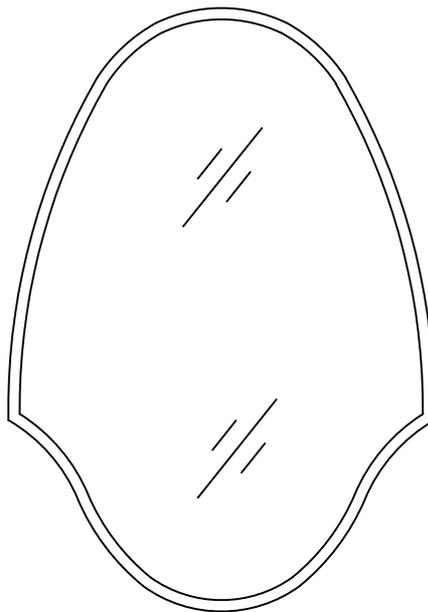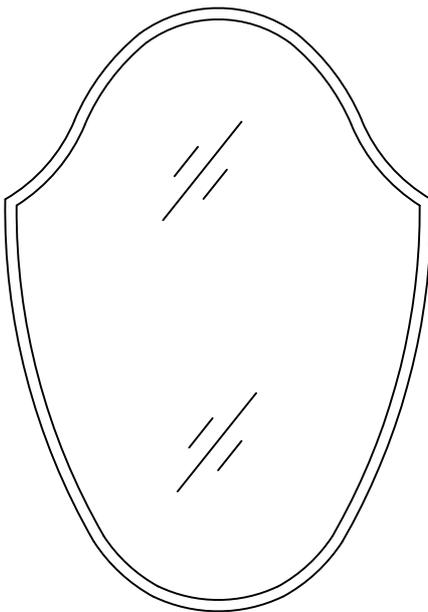

This mirror can be installed in reverse.

FRONT VIEW

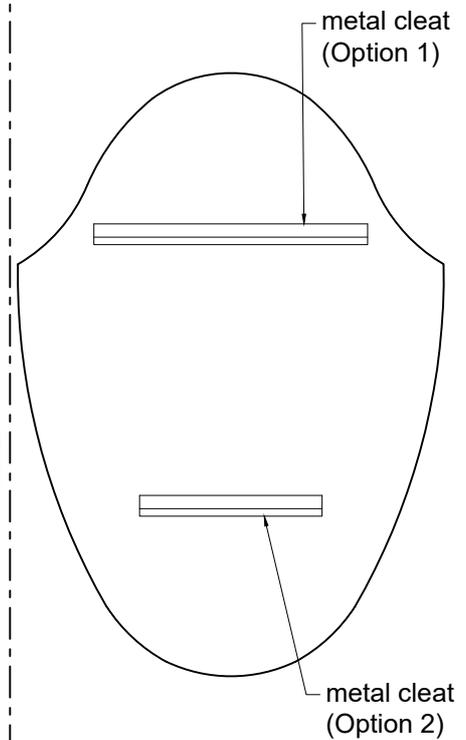

BACK VIEW







INSTALLATION INSTRUCTIONS

ITEMS INCLUDED

Anchor(A):  Ø7.5[mm]x36[mm]x5 Wall cleat:  x1
Screws(B):  Ø4[mm]x40[mm]x5

NECESSARY TOOLS (NOT INCLUDED)

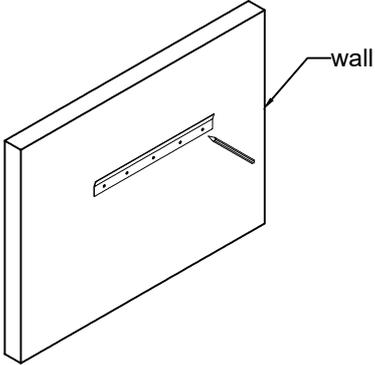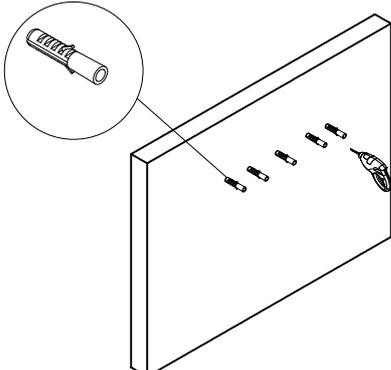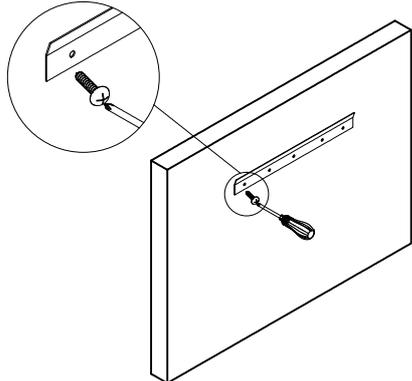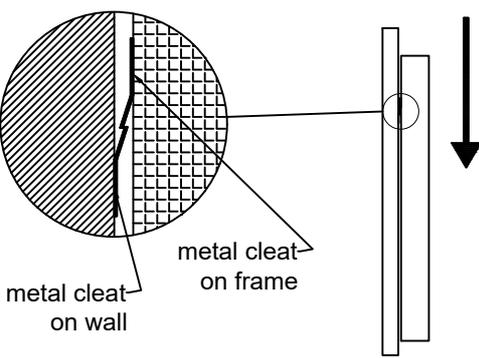

	<p>Step 1</p> <p>Place one metal cleat at the desired wall location and mark five points at the center of the hole on the metal cleat using the pencil.</p>
	<p>Step 2</p> <p>Drill the holes at the marked points and insert the anchors into the hole.</p>
	<p>Step 3</p> <p>Mount the metal cleat onto the wall surface using the screws supplied. Make sure that the metal cleat is straight using a level.</p>
	<p>Step 4</p> <p>Carefully lift from the mirror frame sides and hang onto the metal cleat</p>