


CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS





ASSEMBLY INSTRUCTION MODEL# LIN-M428-WD

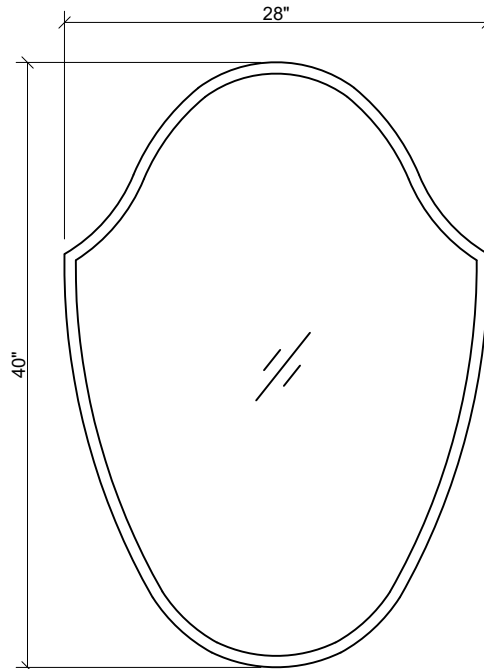


Option 1

Option 2

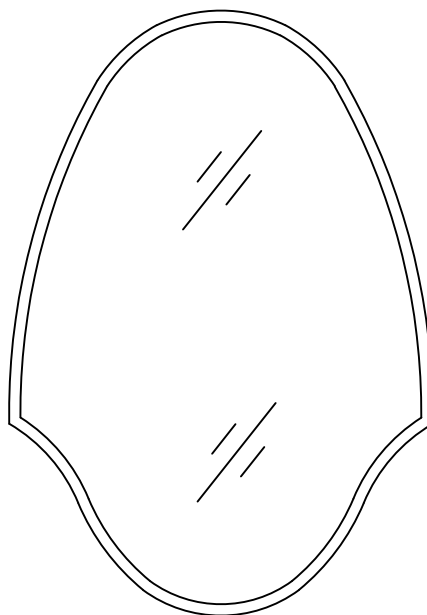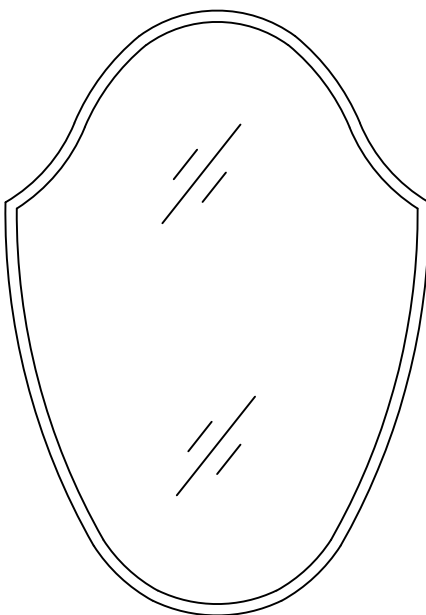

metal cleat
(Option 1)

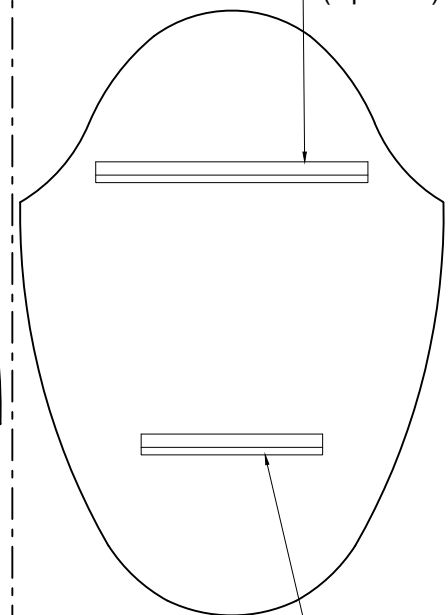

metal cleat
(Option 2)

This mirror can be installed in reverse.

FRONT VIEW

BACK VIEW

INSTALLATION INSTRUCTIONS

ITEMS INCLUDED





Anchor(A):  Ø7.5[mm]x36[mm]x5 Wall cleat:



Screws(B):  Ø4[mm]x40[mm]x5

NECESSARY TOOLS (NOT INCLUDED)

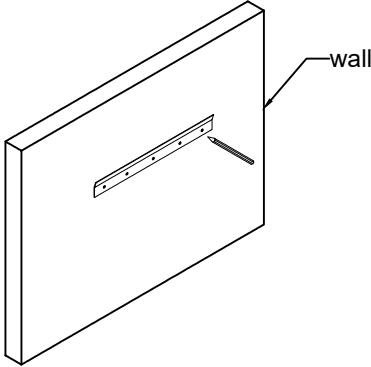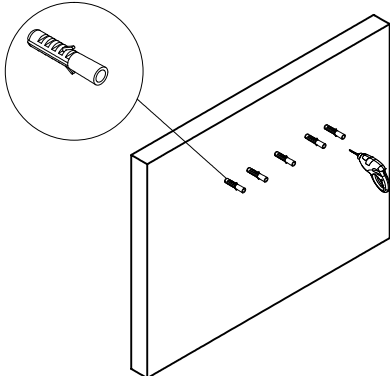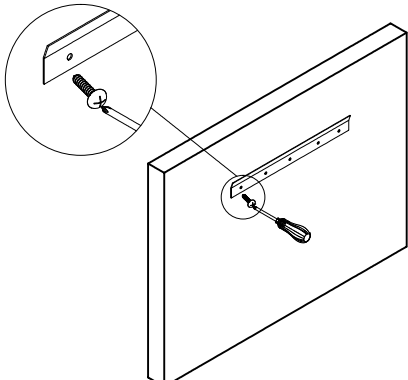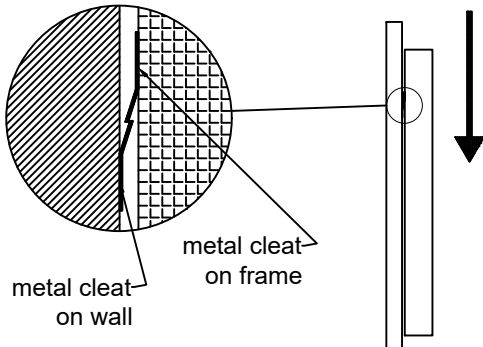

	Step 1 Place one metal cleat at the desired wall location and mark five points at the center of the hole on the metal cleat using the pencil.
	Step 2 Drill the holes at the marked points and insert the anchors into the hole.
	Step 3 Mount the metal cleat onto the wall surface using the screws supplied. Make sure that the metal cleat is straight using a level.
	Step 4 Carefully lift from the mirror frame sides and hang onto the metal cleat