


CRYST RAMA

LIGHTNING THE WAY FOR SIXTY YEARS



Crystorama.com


ASSEMBLY INSTRUCTION MODEL# MSL-M030-GA

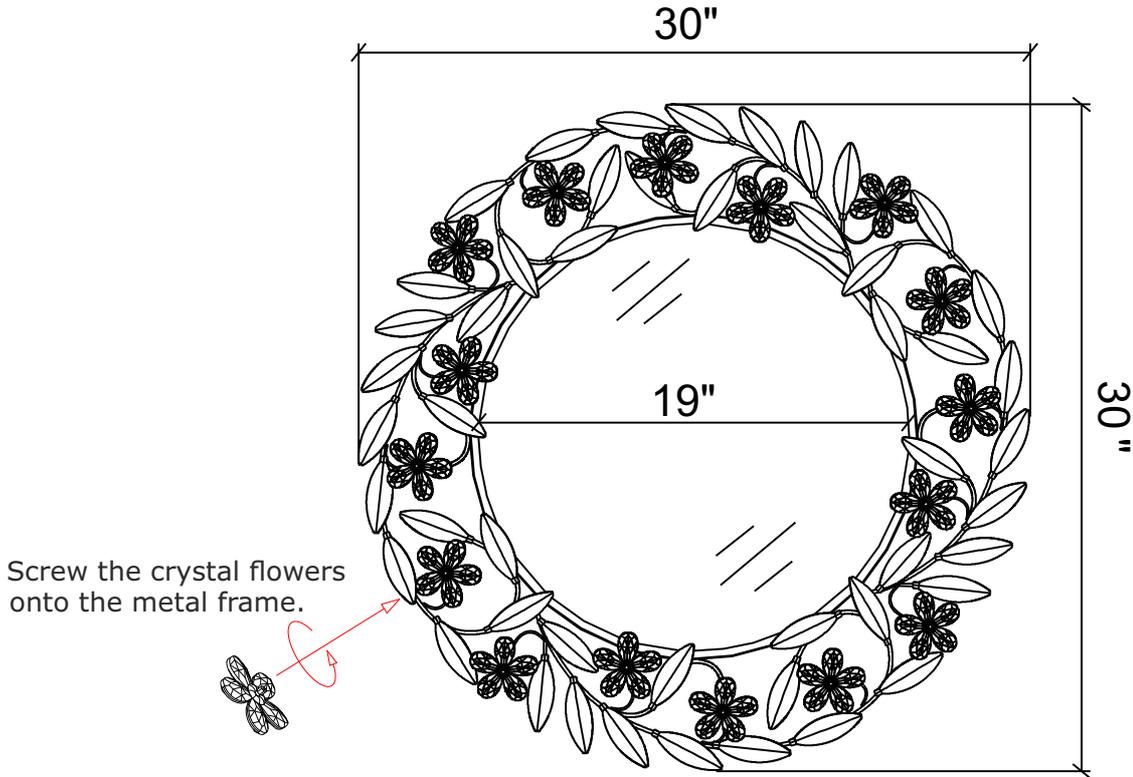

CRYSTAL SETS: CRYSTAL A= 3" 16PCS



When removing the mirror from the box, please lift it gently by holding the outermost metal wire only.

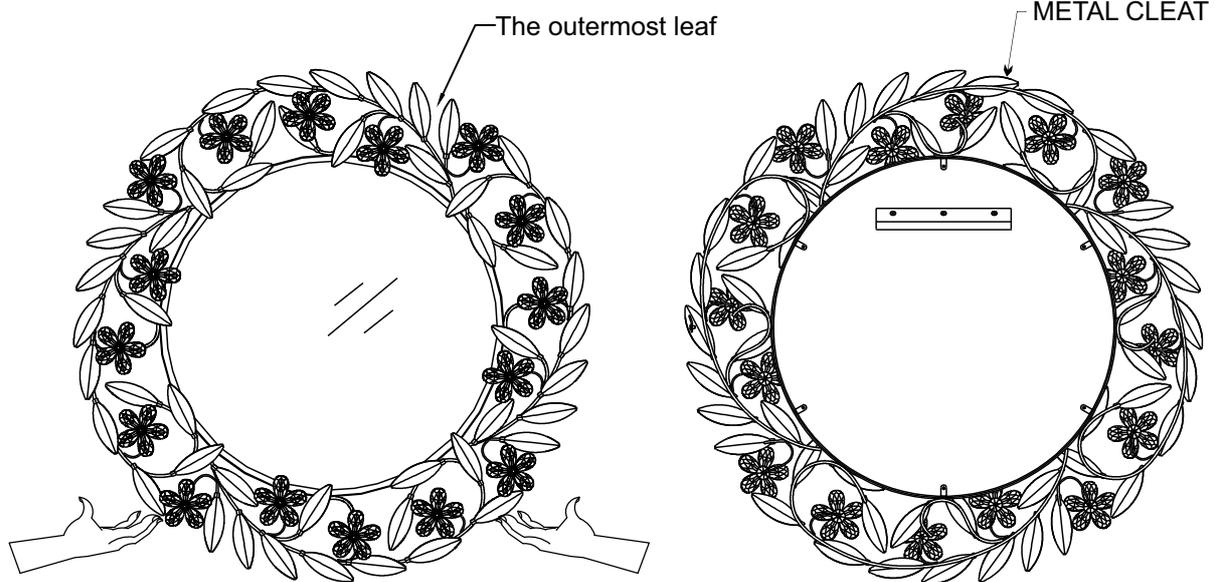

 **WARNING:** This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov








INSTALLATION INSTRUCTIONS

ITEMS INCLUDED

Anchor(A):  $\varnothing 7.5[\text{mm}] \times 38[\text{mm}] \times 3$ Wall cleat:  x1
Screws(B):  $\varnothing 4[\text{mm}] \times 40[\text{mm}] \times 3$

NECESSARY TOOLS (NOT INCLUDED)

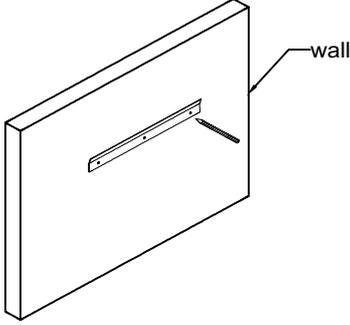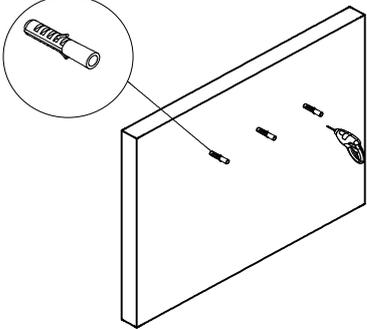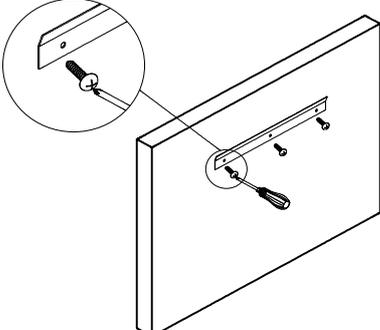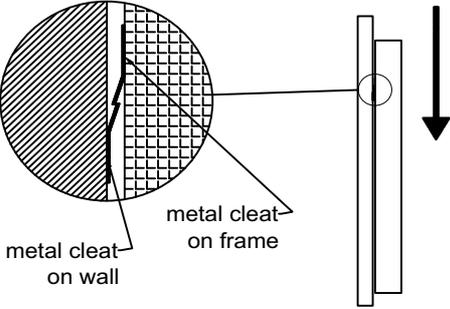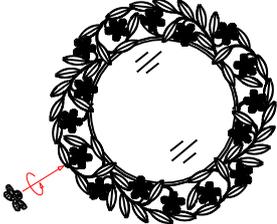

	<p>Step 1</p> <p>Place the metal cleat at the desired wall location and mark three points at the center of the hole on the metal cleat using the pencil.</p>
	<p>Step 2</p> <p>Drill the holes at the marked points and insert the anchors into the hole.</p>
	<p>Step 3</p> <p>Mount the metal cleat onto the wall surface using the screws supplied. Make sure that the metal cleat is straight using a level.</p>
	<p>Step 4</p> <p>Gently hold the outermost metal wire of the mirror and hang it onto the metal cleat.</p>
	<p>Step 5</p> <p>Screw the crystal flowers onto the metal frame.</p>