For Style 1131P28-3 Assembly Instruction Sheet #IS- 1131P28-3


ools Required: Fathead soverdriver, Phillips screwdriver, pliess, wire culters, wire shippers, electrical tape, safety glasses.

ght Beares: (3) 1807 LED 120W DIMANBLE (400014)
Rishaled Assembly Time: 10-20 minutes
spansion: Identity and impact at parts below beginning installation. Check package content list and diagrams below to be sure all parts are
sent. If any parts are missing or damaged, do not allempt to assemble, Install, or operate the titure. Contact customer service for episcement.

Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consuit a licensed electricisn if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the ficture. We strongly recommend that a licensed, professional electricism perform the installation.

Disconnect fixture from power source before replacing bufbs. Make sure bufbs are given sufficient time to cool before removal

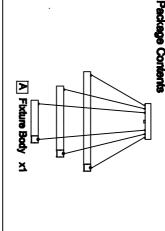

with the head of the Green Secure it with Outet Box Screwe (not included). Quite libra metrig Supply Wires with

A. Fit the ceiling canopy to Mounting Screws (DD) and with Screws (AA). Note: The ceiling canopy should STEP 3 — Fit Ceiling Canopy to Crossber Assembly Once the ceiling canopy is secure, remove the Screw (AA) and ceiling canopy Crossber (EE) until the correct length is achieved. to snug against the ceiling and the Screws (AA).
If not, adjust the length of the nd Lock Weether and necrowing the Hex Nut founting Screws (DD) by crews (DD) in or out of the en screwing Mounting H ling Campp

and Hex Nuts to Crossbar. A. Line up a set of holes on the

Name of the second seco

X M

(EE) and Hotes

in the centring Cartopy.
Tread Mounting Screws (DD)
to the holes on the ber (EE). Pees Lock ers and thread Hex

<u>`</u>

and proceed to Step 4.

Figure 3

Figure 4

Figure 5

lute onto the Mounting

Figure 1

#88

Outlet Box Screw Į

Hardware Contents


DESCRIPTION

QUANTITY

A. Pass the supply wires through the Crossbar (EE) Attach the Crossbar (EE) to the Outet Box (OC) STEP 2 - Attach Crossber to Outlet Box. **Outlet Box Screws Ground Wire** Figure 2 en Ground Screw facing you Outlet Box m

Bare, or Green Ground wire from outlet box from outlet ba lens, or Green Ground wire on the Crossbar Green Ground Screw Ground wire from fixture from fluture Ground wire

A. Use standard wire connectors (not included) to make all wire connectors. Twist connectors until wires are tightly joined toget Wrap sects connection with approved elactrical tape and careful staff all the connected wires into the Outlet Box. STEP 4 - Wire Con




A. Carefully track off whee Into the outlet box and position the ceiling campy of the Foliume Body (A) over the outlet box. Align the Indian in the ceiling campy with the Mounting Servers (DD).

Secure with Screwe (AA) and hand fighten until ang.

Install Celling Can

py to Calling

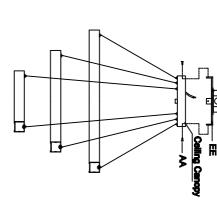

2 of 2