



# Fire Rated Drywall Box

Assembly Instructions for  
**EF39FRBE | EF61FRBE**

## Parts/Contents:

---

### EF39FRBE

**Part A:** Plywood/Drywall sidewalls x 2

**Part B:** Plywood/Drywall end walls x 1

**Part C:** Plywood/Drywall end walls x 1

**Part D:** Drywall top x1

- Junction box and cover plate x 1
- L-brackets x 4
- 5/8" screws x 12 (eight screws for L brackets – four screws for the junction box)
- 1 ¼" screws x 12 (all 12 screws for assembly of the side walls parts A,A,B,C)
- Assembly Instruction Manual x 1

### EF61FRBE

**Part A:** Plywood/Drywall sidewalls x 2

**Part B:** Plywood/Drywall end walls x 1

**Part C:** Plywood/Drywall end walls x 1


**Part D:** Drywall top x1

- Junction box and cover plate x 1
- L-brackets x 6 for 61"
- 5/8" screws x 16 (12 screws for L brackets – four screws for the junction box)
- 1 ¼" screws x 12 (all 12 screws for assembly of the side walls parts A,A,B,C)
- Assembly Instruction Manual x 1

# 1

Unpack Contents


---

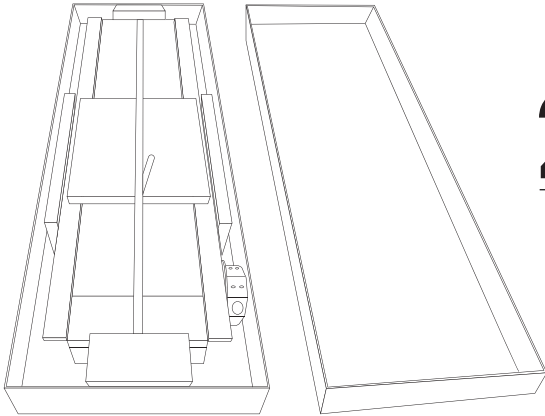

# 2

Verify Components.


---

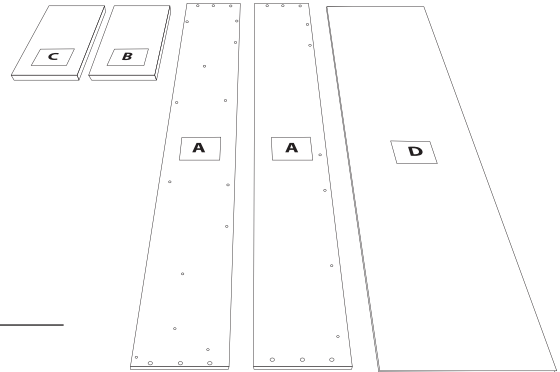

# 3

Layout all drywall parts (A, A, B, C, D).


---

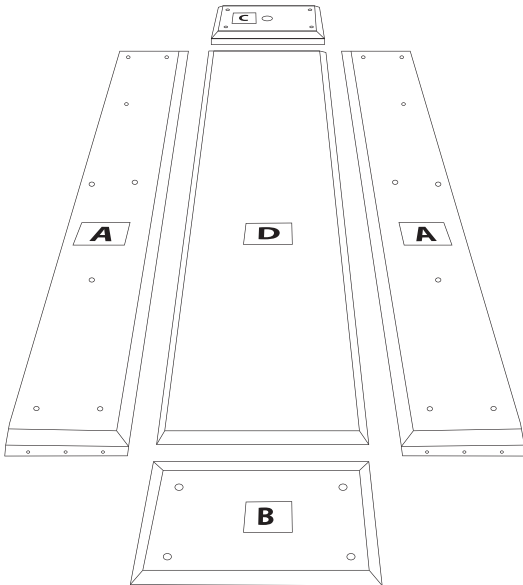

# 4


Assemble box side walls (parts A, A, B, C) using included 1 1/4" screws and pilot holes.

---

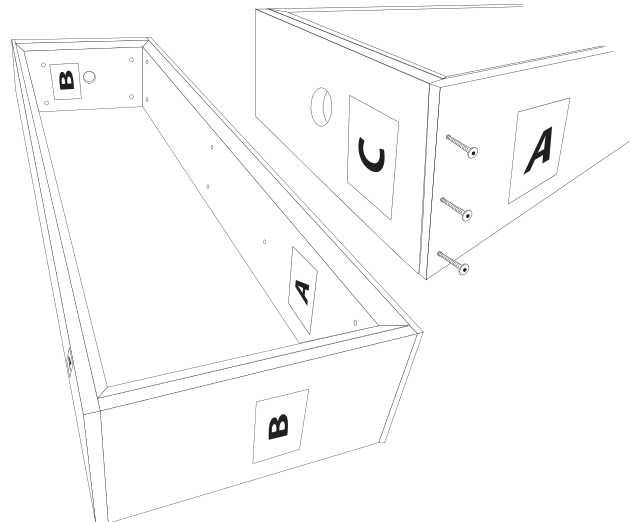

**5**

Place drywall top (part D) in place.

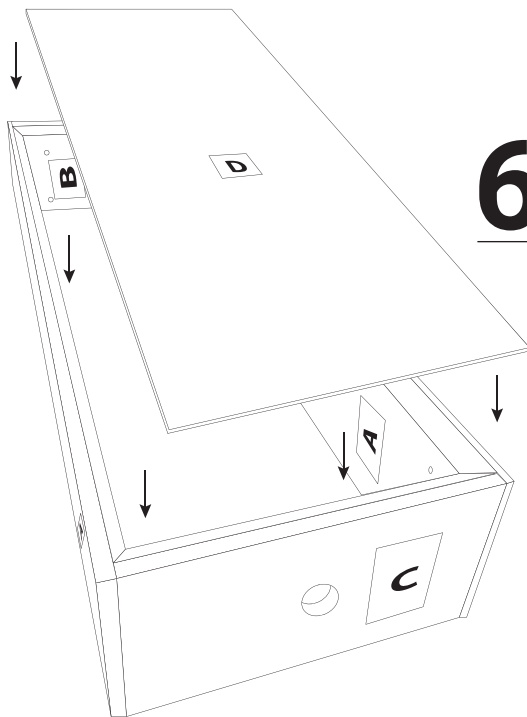


**For 39" Drywall box:** Place one L bracket on each corner.

**For 61" Drywall box:** Place one L bracket on each corner and one on each of the long side.

**6**

Using the included 5/8" screws attach the L brackets to the plywood side walls only. Do not screw the L bracket into the drywall top.

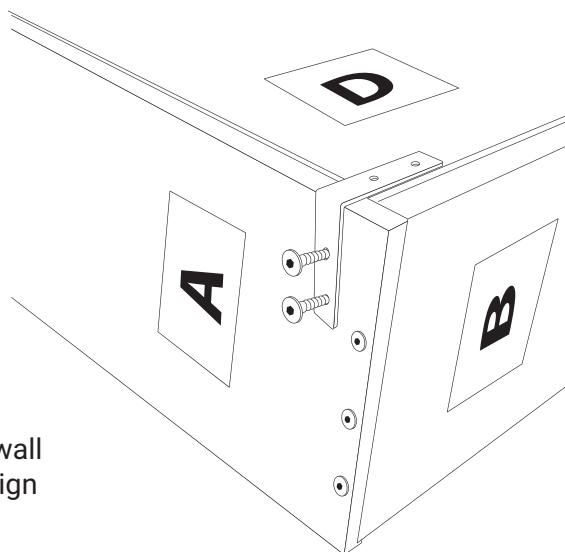

**7**

Attach the included junction box to side wall part C using the included 5/8" screws. Align the punchout in the junction box with the pre-drilled hole in part C.

