


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER PRIOR TO INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

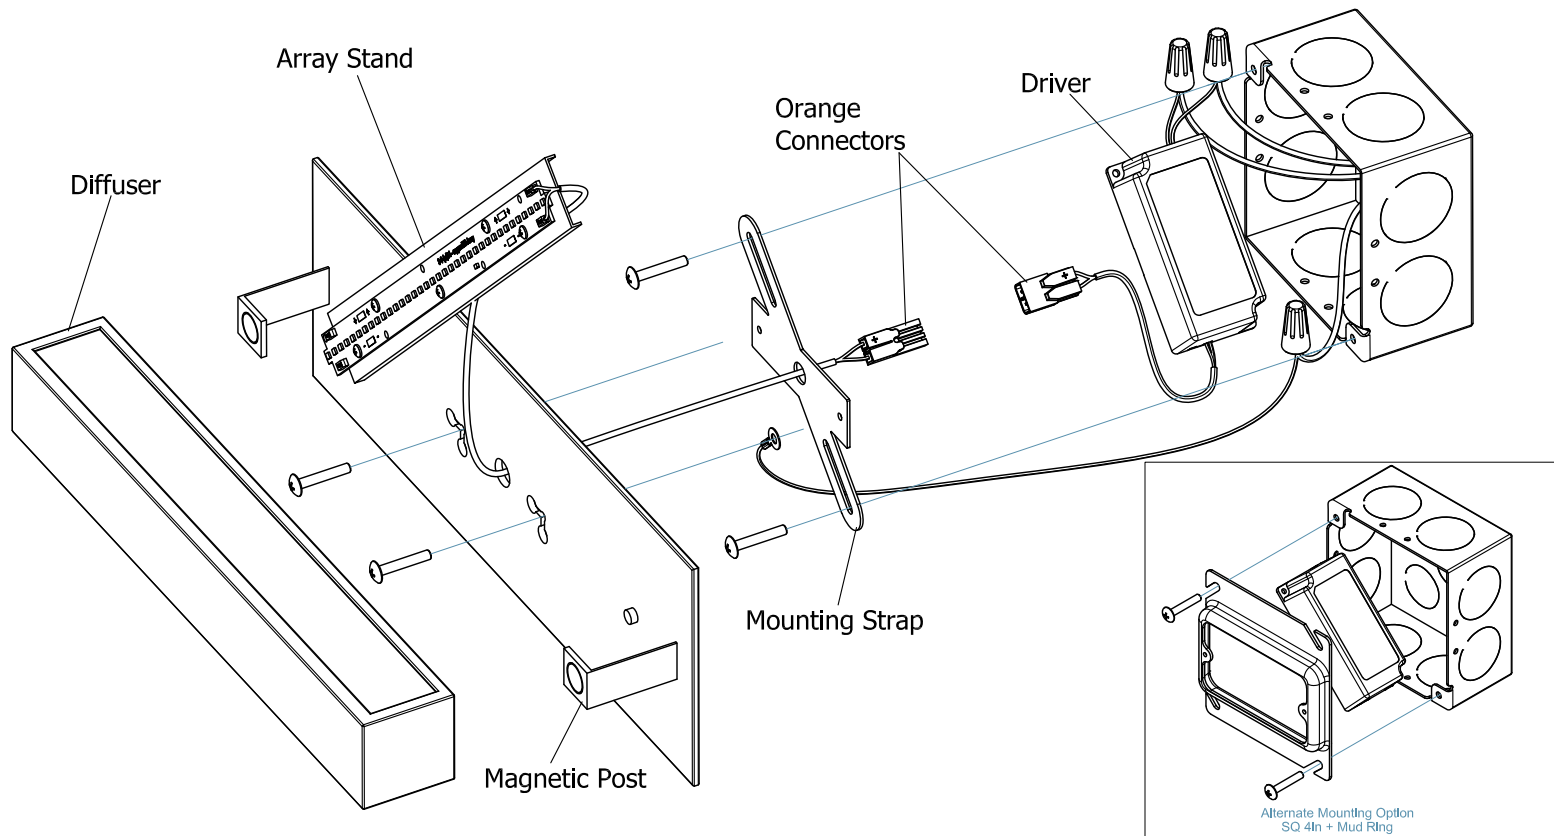

Installation Steps

1. Carefully unpack your new fixture and lay out all the parts on a clean surface. Take care not to lose any small parts necessary for installation.
2. Make wire connections from j-box to driver. Refer to driver label for wire identification.
 - **FOR DIMMING:** If using a dimmer (not included), follow wiring instructions enclosed with dimmer. Double check wiring.
 - **FOR NON-DIMMING:** If not using a dimming switch, with wire nuts, cap off purple and gray wires individually. Connect neutral wire (white) with neutral wire, hot wire (black) with hot wire. Double check wiring.
3. Tuck the wire connections and the driver neatly into the junction box, leaving the orange connector and the ground wire accessible.
4. Feed the orange connector from the driver through the center hole in the mounting strap, and secure the mounting strap to the junction box with the j-box screws.

Note: Do not use the mounting strap if a single device mud ring is installed. See Alternate Mounting Option.
5. Remove the diffuser from the fixture by pulling the diffuser straight off the magnetic posts. Connect the orange connector from the driver to the orange connector from the fixture body. Feed the wiring back into the j-box.
6. Swivel the array stand out of the way to access the mounting holes. Secure the fixture body to the wall with the screws provided, and swivel the array stand back into place. Place the diffuser back onto the fixture body.
7. Turn power back on at fuse or circuit box.

ALCOR scone
3-532-xx

OXYGEN LIGHTING ©

oxygen

OXYGEN LIGHTING
201 RAILHEAD RD, FORT WORTH, TX 76106
TEL. (877) 607-0202 FAX (877) 607-0203
WWW.OXYGENLIGHTING.COM

ASSEMBLY INSTRUCTIONS