


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER PRIOR TO INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

Installation Steps

1. Carefully unpack your new fixture and lay out all the parts on clean surface. Take care not to lose any small parts necessary for installation.
2. Place driver inside j-box. Be sure to leave the orange connector accessible.
3. Make wire connections: Attach ground wire to building ground wire using a wire nut or attach them to the mounting plate with a green ground screw. Refer to driver label for wire identification.
 - **FOR DIMMING:** If using a dimmer (not included), follow wiring instructions enclosed with dimmer. Double check wiring. Tuck the wire connections neatly into the junction box.
 - **FOR NON-DIMMING:** If not using a dimming switch, with wire nuts, cap off purple and gray wires individually. Connect neutral wire (white) with neutral wire, hot wire (black) with hot wire. Double check wiring. Tuck the wire connections neatly into the junction box.
4. On the fixture body, remove the array stand by unscrewing the top and bottom screws. Leave the middle screw in place. This will allow access to the mounting slots.
5. Feed the orange connector from the driver through the center hole on the fixture body, and secure the fixture body to the j-box using j-box screws.
6. Connect the orange connector from the array stand to the orange connector from the driver. Feed the connectors back through the hole in the fixture body, and re-attach the array stand to the fixture body.
7. Slide diffuser down into place, allowing the clips to hold it in place.
8. Turn power back on at fuse or circuit box.

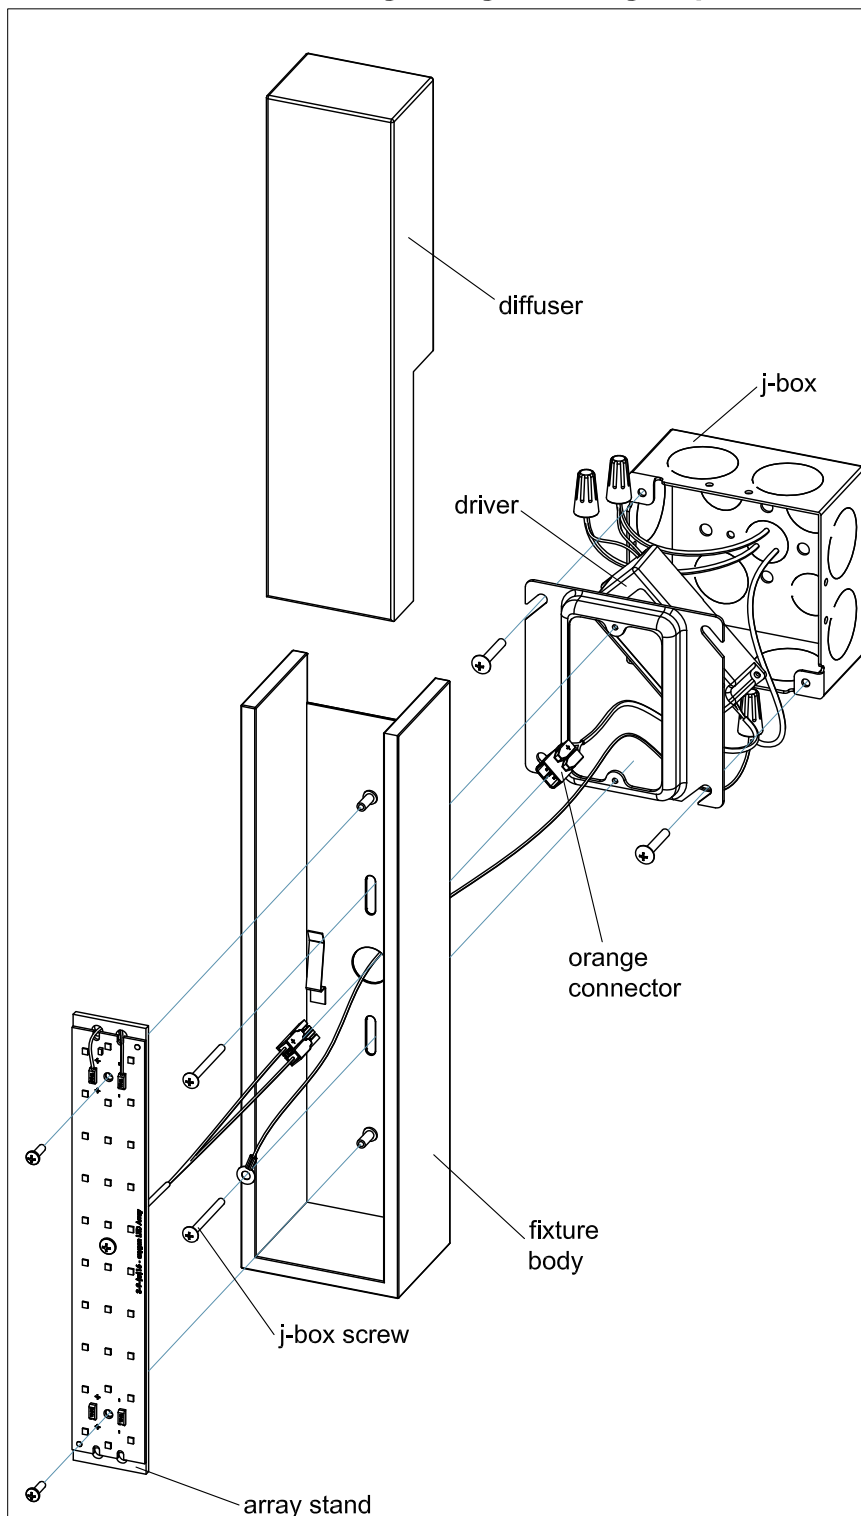

**KIKO scone
3-545-xx**

OXYGEN LIGHTING ©

oxygen

OXYGEN LIGHTING
201 RAILHEAD RD, FORT WORTH, TX 76106
TEL. (877) 607-0202 FAX (877) 607-0203
WWW.OXYGENLIGHTING.COM

ASSEMBLY INSTRUCTIONS