


## ASSEMBLY INSTRUCTIONS FOR YOUR ORION ACCENT LAMP

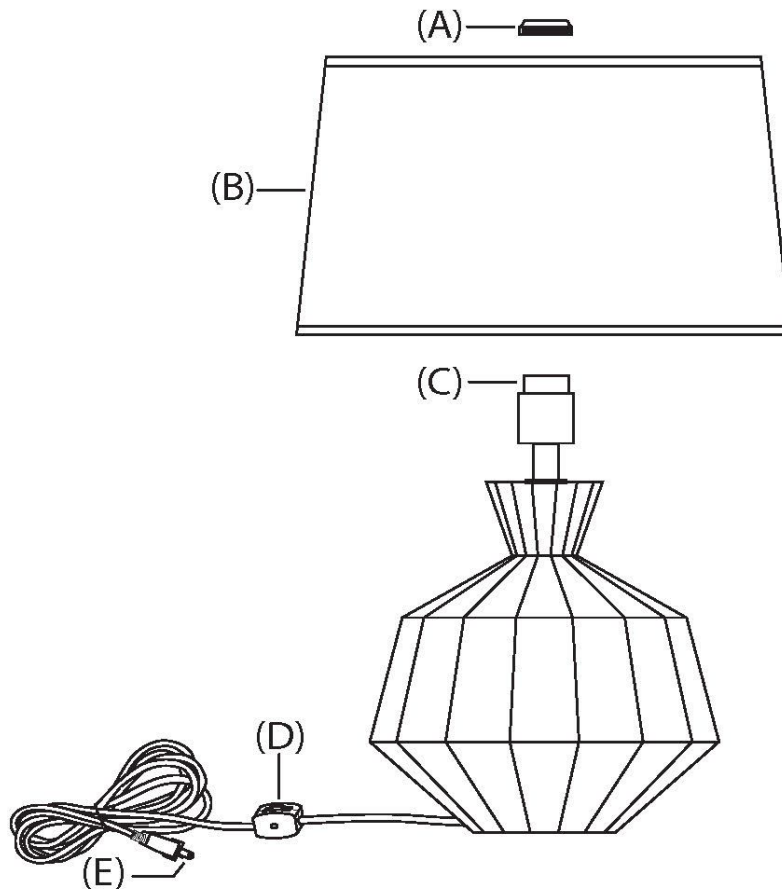

### IMPORTANT SAFETY INSTRUCTIONS:

- \* This lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do NOT alter the plug.
- \* Do not use with an extension cord unless the plug from the lamp can be fully inserted into the extension cord receptacle.
- \* Switch power off and remove plug from the wall outlet before replacing the bulb.
- \* This lamp is UL rated for dry locations.

### ASSEMBLY INSTRUCTIONS:

NOTE: Do not connect electricity until lamp is fully assembled.

1. Unpack all parts and remove packing materials. Place lamp base on a level surface.
2. Remove flange (A) from socket (C). Place shade (B) onto socket (C). Thread flange (A) onto socket (C) until hand tight to secure shade.
3. Install one 60 W max., type B, candelabra base bulb into the socket.
4. Remove protective plastic from plug (E).
5. Insert plug (E) into wall outlet.
6. Control power to lamp by rotating switch (D) on cord.

\*\*To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners.\*\*