


 **SCHONBEK** | 1870

STERLING 3601- ___ _H

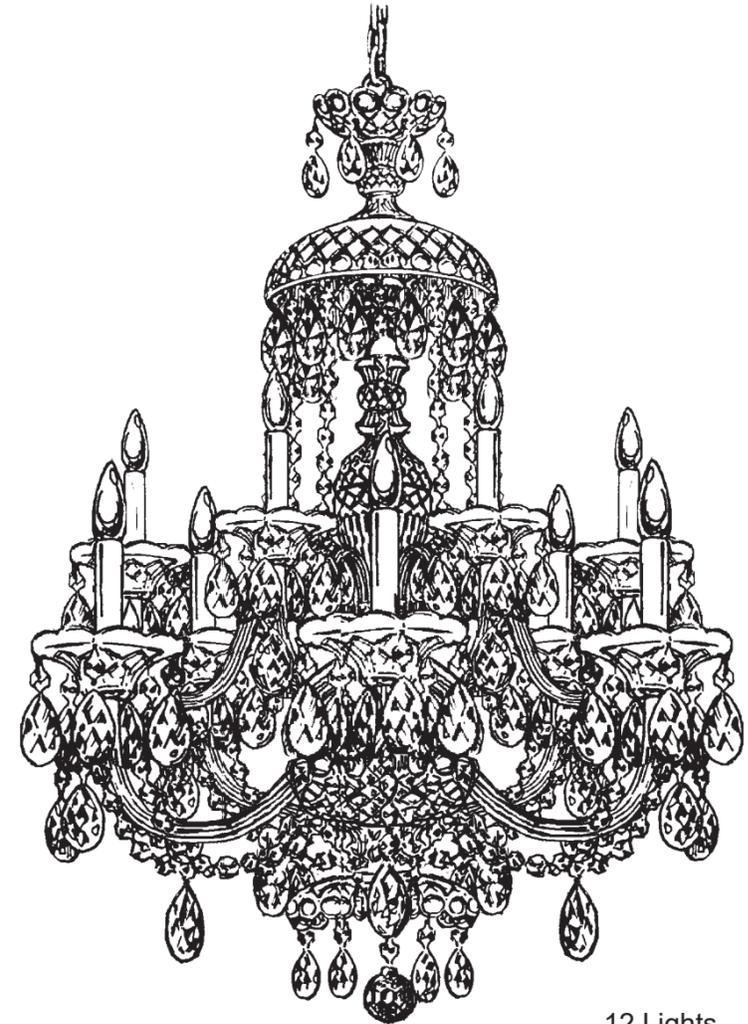



THIS DESIGN IS THE PROPRIETARY
TRADE DRESS/TRADEMARK OF
W SCHONBEK LLC.



12 Lights
Diameter: 29"
Body Length: 30"
Hanging Weight: 26 pounds

 **SCHONBEK** | 1870

								
MAX 60 W	110-120 V							

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

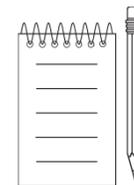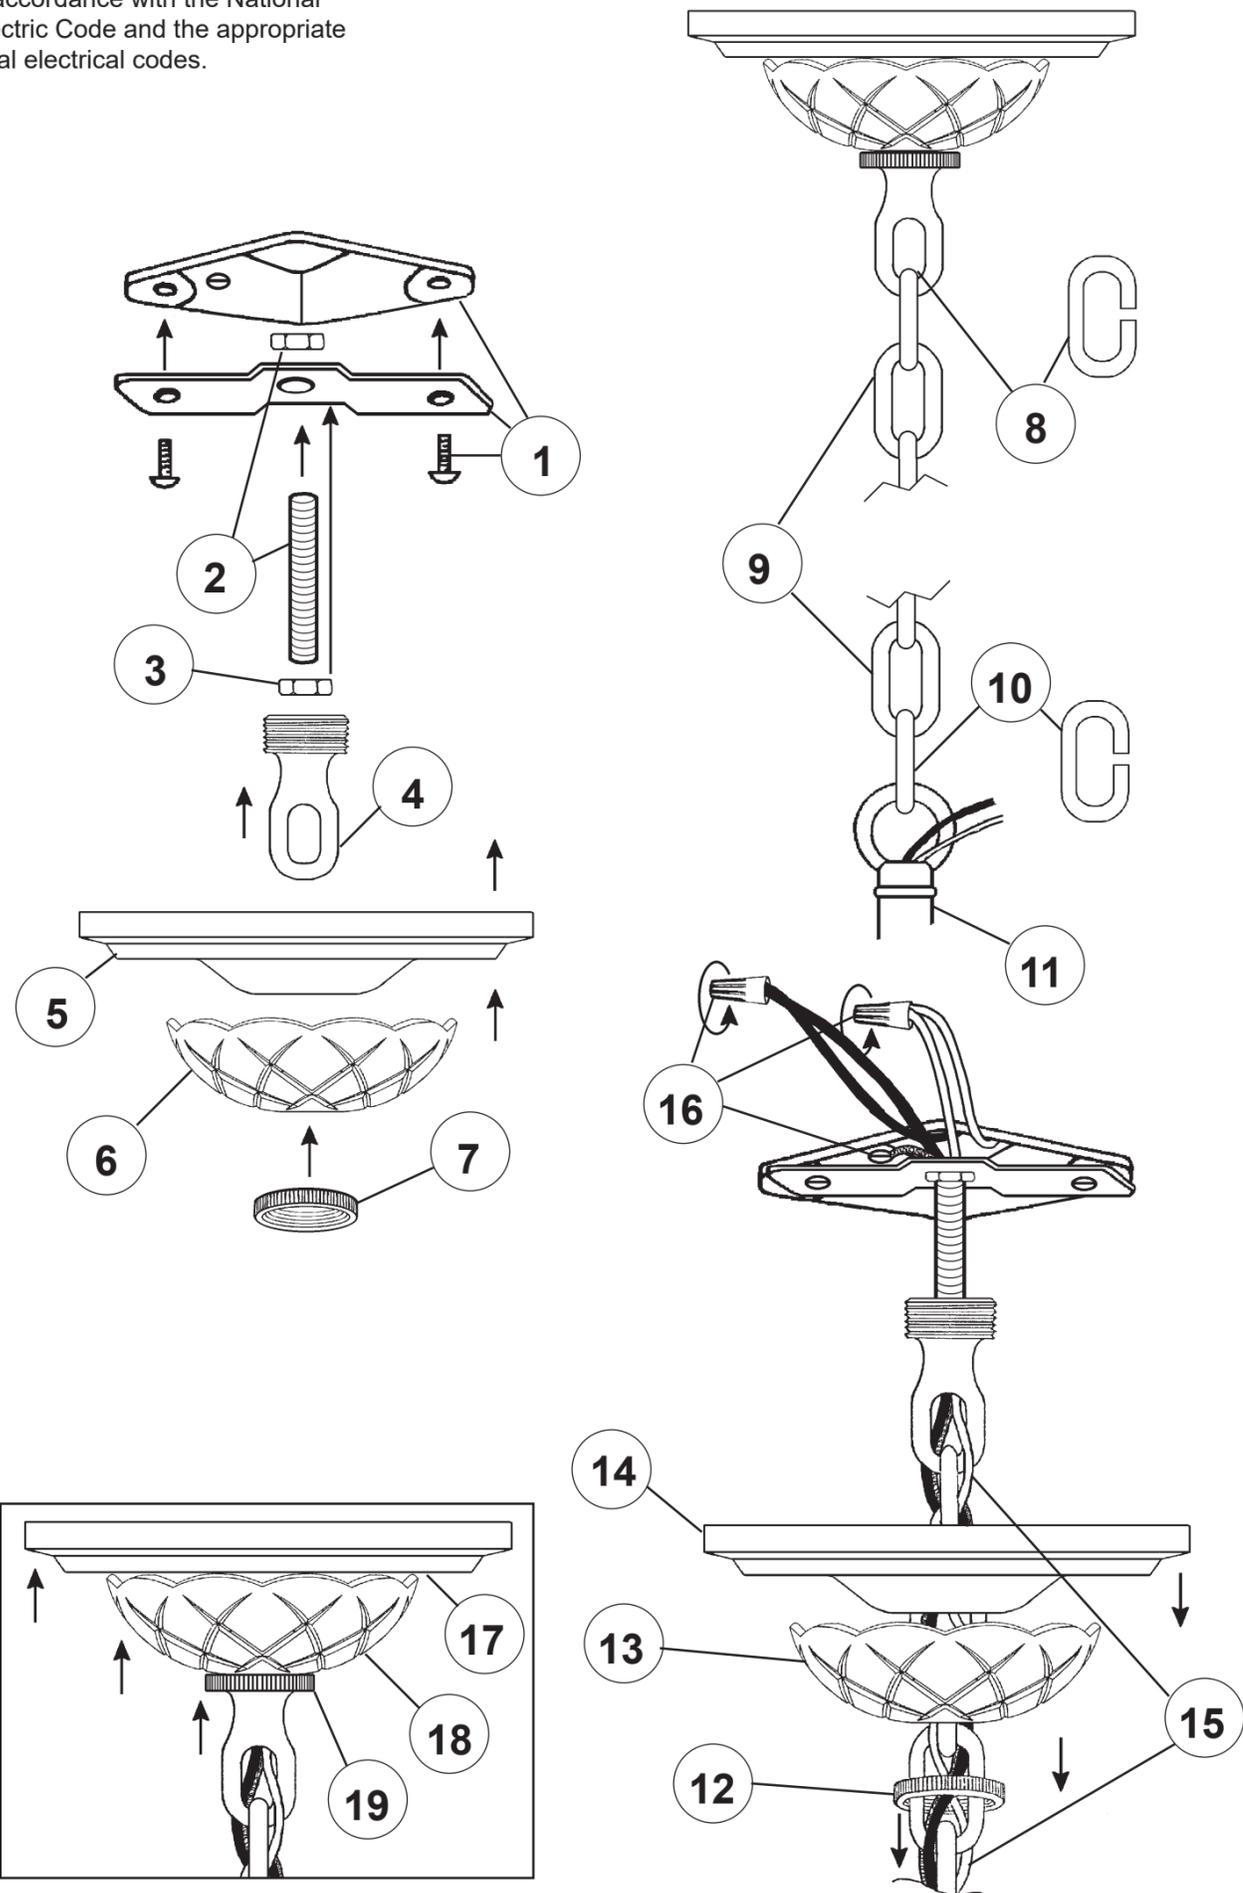

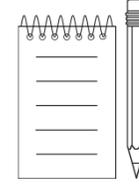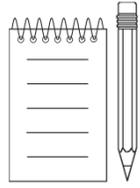



21

You will need 12 - B10
25 Watts Recommended
60 Watts Max

Install bulbs and be sure
to test fixture **BEFORE**
trimming.

20

ALTERNATELY install two different arms into
washer. Line up holes in arms with dimple in washer.
Use lock washer and nut to secure arms in place.

Connect bare ground wire in each arm to bare ground
wire in center column. Use electrical tape to secure
wire nuts. **NO MORE THAN 5 - WIRES PER WIRE
NUT.** Sufficient quantities of jumper wires and wire
nuts are provided.

Connect white arm wires to neutral column wire
(ribbed or marked is neutral).
Connect black arm wires to the power wire in column.
Carefully press wires as close as possible to the
underside of washer.

Install bobèche, bulbs, connect power and test the
fixture **BEFORE** attaching glass assembly. If any of
the bulbs do **NOT** light - **DISCONNECT POWER.**
Double check the wire connections.
Attach glass assembly with rosette and ball.

CAUTION: Glass parts are fragile.
To avoid breakage use care when
assembling or cleaning.

**WHEN ORDERING REPLACEMENT
ARM(S):**

- ! Give arm number from trim diagram
- ! Give color code from the arm itself

