

Instructions for electrician
STEPS 2 - 9

WARNING:

2





Electrical Danger



Turn Power Off

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

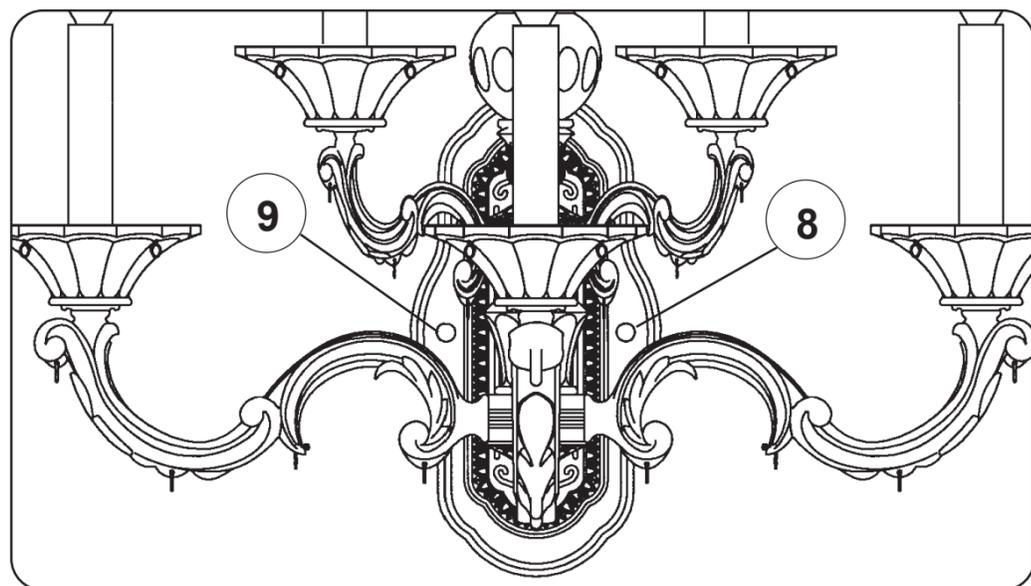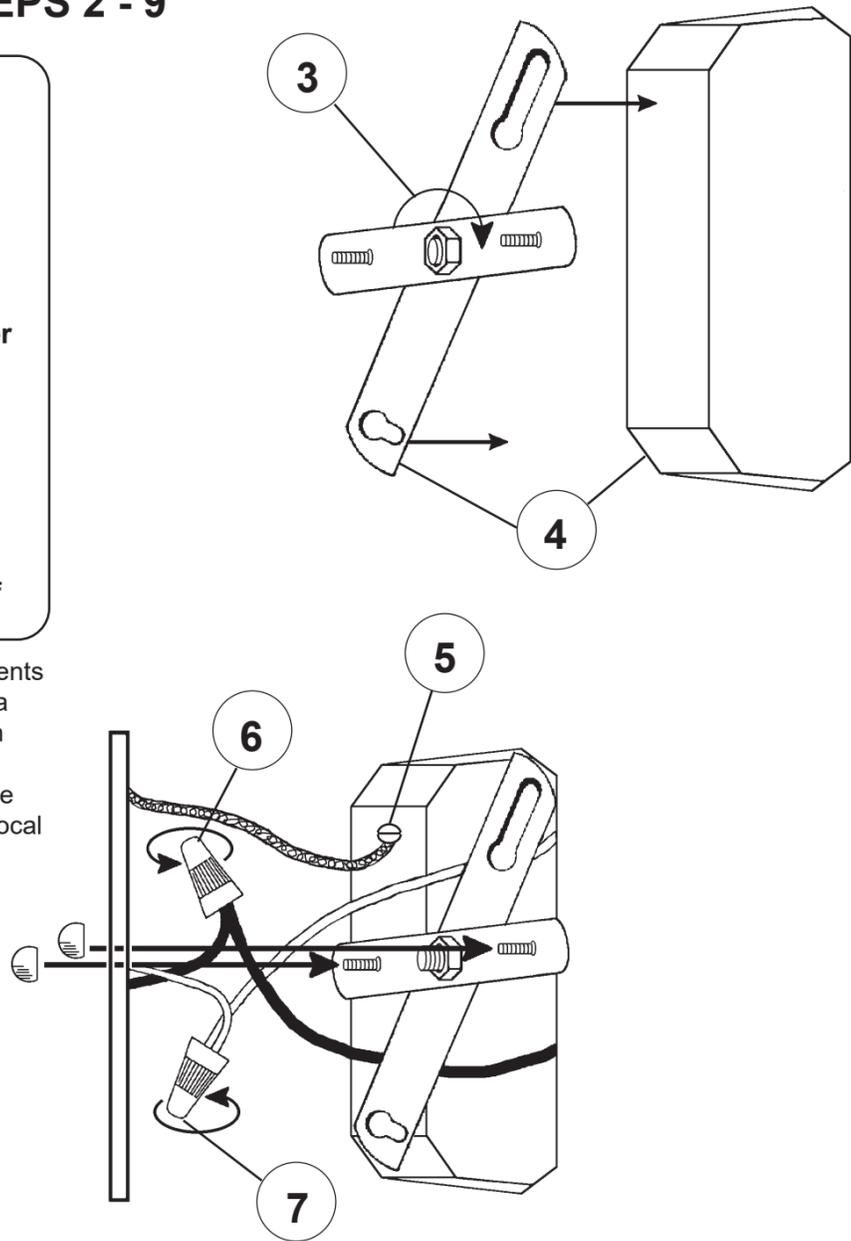

CHANDELIER 5003- _____ TRIM DIAGRAM

(Finish Option)



5 Lights
Diameter: 22"
Body Length: 27"
Extension: 13-1/2"
Hanging Weight: 16 pounds

THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADemark OF W SCHONBEK LLC.



SCHONBEK | 1870

See diagram on back page
Follow steps in exact order
Save this trim diagram for future reference

IMPORTANT

1 *Person who opens carton should record the following information for future service.*


CODE # _____ Four-digit number on outside of carton.
PACKER # _____ See crystal package label.
ORDER # _____ See crystal package label.




Instructions for electrician
STEPS 2 - 9

WARNING:

2


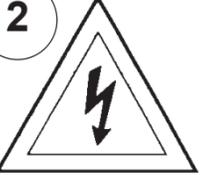


Electrical Danger

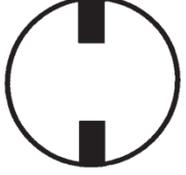

Turn Power Off

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

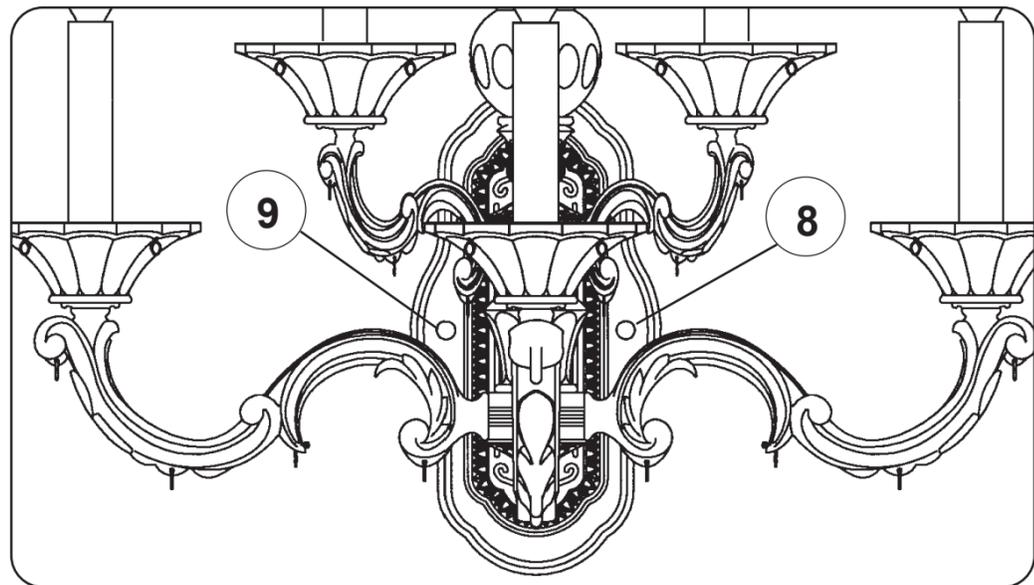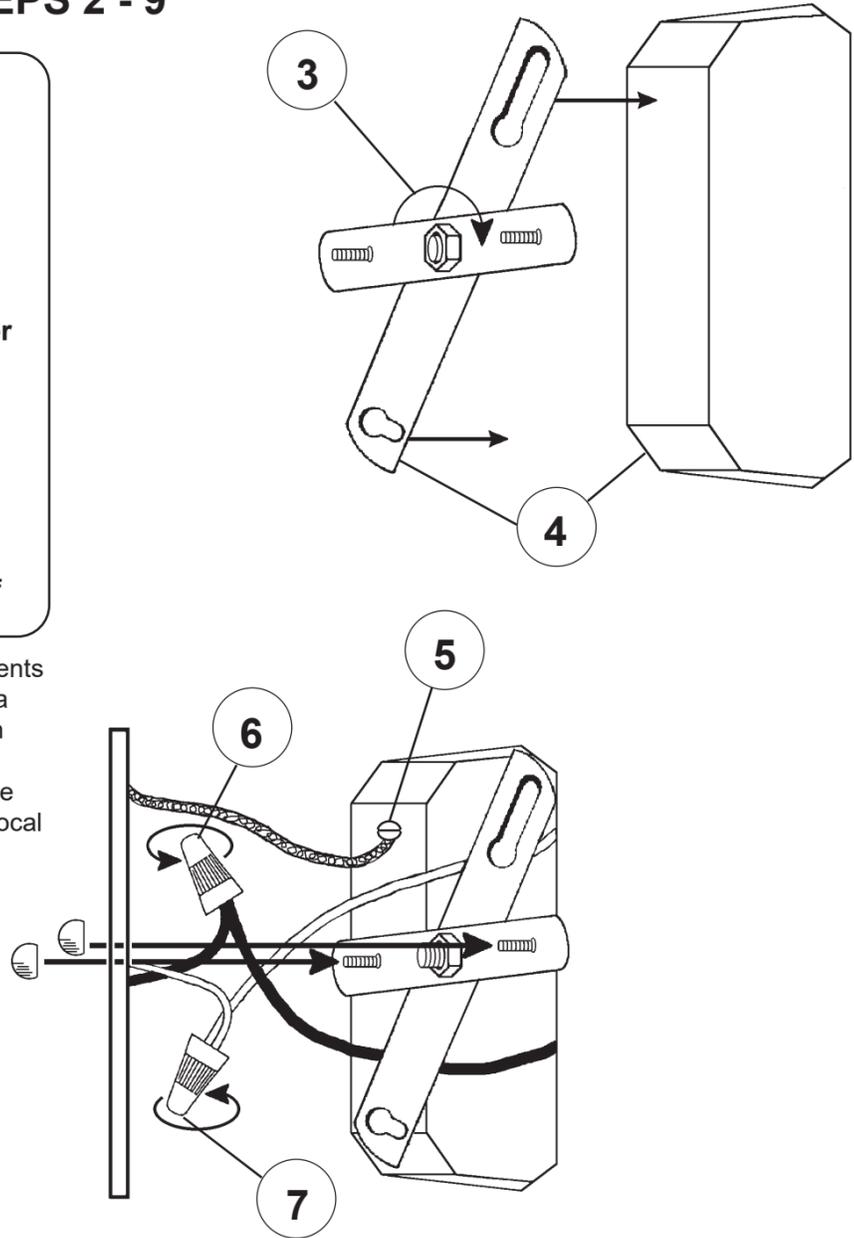

CHANDELIER 5003-_____R TRIM DIAGRAM
(Finish Option)



5 Lights
Diameter: 22"
Body Length: 27"
Extension: 13-1/2"
Hanging Weight: 15 LBS

THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADENAME OF W SCHONBEK LLC.



See diagram on back page
Follow steps in exact order
Save this trim diagram for future reference

IMPORTANT

1 *Person who opens carton should record the following information for future service.*

CODE # _____	Four-digit number on outside of carton.
PACKER # _____	See crystal package label.
ORDER # _____	See crystal package label.



**Instructions for crystal trim-
ming**
STEPS 10 - 22




10 You will need 5 - B10
25 Watts Recommended
60 Watts Max

**Install bulbs and be sure
to test fixture BEFORE
trimming.**






VIEW "A"

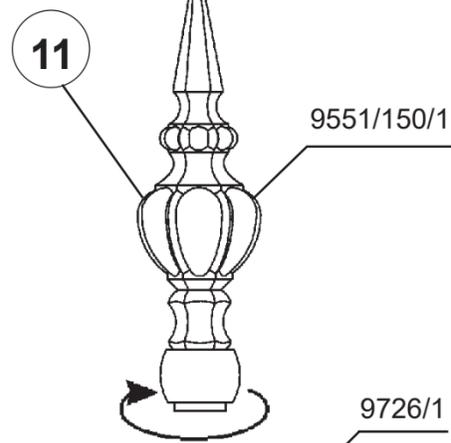

**HANG
CRYSTAL
WITH FLAT
SIDE FACING
FRONT**



VIEW "B"

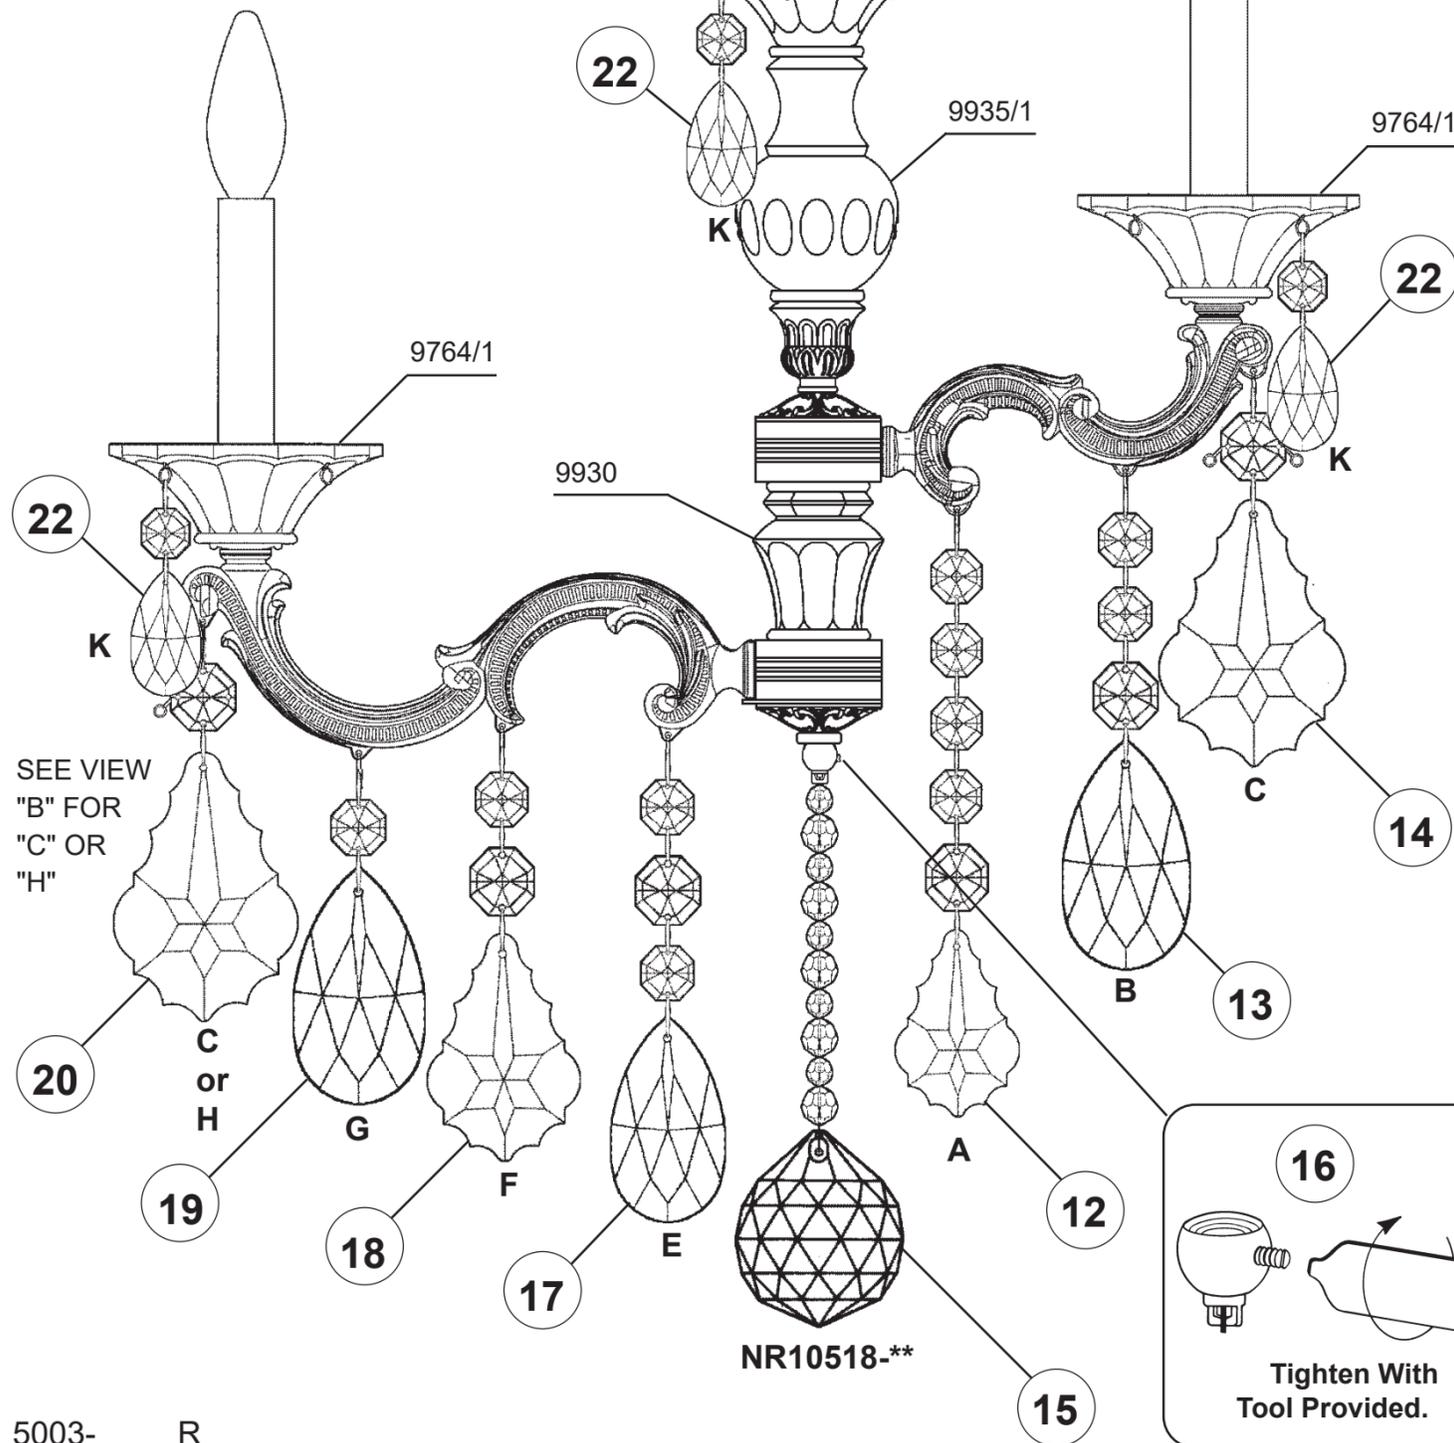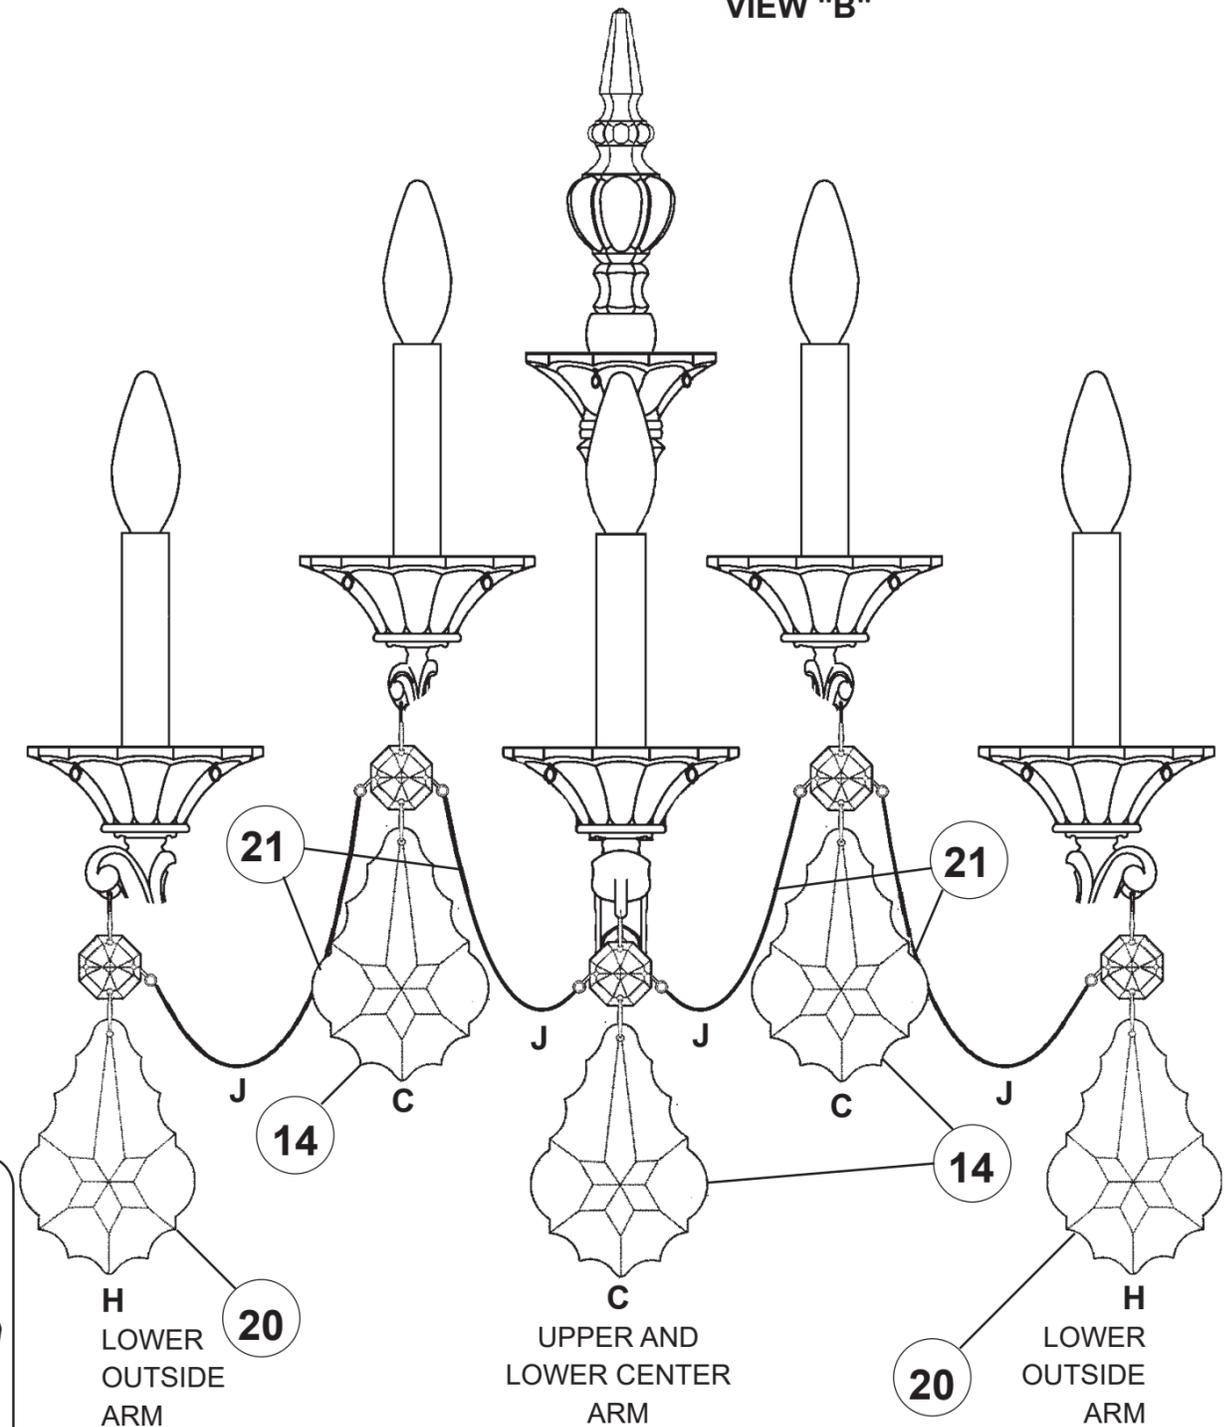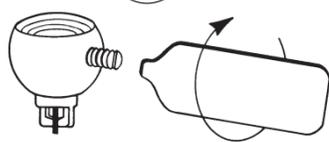16

**Tighten With
Tool Provided.**


Instructions for electrician
STEPS 2 - 9

WARNING:

2





Electrical Danger

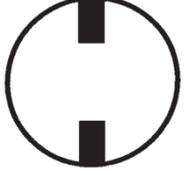

Turn Power Off

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

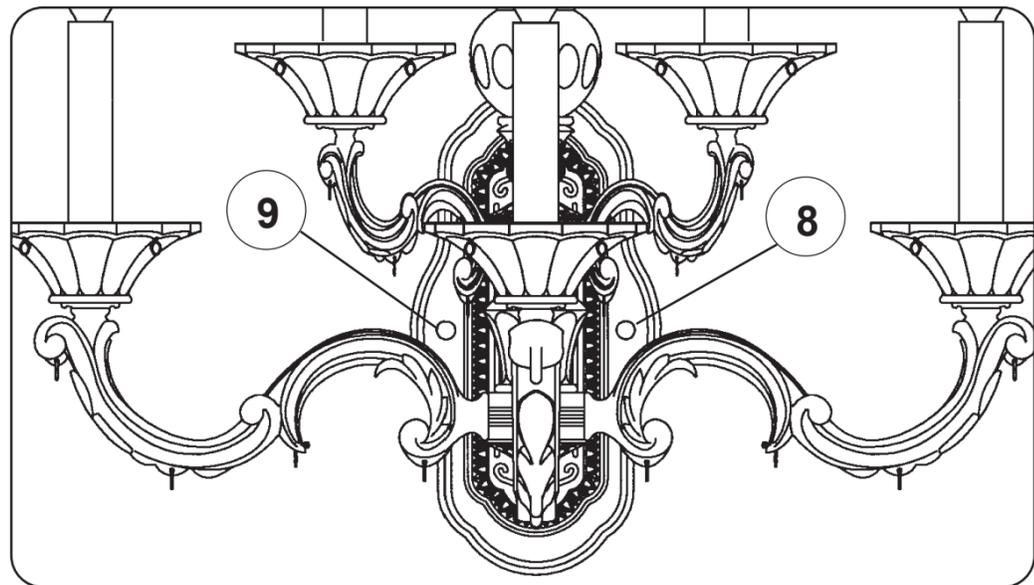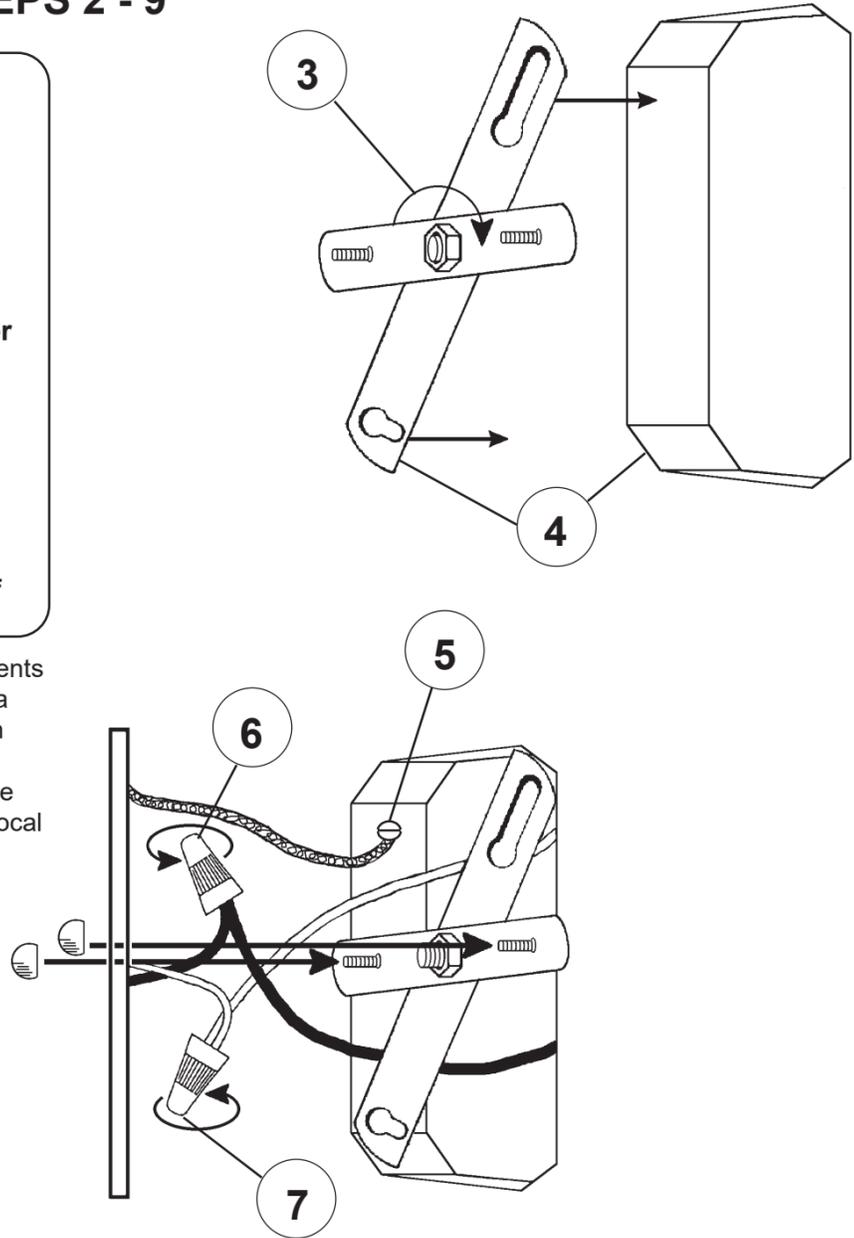

CHANDELIER 5003- _____ **TRIM DIAGRAM**
(Finish Option) (Trim Option)



5 Lights
Diameter: 22"
Body Length: 27"
Extension: 13-1/2"
Hanging Weight: 15 LBS

THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADemark OF W SCHONBEK LLC.



SCHONBEK | 1870

See diagram on back page
Follow steps in exact order
Save this trim diagram for future reference

IMPORTANT

1 *Person who opens carton should record the following information for future service.*

CODE # _____ Four-digit number on outside of carton.
PACKER # _____ See crystal package label.
ORDER # _____ See crystal package label.



**Instructions for crystal trim-
ming**
STEPS 10 - 22



10 You will need 5 - B10
25 Watts Recommended
60 Watts Max

**Install bulbs and be sure
to test fixture BEFORE
trimming.**



**HANG
CRYSTAL
WITH FLAT
SIDE FACING
FRONT**