



PETIT CRYSTAL DELUXE 5892-__O

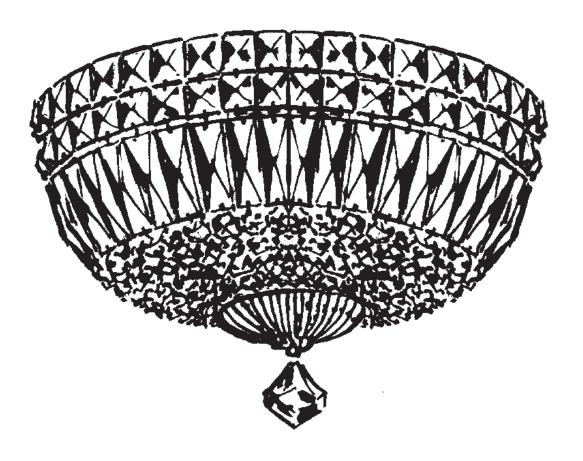


THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADEMARK OF W SCHONBEK LLC.

5 Lights
Diameter: 12"
Body Length: 8"
Hanging Weight: 6 lbs.



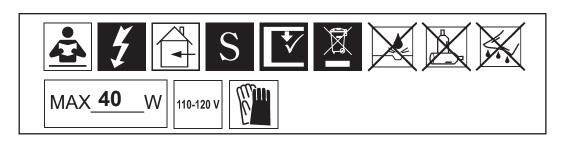


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

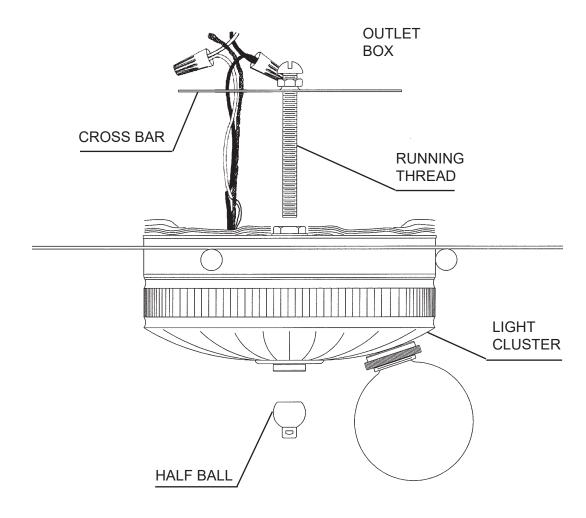


1 Remove crossbar from light cluster and attach to outlet box.


2 Feed stem wires through crossbar and attach to power wires in outlet box.

3 Place light cluster over thread attached to crossbar and secure with half ball.

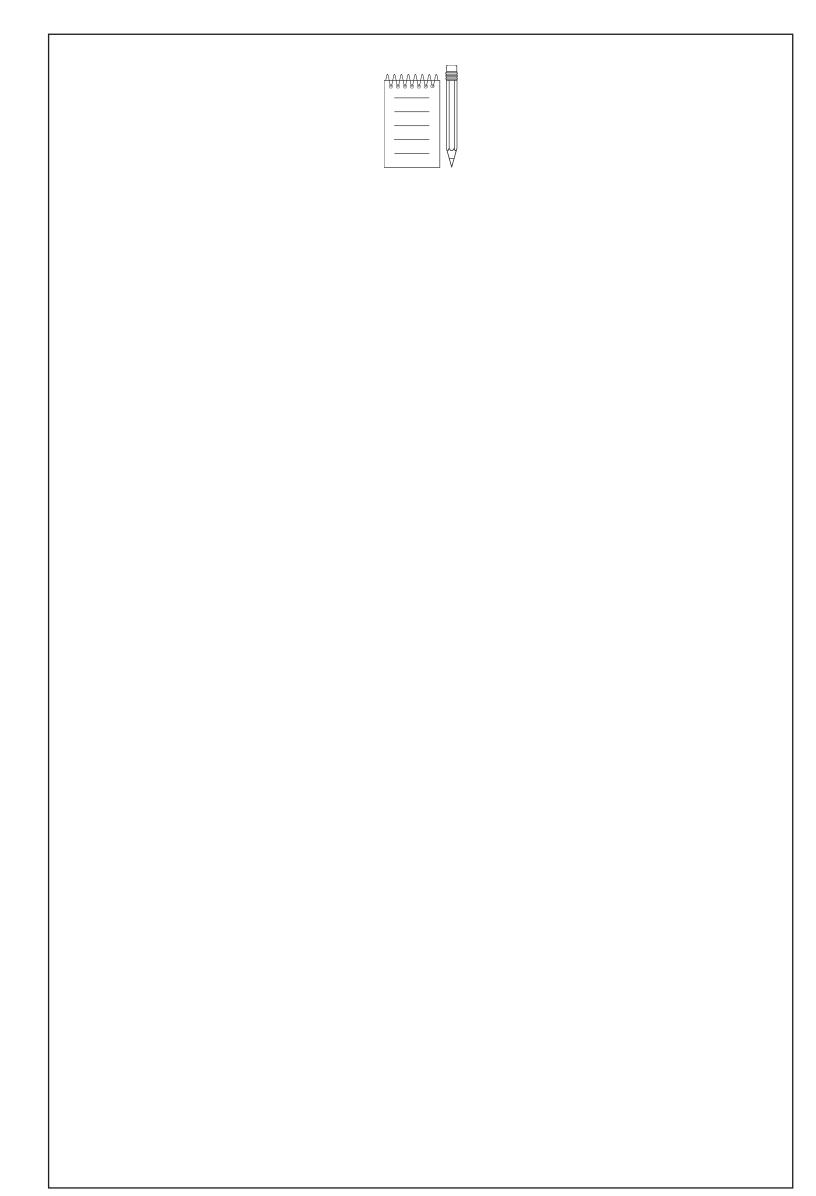

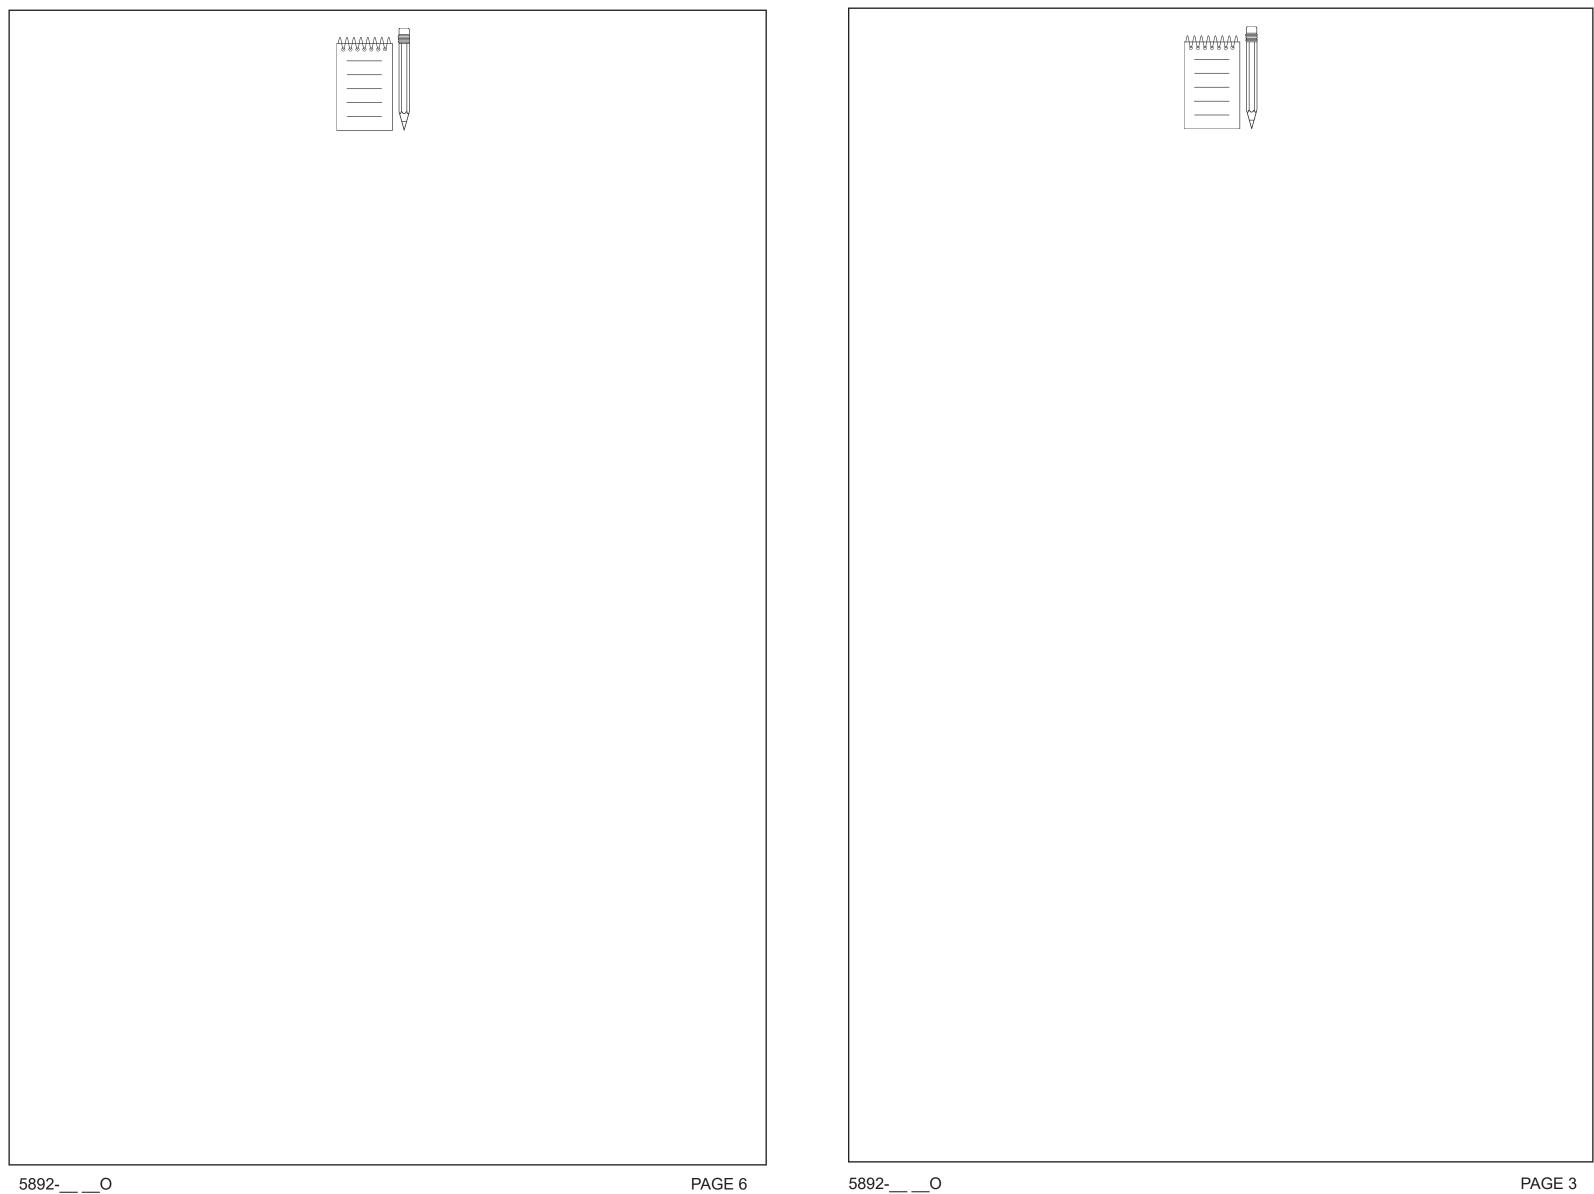


5892-___O

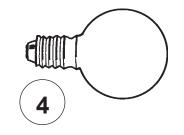



You will need 5 - G16-1/2 25 Watts Recommended 40 Watts Max MIN 90°C SUPPLY CONDUCTORS

Install bulbs and be sure to test fixture BEFORE trimming.




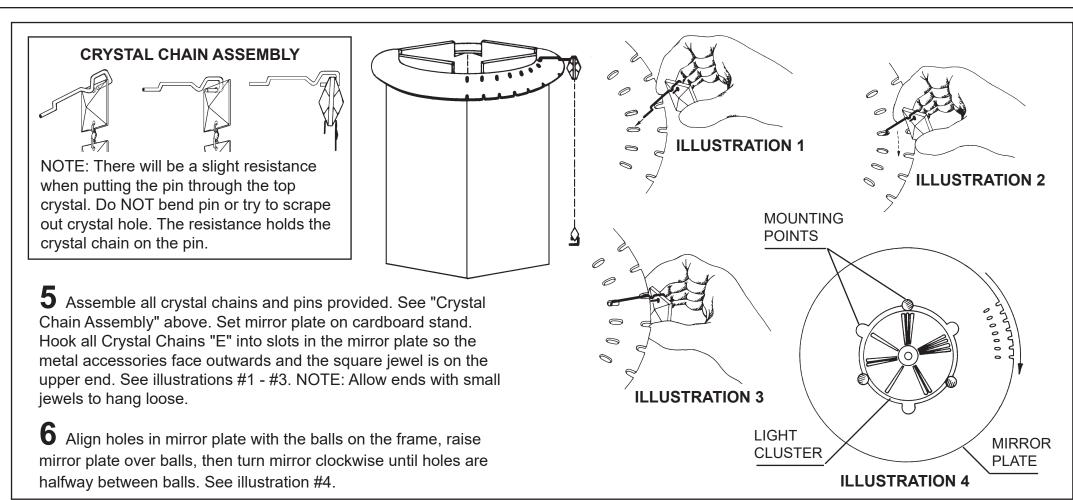

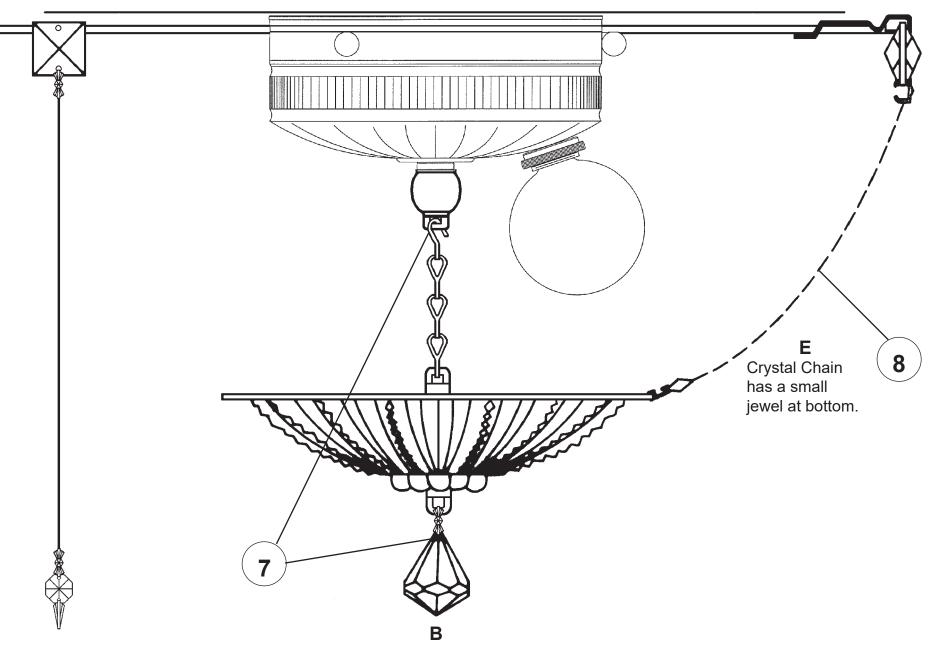

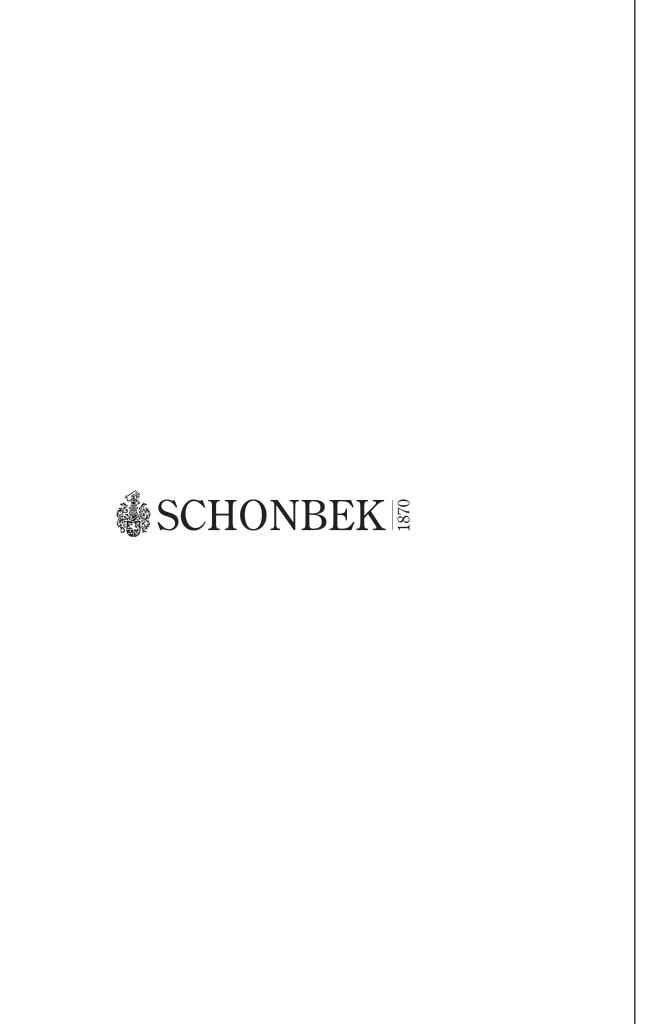


PETIT CRYSTAL DELUXE 5892- ___ R

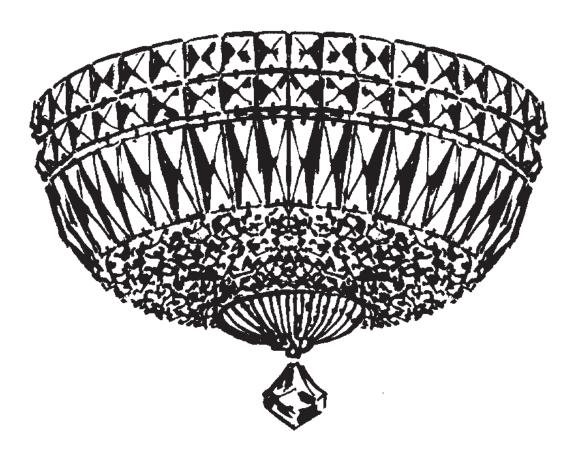


THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADEMARK OF W SCHONBEK LLC.

5 Lights
Diameter: 12"
Body Length: 8"
Hanging Weight: 6 lbs.



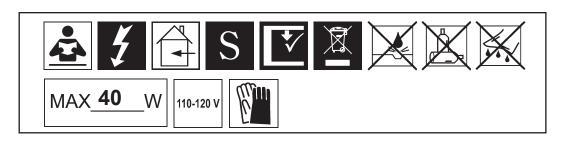


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

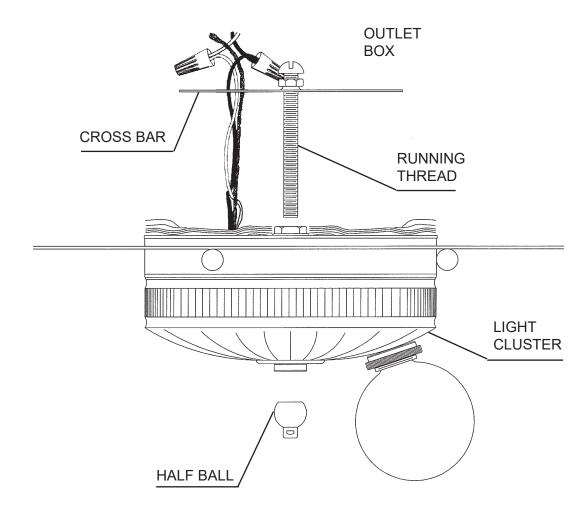


1 Remove crossbar from light cluster and attach to outlet box.

2 Feed stem wires through crossbar and attach to power wires in outlet box.


3 Place light cluster over thread attached to crossbar and secure with half ball.

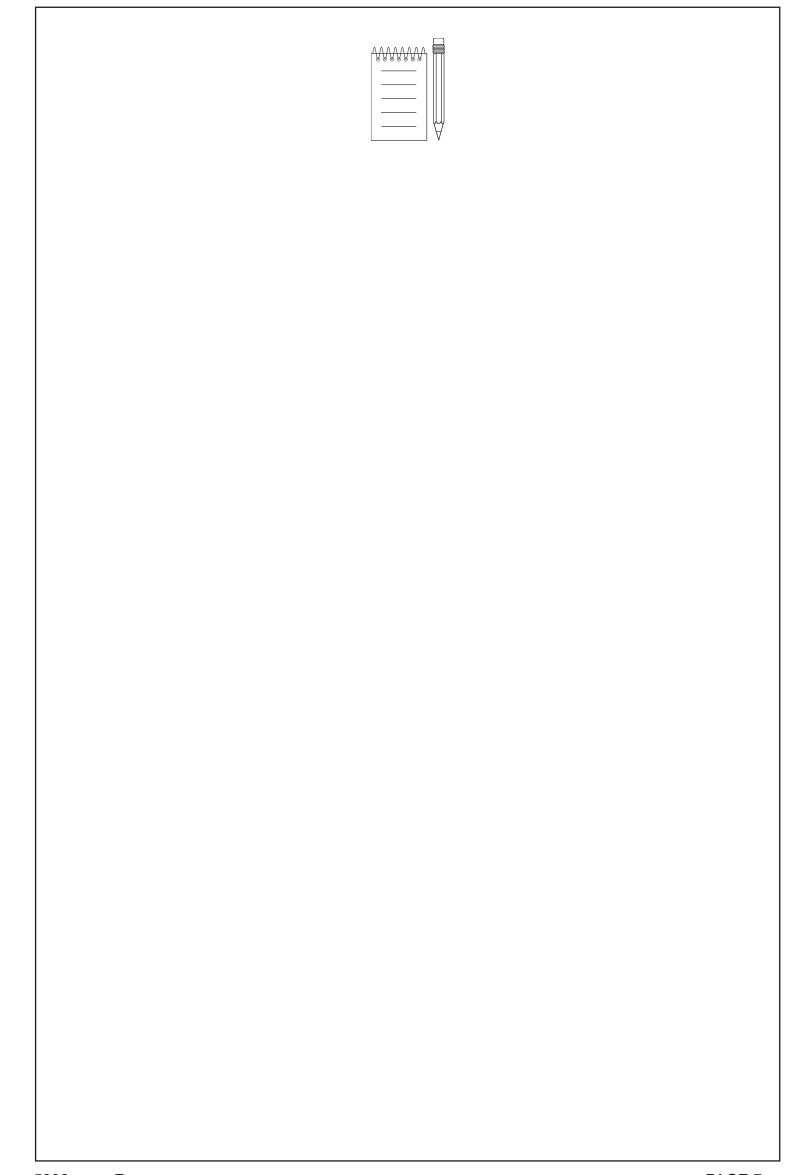

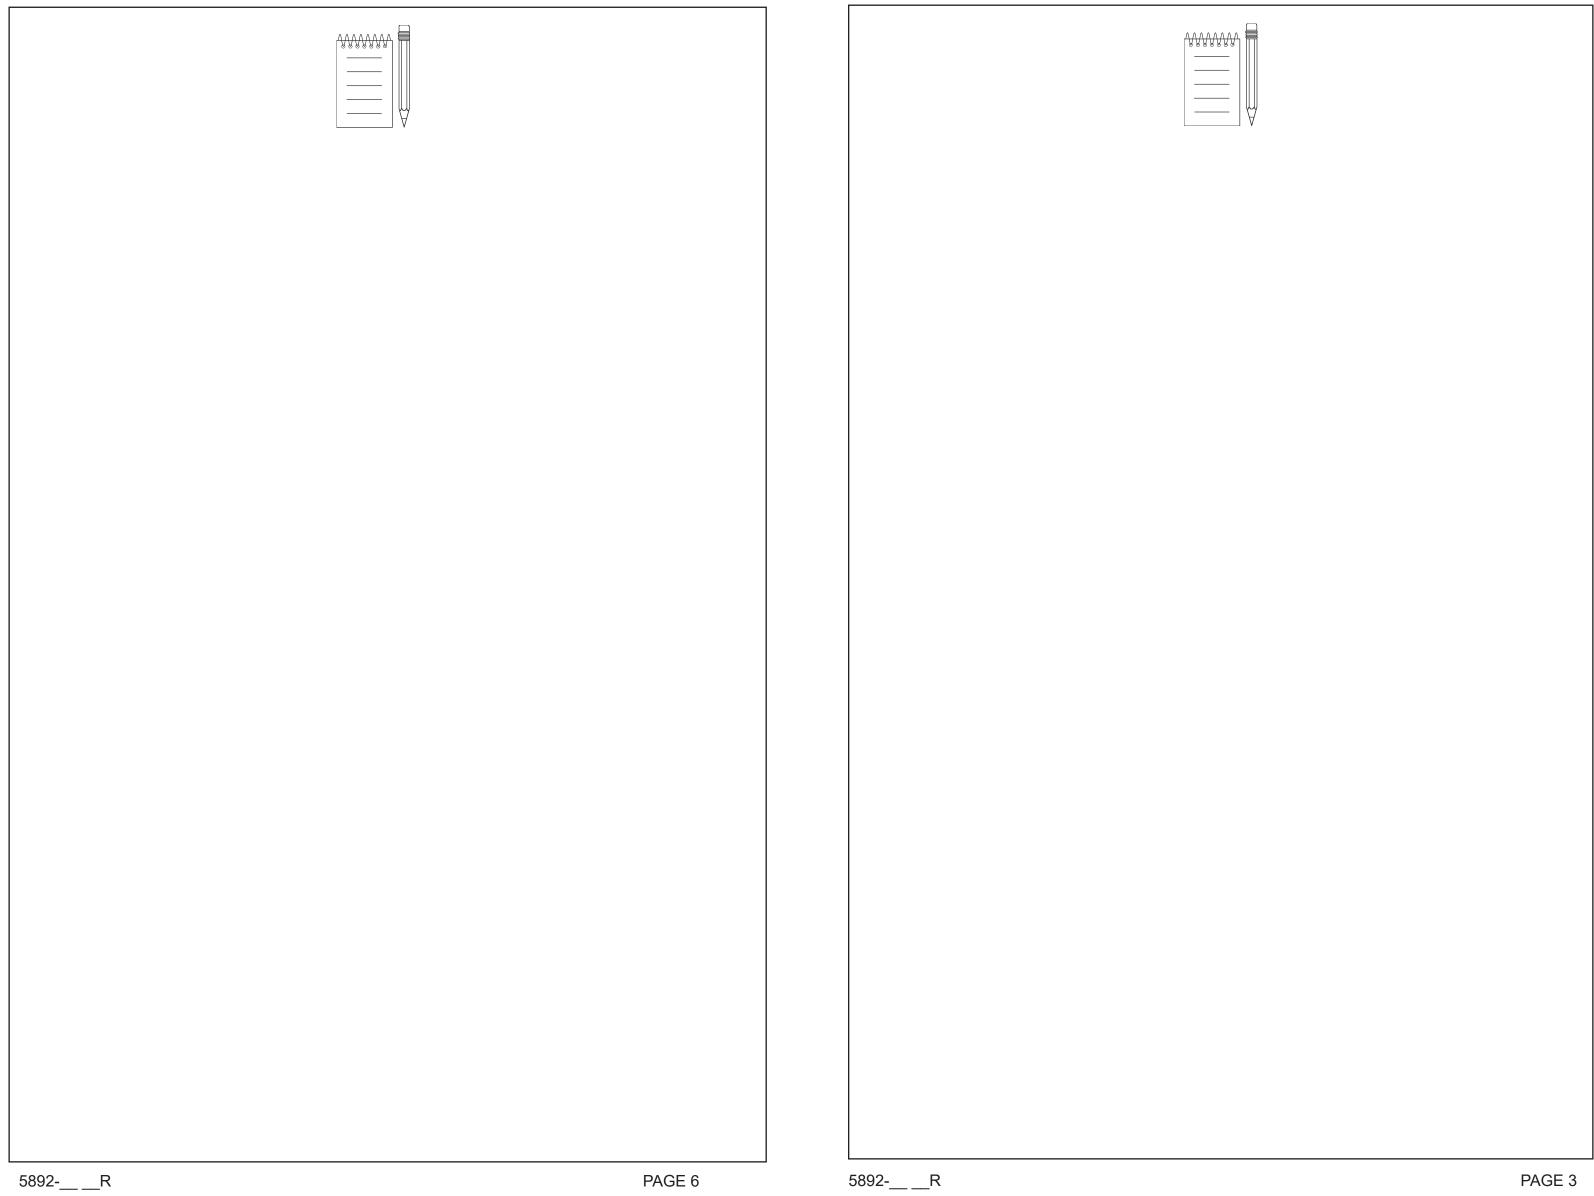

PAGE 6


5892-___R

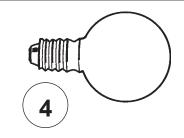


You will need 5 - G16-1/2 25 Watts Recommended 40 Watts Max MIN 90°C SUPPLY CONDUCTORS

Install bulbs and be sure to test fixture BEFORE trimming.




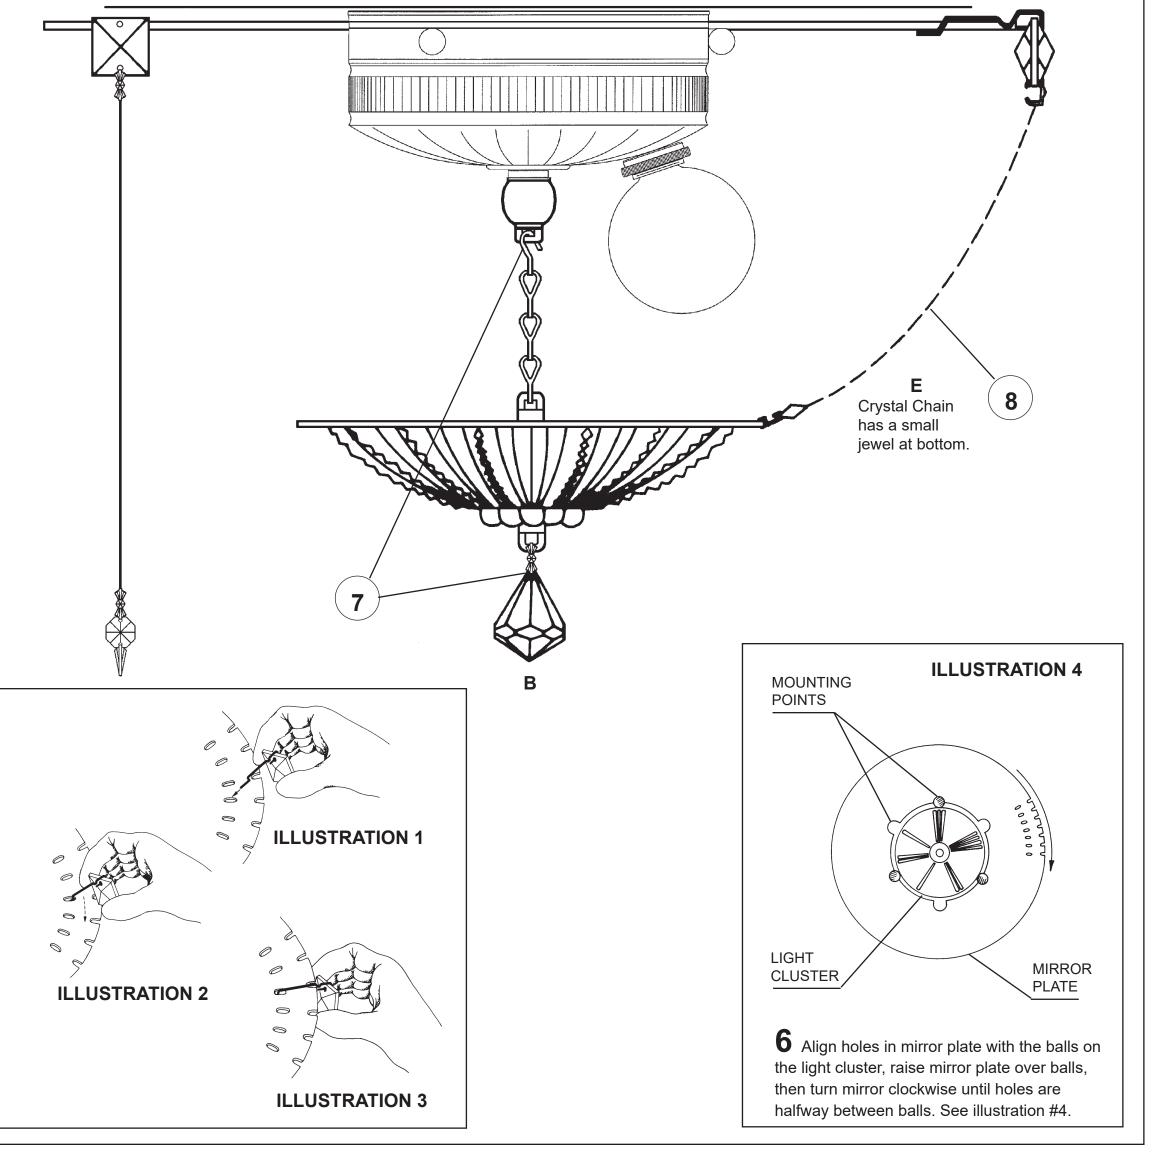

5 Set mirror plate on cardboard stand. Hook

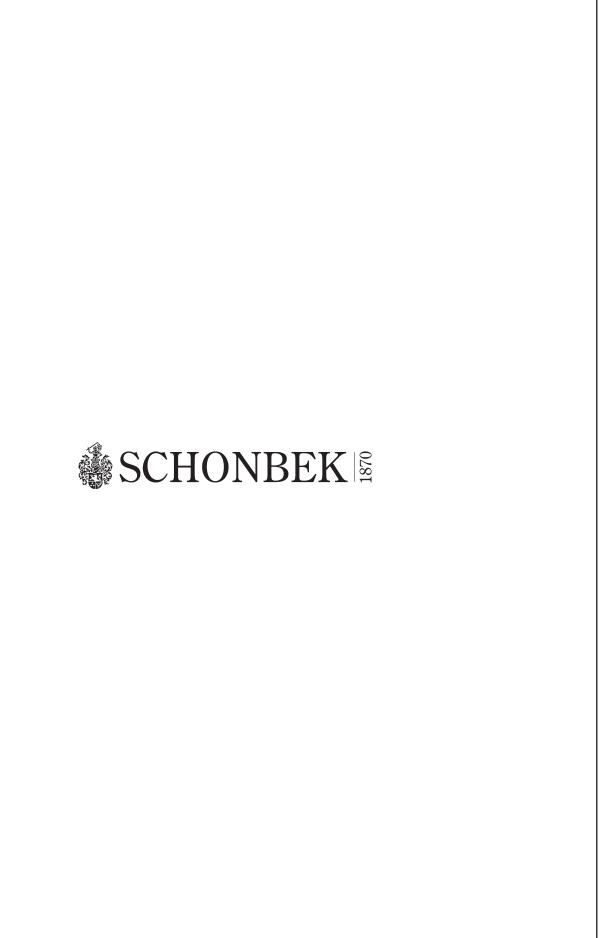


PETIT CRYSTAL DELUXE 5892-___S

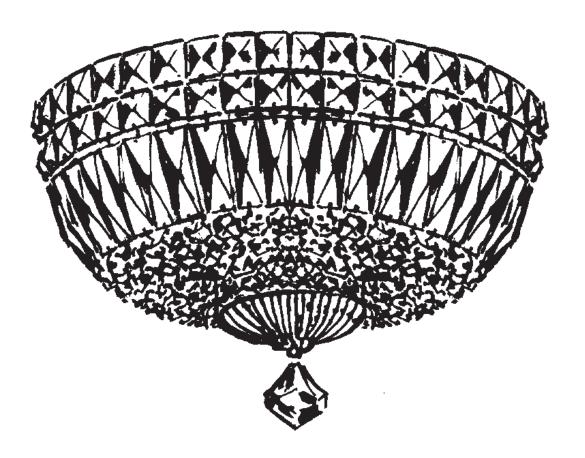


THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADEMARK OF W SCHONBEK LLC.

5 Lights
Diameter: 12"
Body Length: 8"
Hanging Weight: 6 lbs.



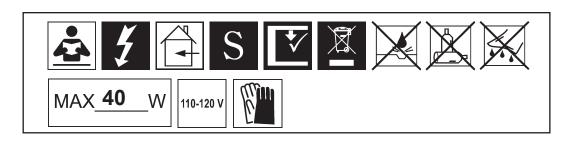


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

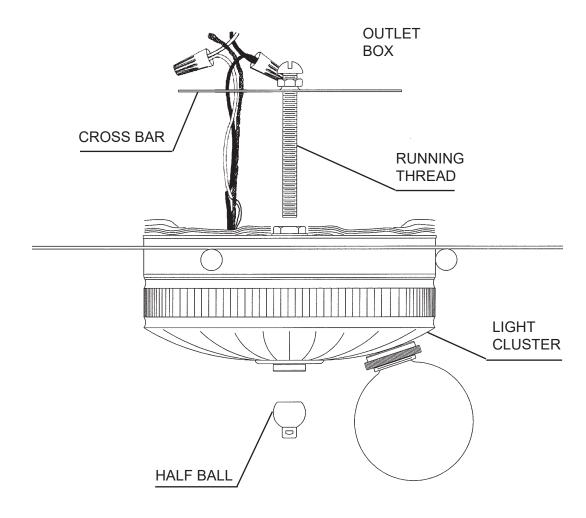



1 Remove crossbar from light cluster and attach to outlet box.

2 Feed stem wires through crossbar and attach to power wires in outlet box.

3 Place light cluster over thread attached to crossbar and secure with half ball.

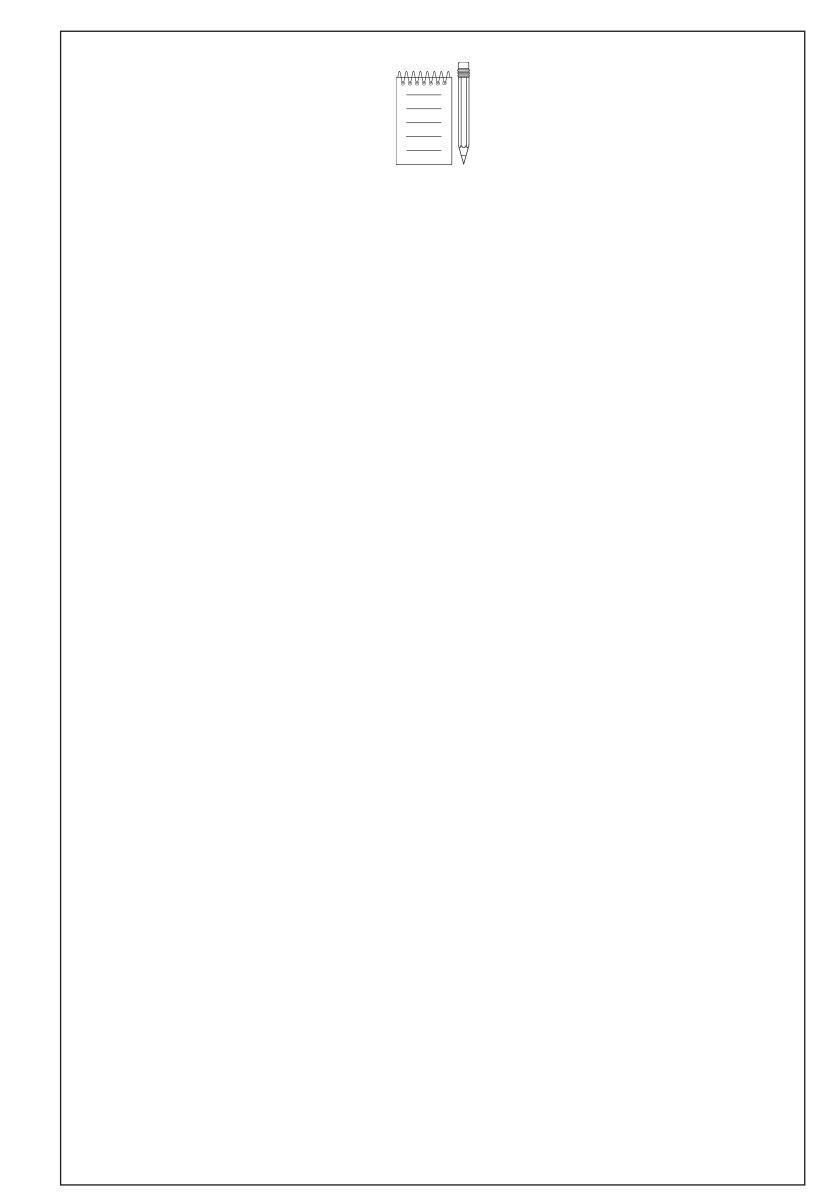

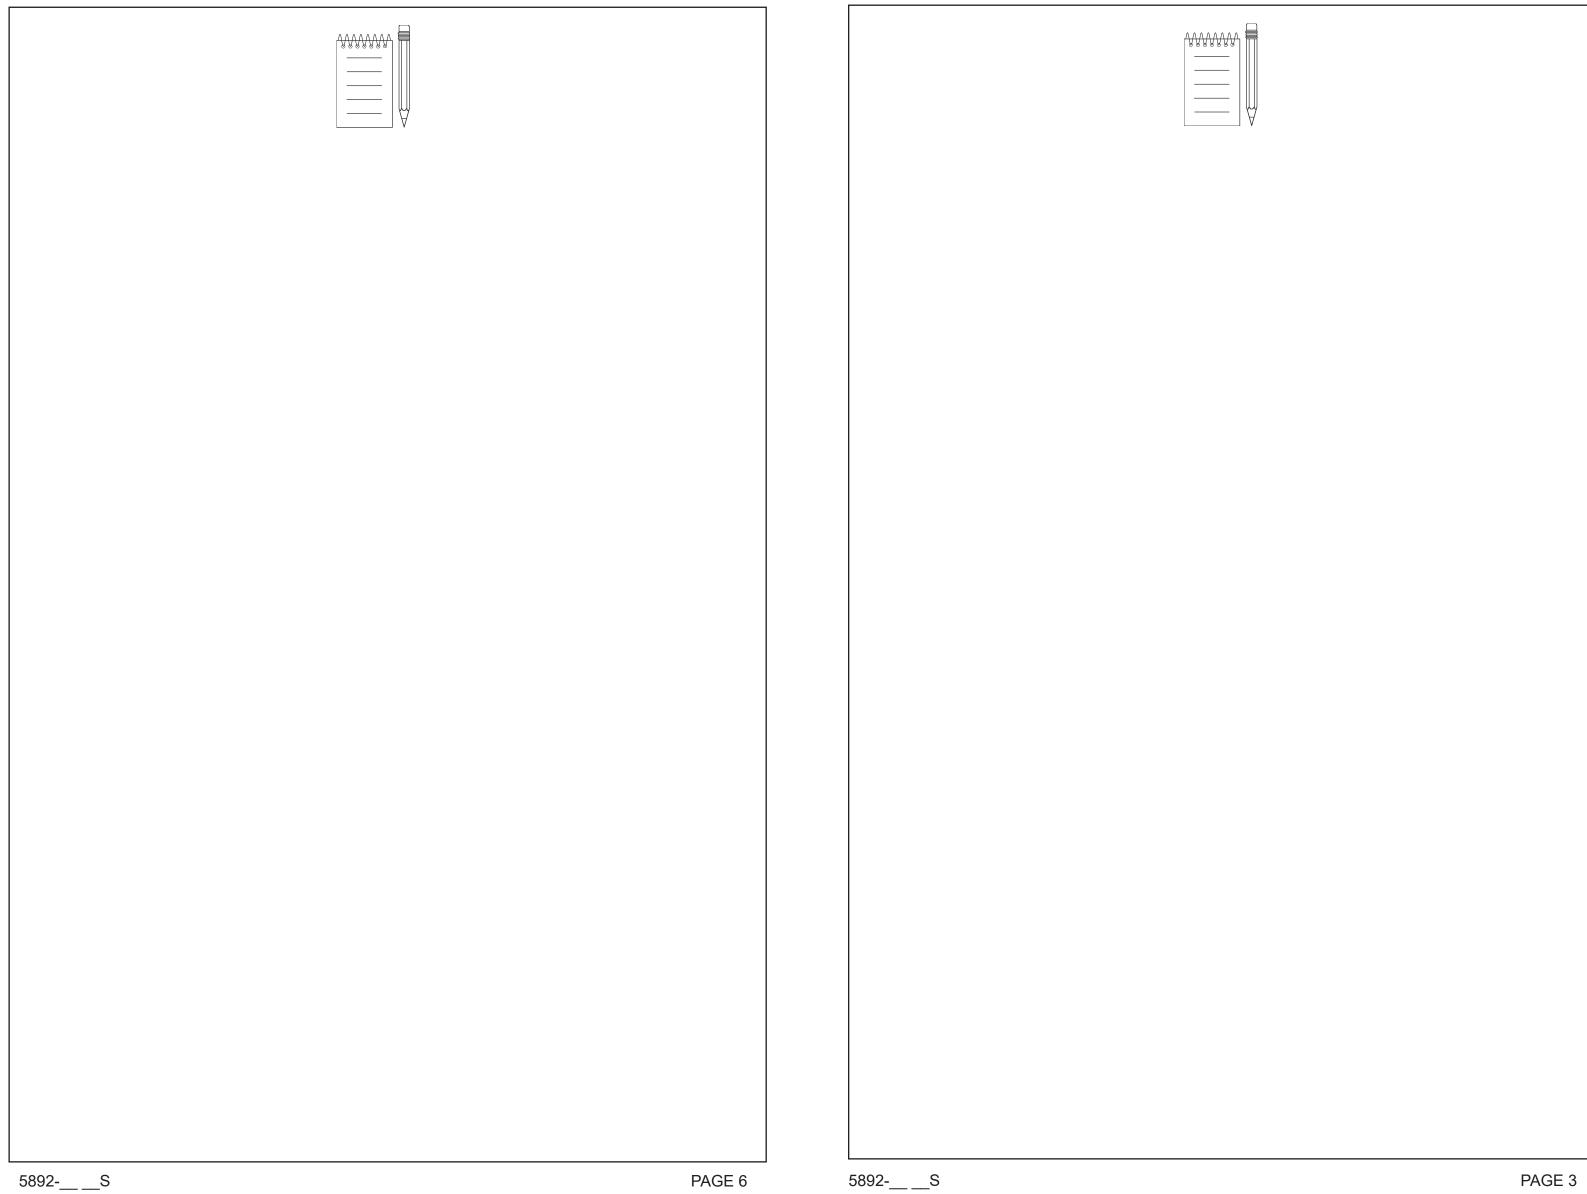


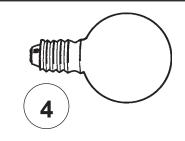


You will need 5 - G16-1/2 25 Watts Recommended 40 Watts Max MIN 90°C SUPPLY CONDUCTORS

Install bulbs and be sure to test fixture BEFORE trimming.



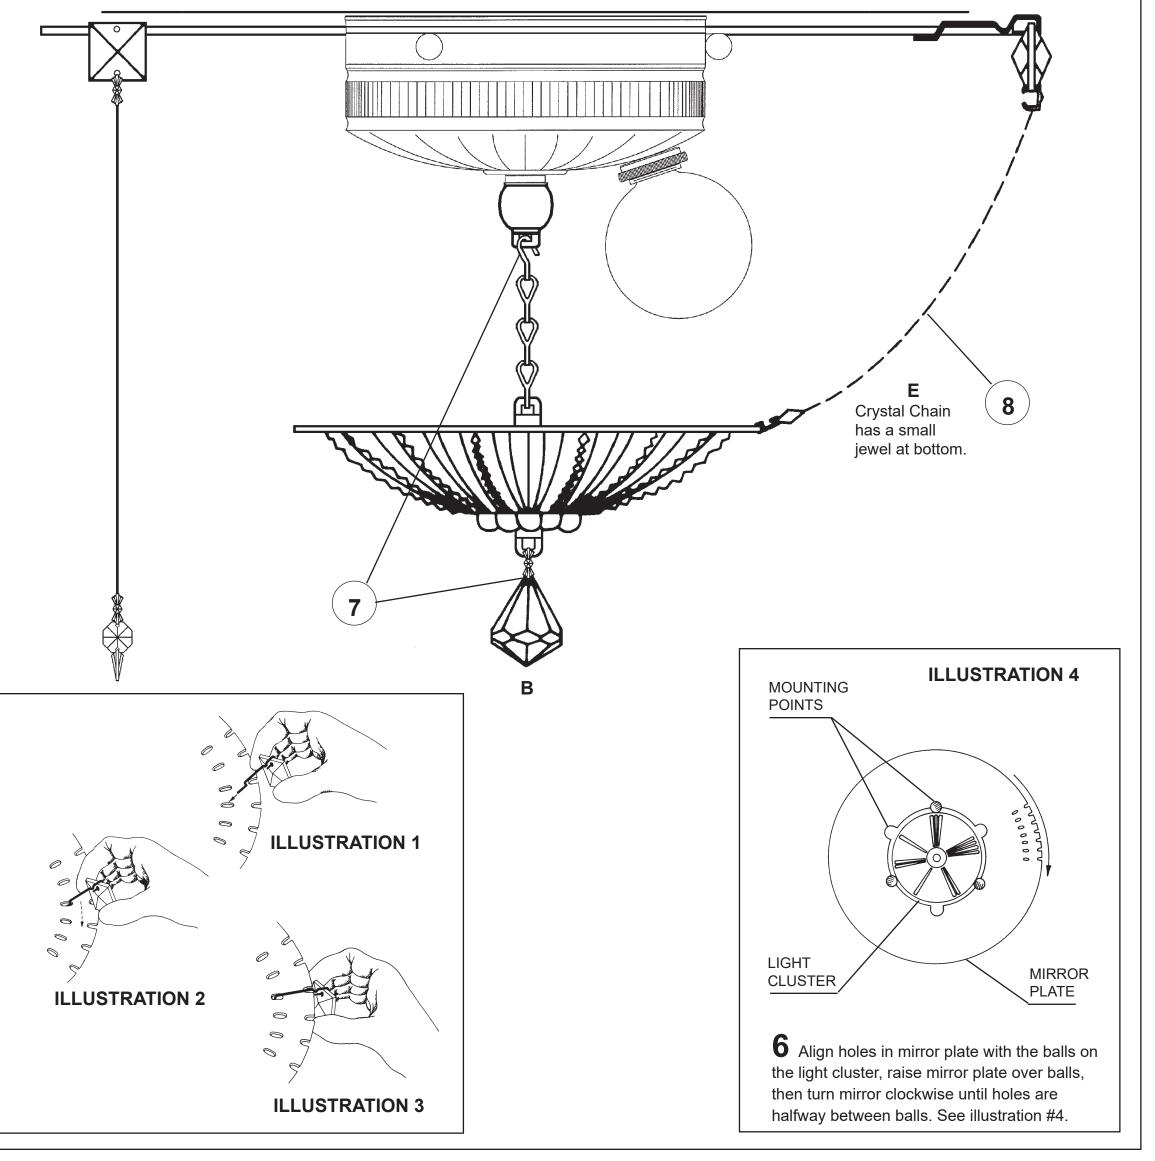

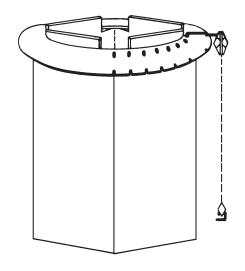

5 Set mirror plate on cardboard stand. Hook all Crystal Chains "E" into slots in the mirror plate so the metal accessories face outwards and the square jewel is on the upper end. See illustrations #1 - #3. NOTE: Allow ends with small jewels to hang loose.