

SARELLA RS8308N- \_\_ \_\_ H



8 Lights  
Diameter: 30"  
Height: 31"  
Hanging Weight: 25lbs.


**T**HIS DESIGN IS THE PROPRIETARY  
TRADE DRESS/TRADEMARK OF  
W SCHONBEK LLC.

 **SCHONBEK** | 1870

 **SCHONBEK** | 1870




								
MAX <u>60</u> W		110-120 V						


**WARNING:**

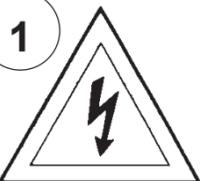1  

**Electrical Danger Turn Power Off**

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

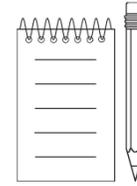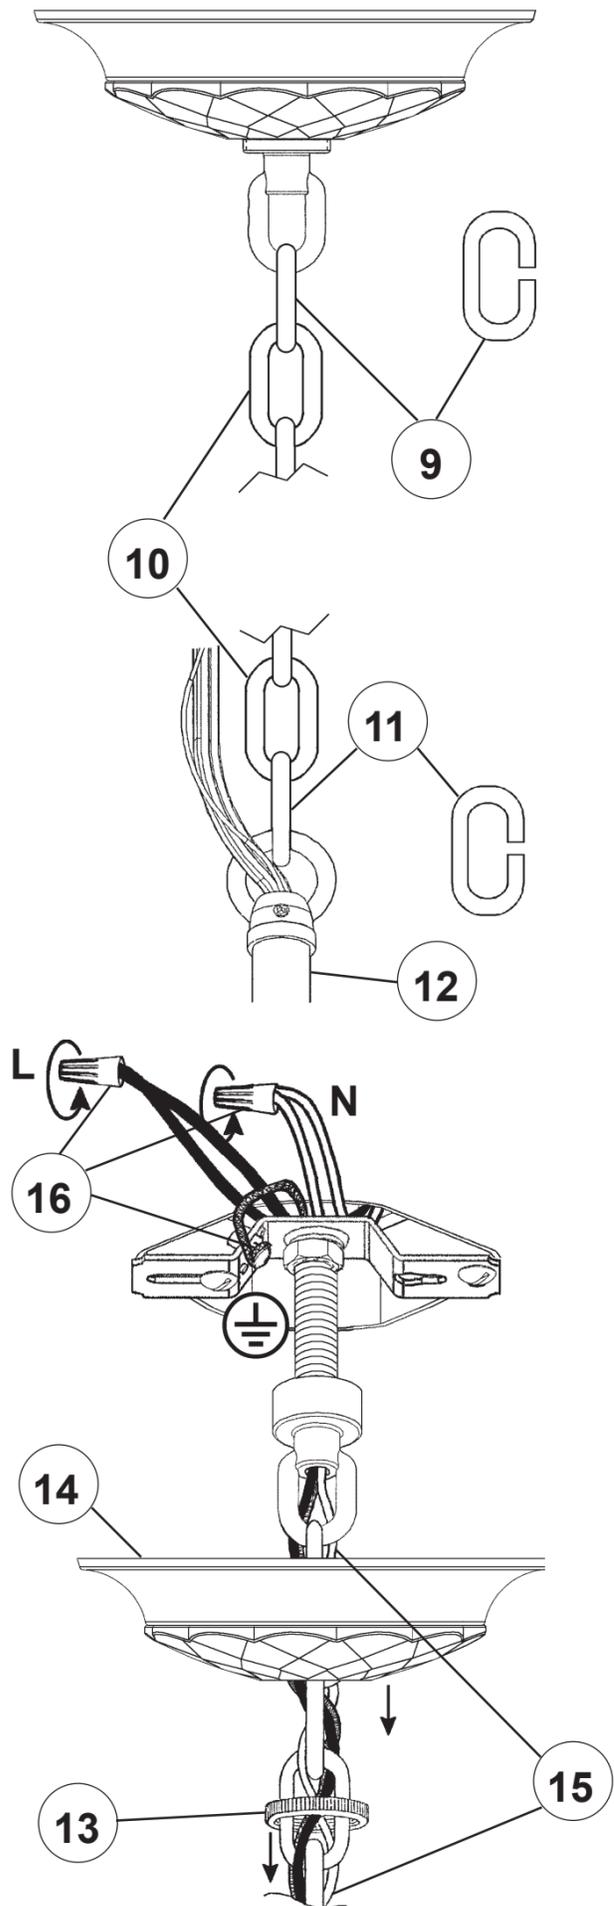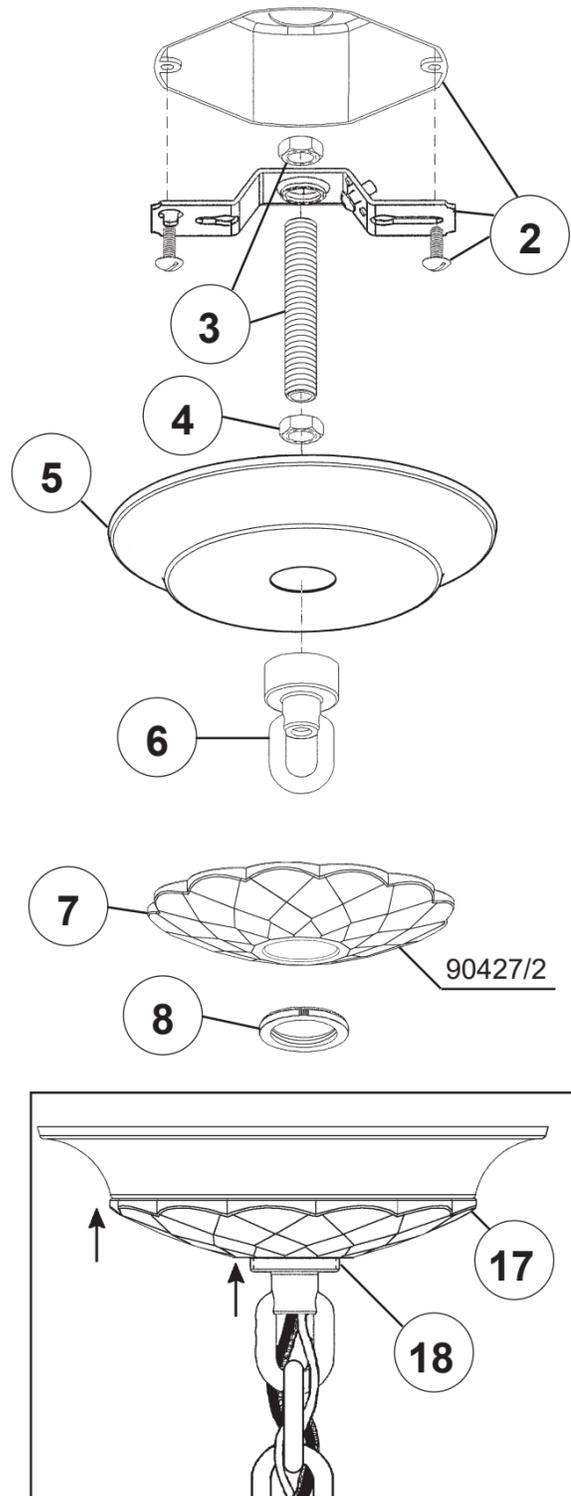


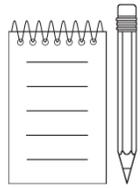


**21**

You will need 8 - B10  
25 Watts Recommended  
60 Watts Max

**Install bulbs and be sure  
to test fixture BEFORE  
trimming.**

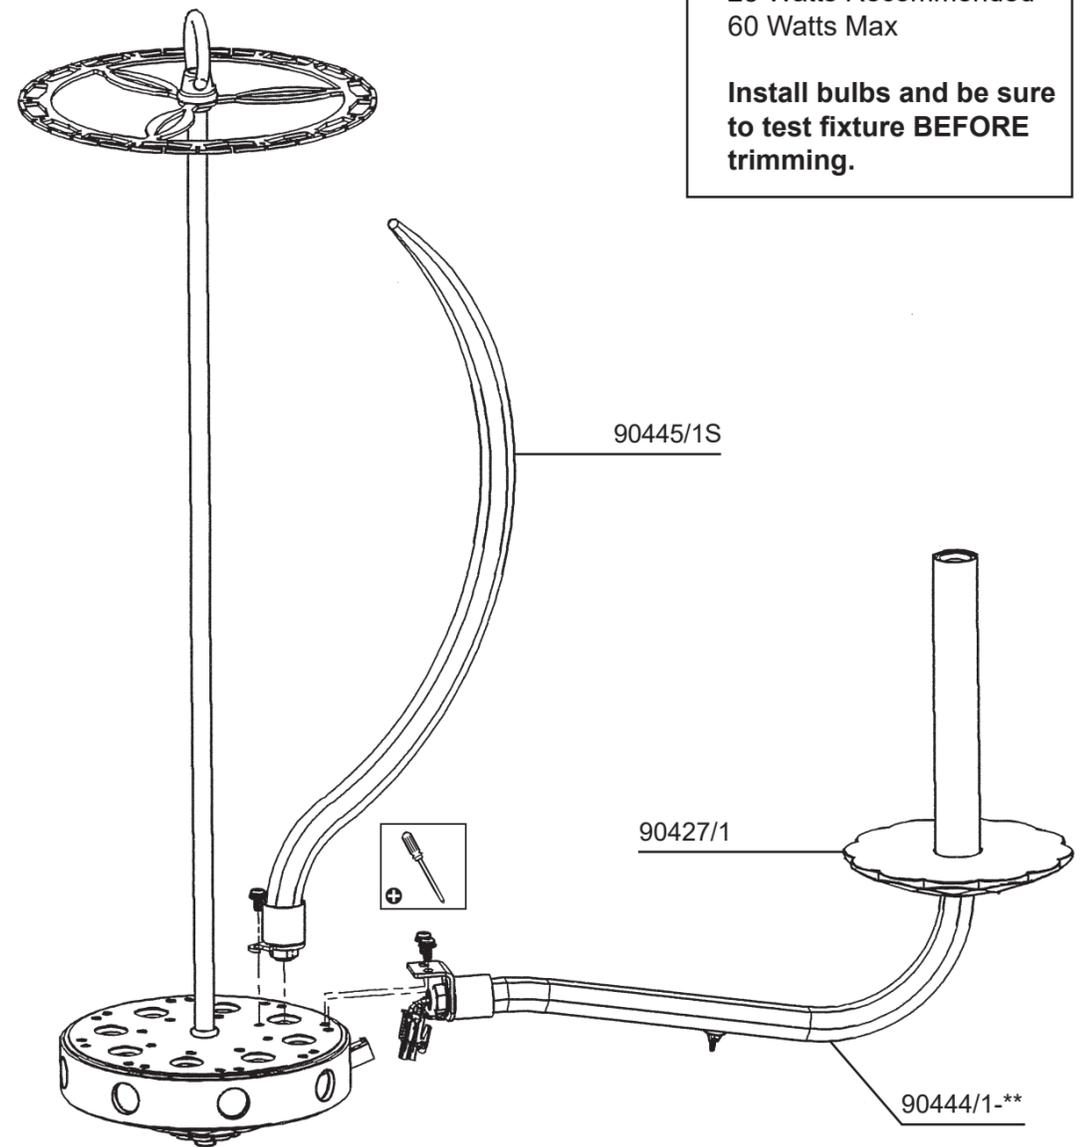


**19** Connect arm wires using plug-in connectors. See detailed illustration.




**20** Push wires into hole and attach arm into place by tightening screws.

**21** Install bobecche on every arm and screw bulbs into all sockets and test fixture before trimming. If any of the bulbs do NOT light - DISCONNECT POWER. Double check the wire connections.


**22** Install scroll(s) into hole pattern in washer. Tighten screw to secure scroll(s) in place.

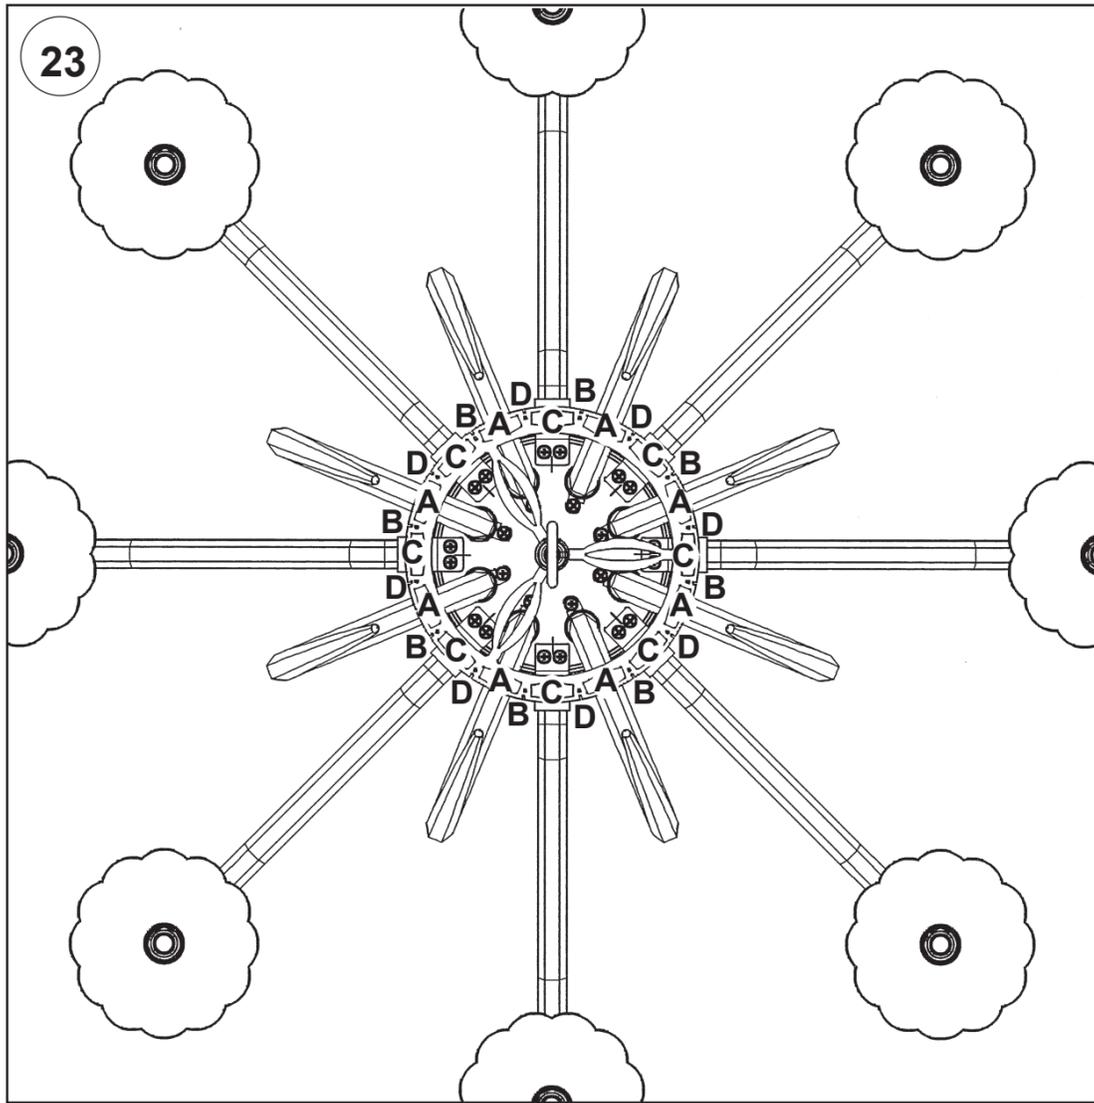

23

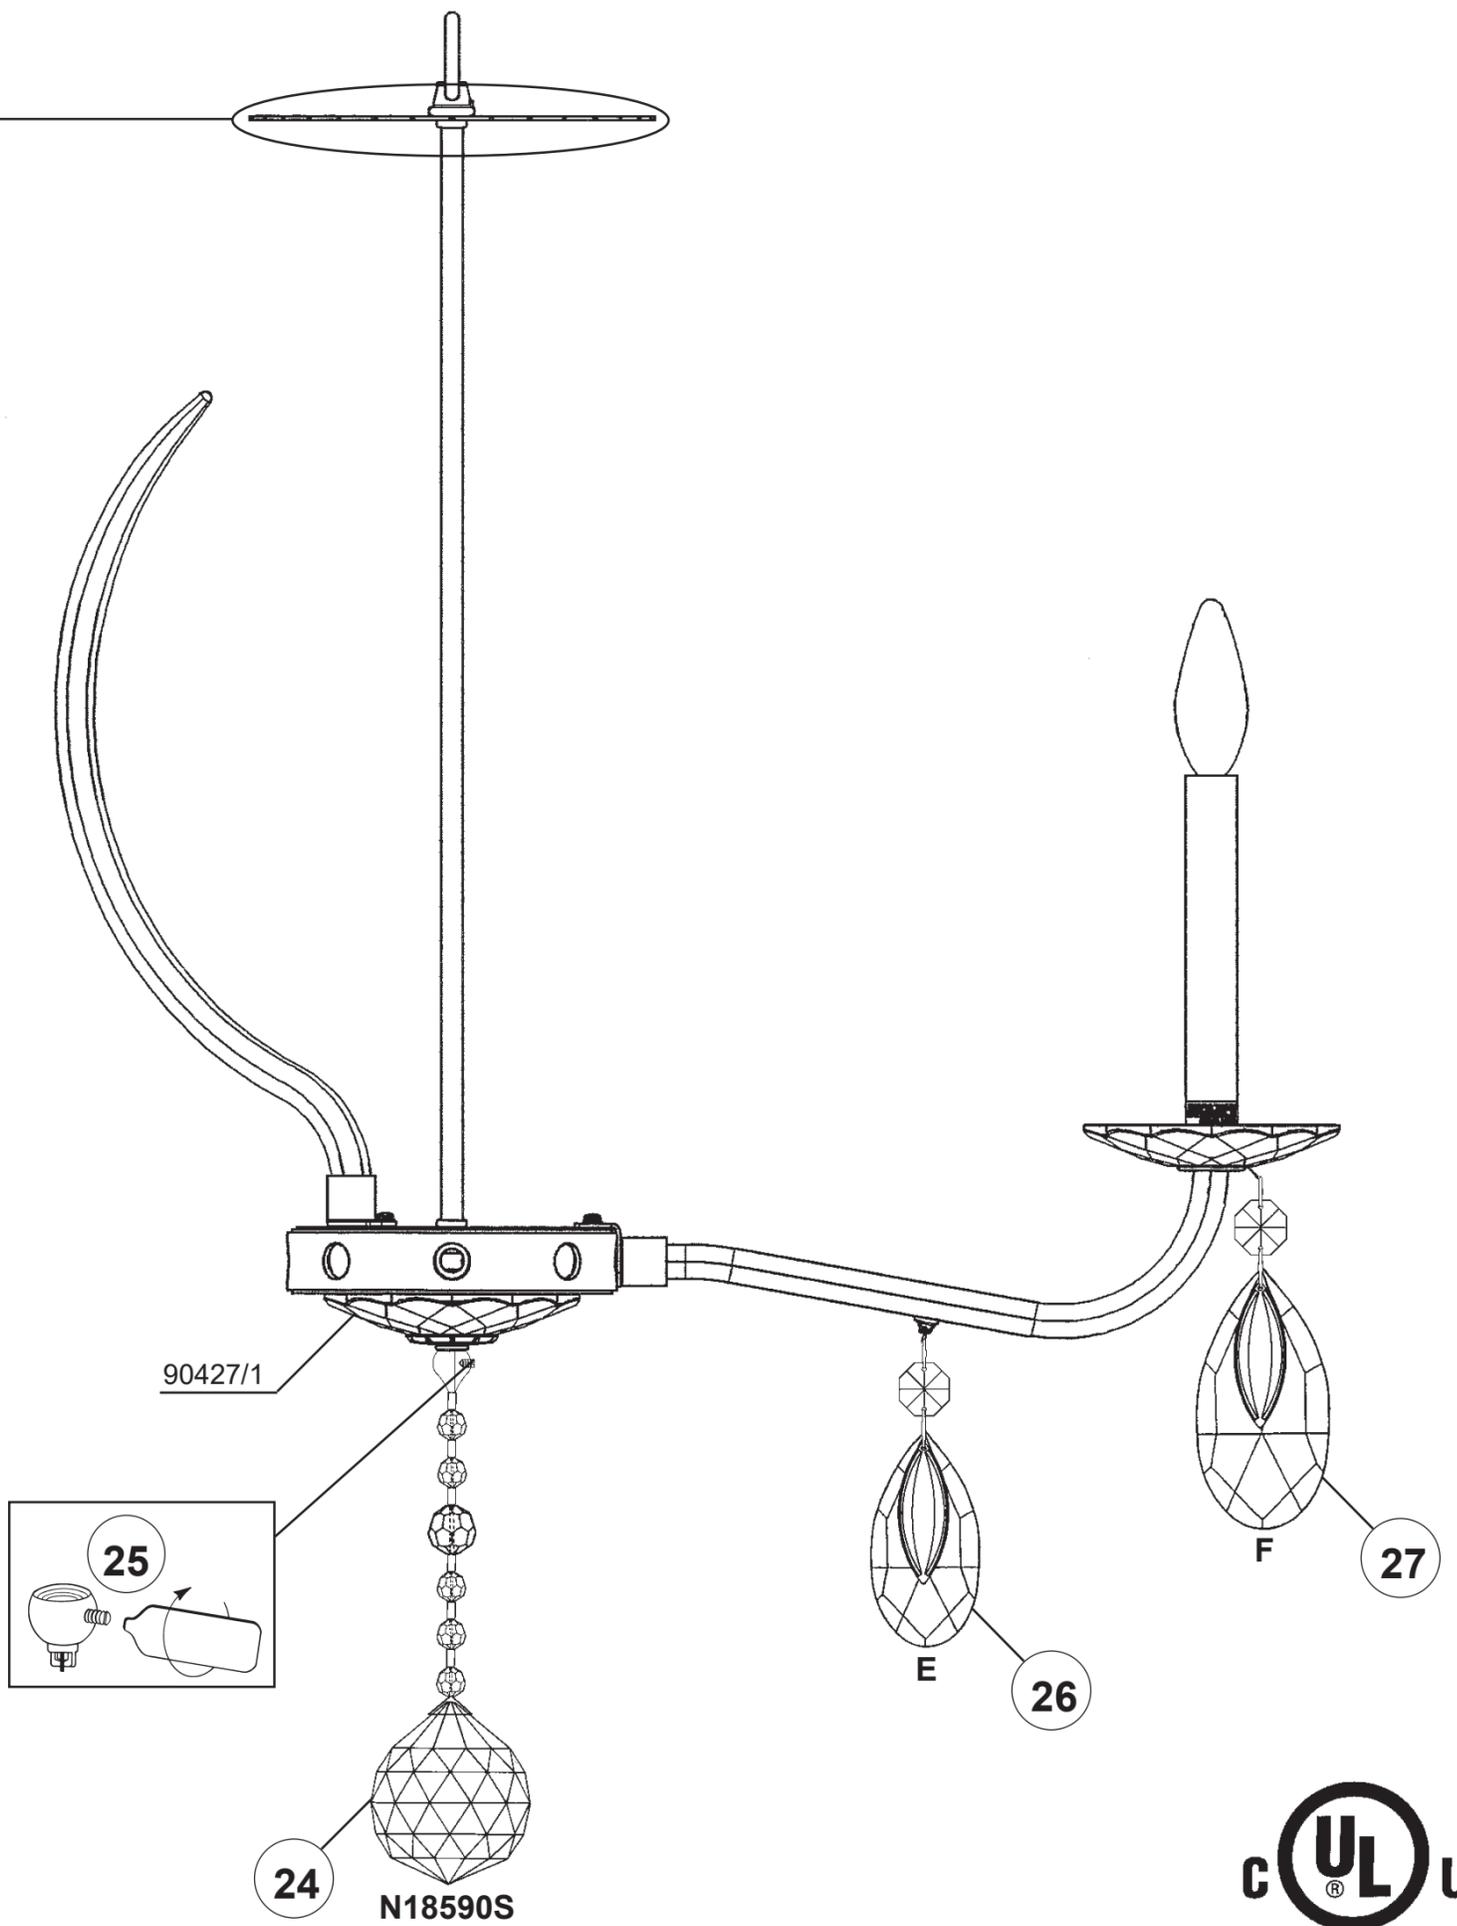

90427/1

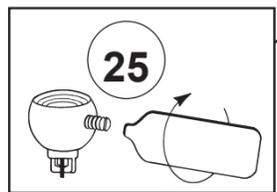

25

24

N18590S

E

26

F

27



SARELLA RS8308N-\_\_ \_\_R



8 Lights  
Diameter: 30"  
Height: 31"  
Hanging Weight: 25lbs.


**T**HIS DESIGN IS THE PROPRIETARY  
TRADE DRESS/TRADEMARK OF  
W SCHONBEK LLC.

 **SCHONBEK** | 1870

 **SCHONBEK** | 1870




								
MAX <u>60</u> W		110-120 V						


**WARNING:**

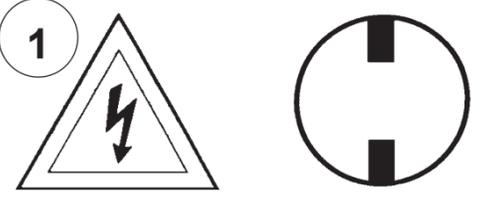1 

**Electrical Danger Turn Power Off**

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

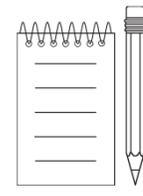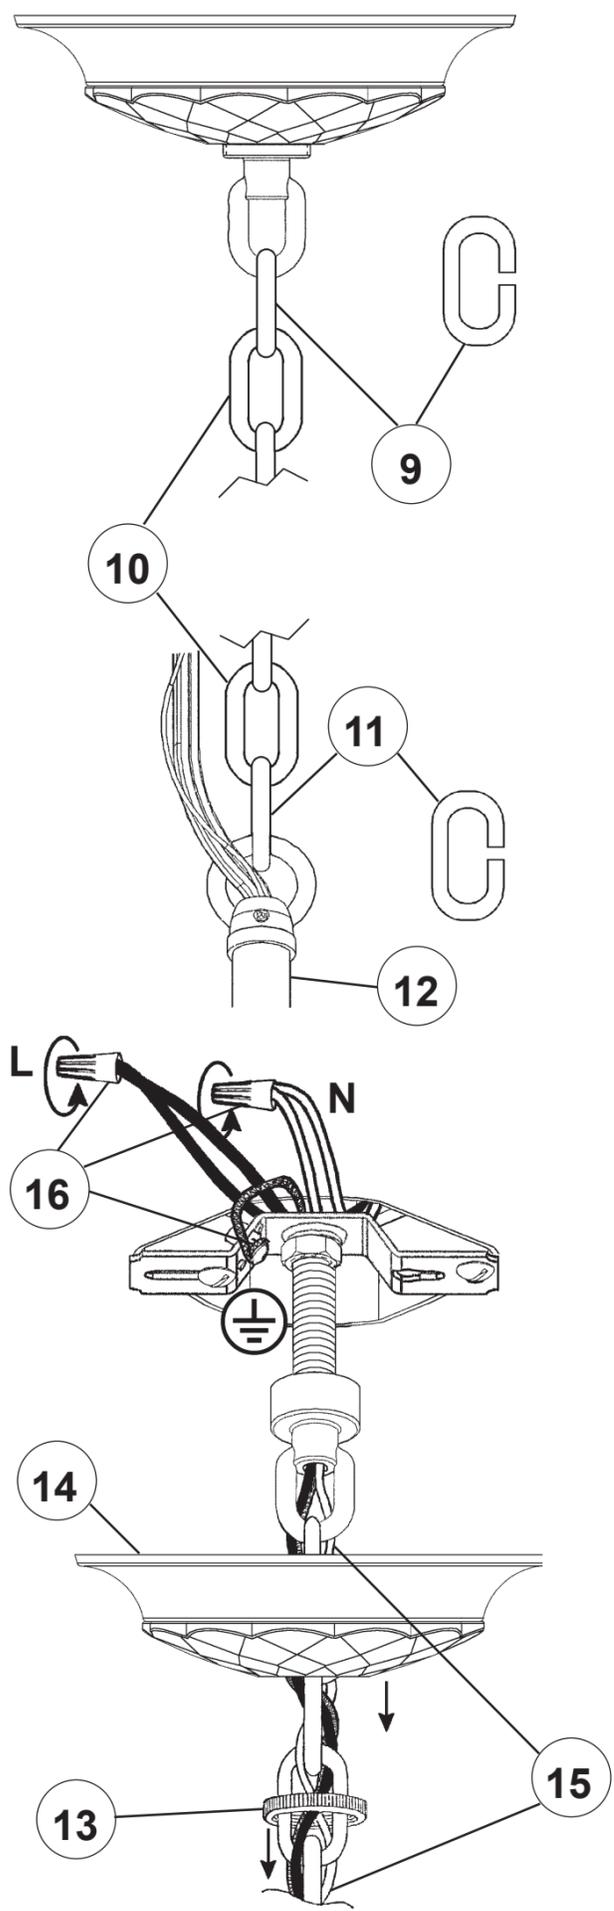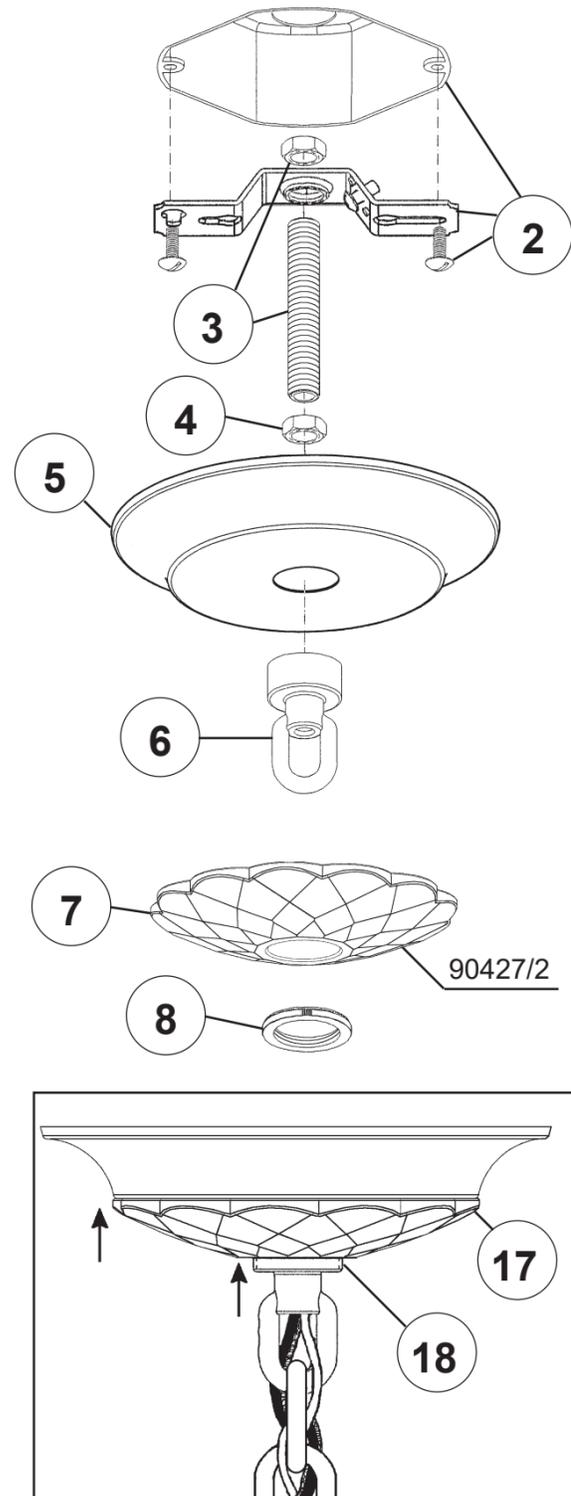


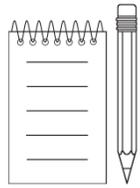


**21**

You will need 8 - B10  
25 Watts Recommended  
60 Watts Max

**Install bulbs and be sure  
to test fixture BEFORE  
trimming.**

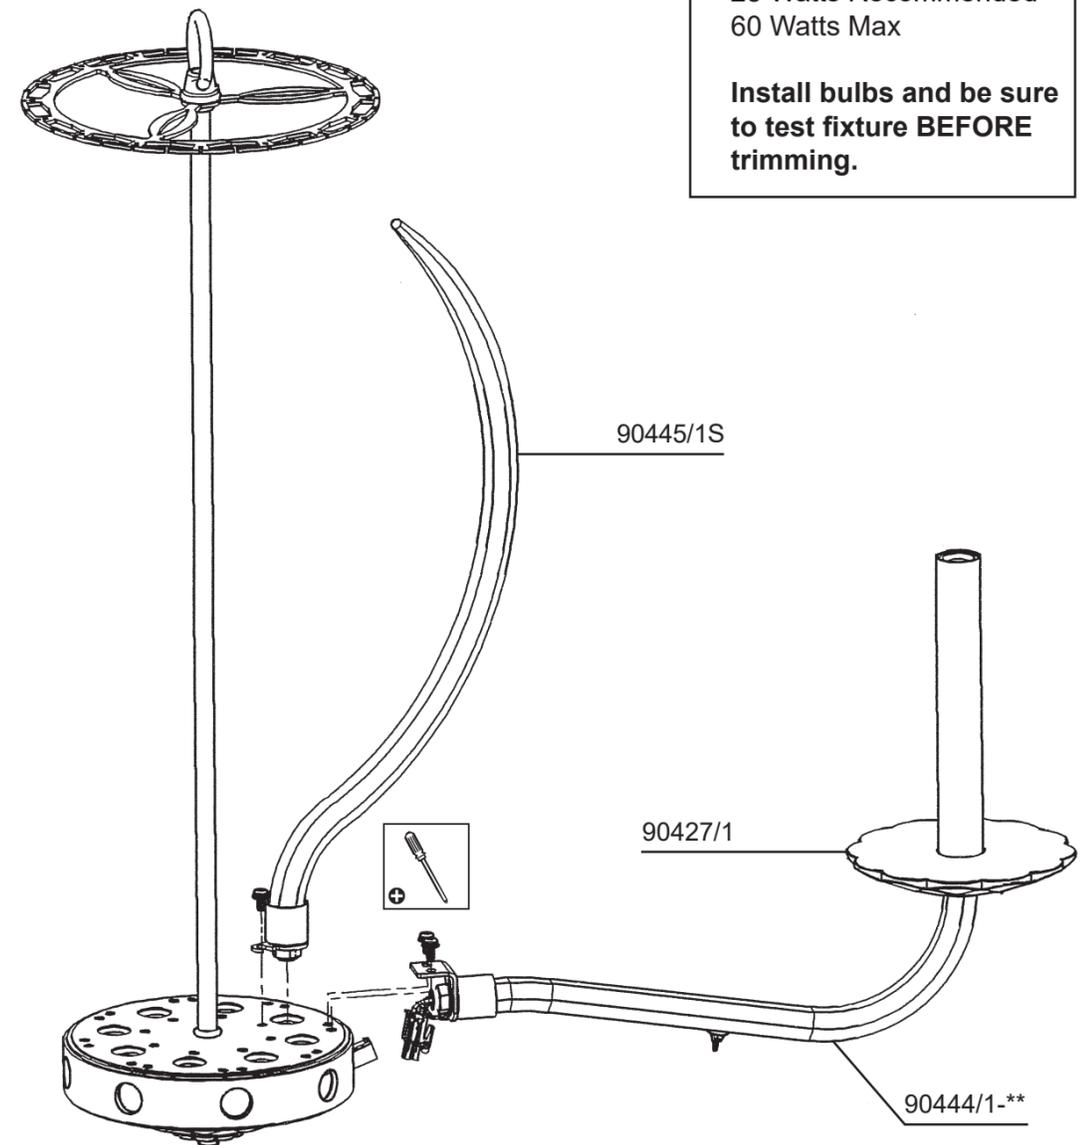


**19** Connect arm wires using plug-in connectors. See detailed illustration.




**20** Push wires into hole and attach arm into place by tightening screws.

**21** Install bobèche on every arm and screw bulbs into all sockets and test fixture before trimming. If any of the bulbs do NOT light - DISCONNECT POWER. Double check the wire connections.

**22** Install scroll(s) into hole pattern in washer. Tighten screw to secure scroll(s) in place.

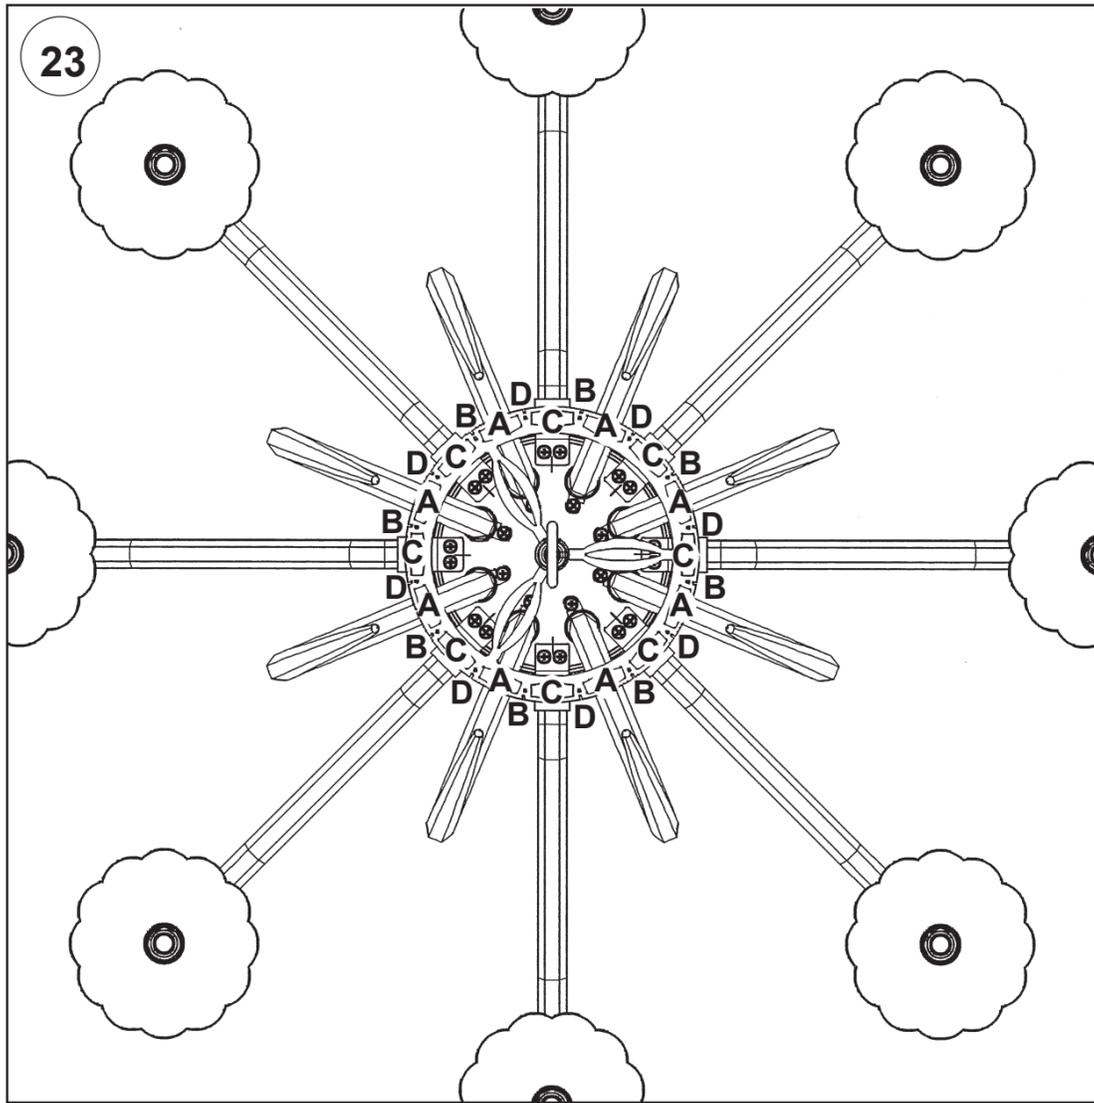

23

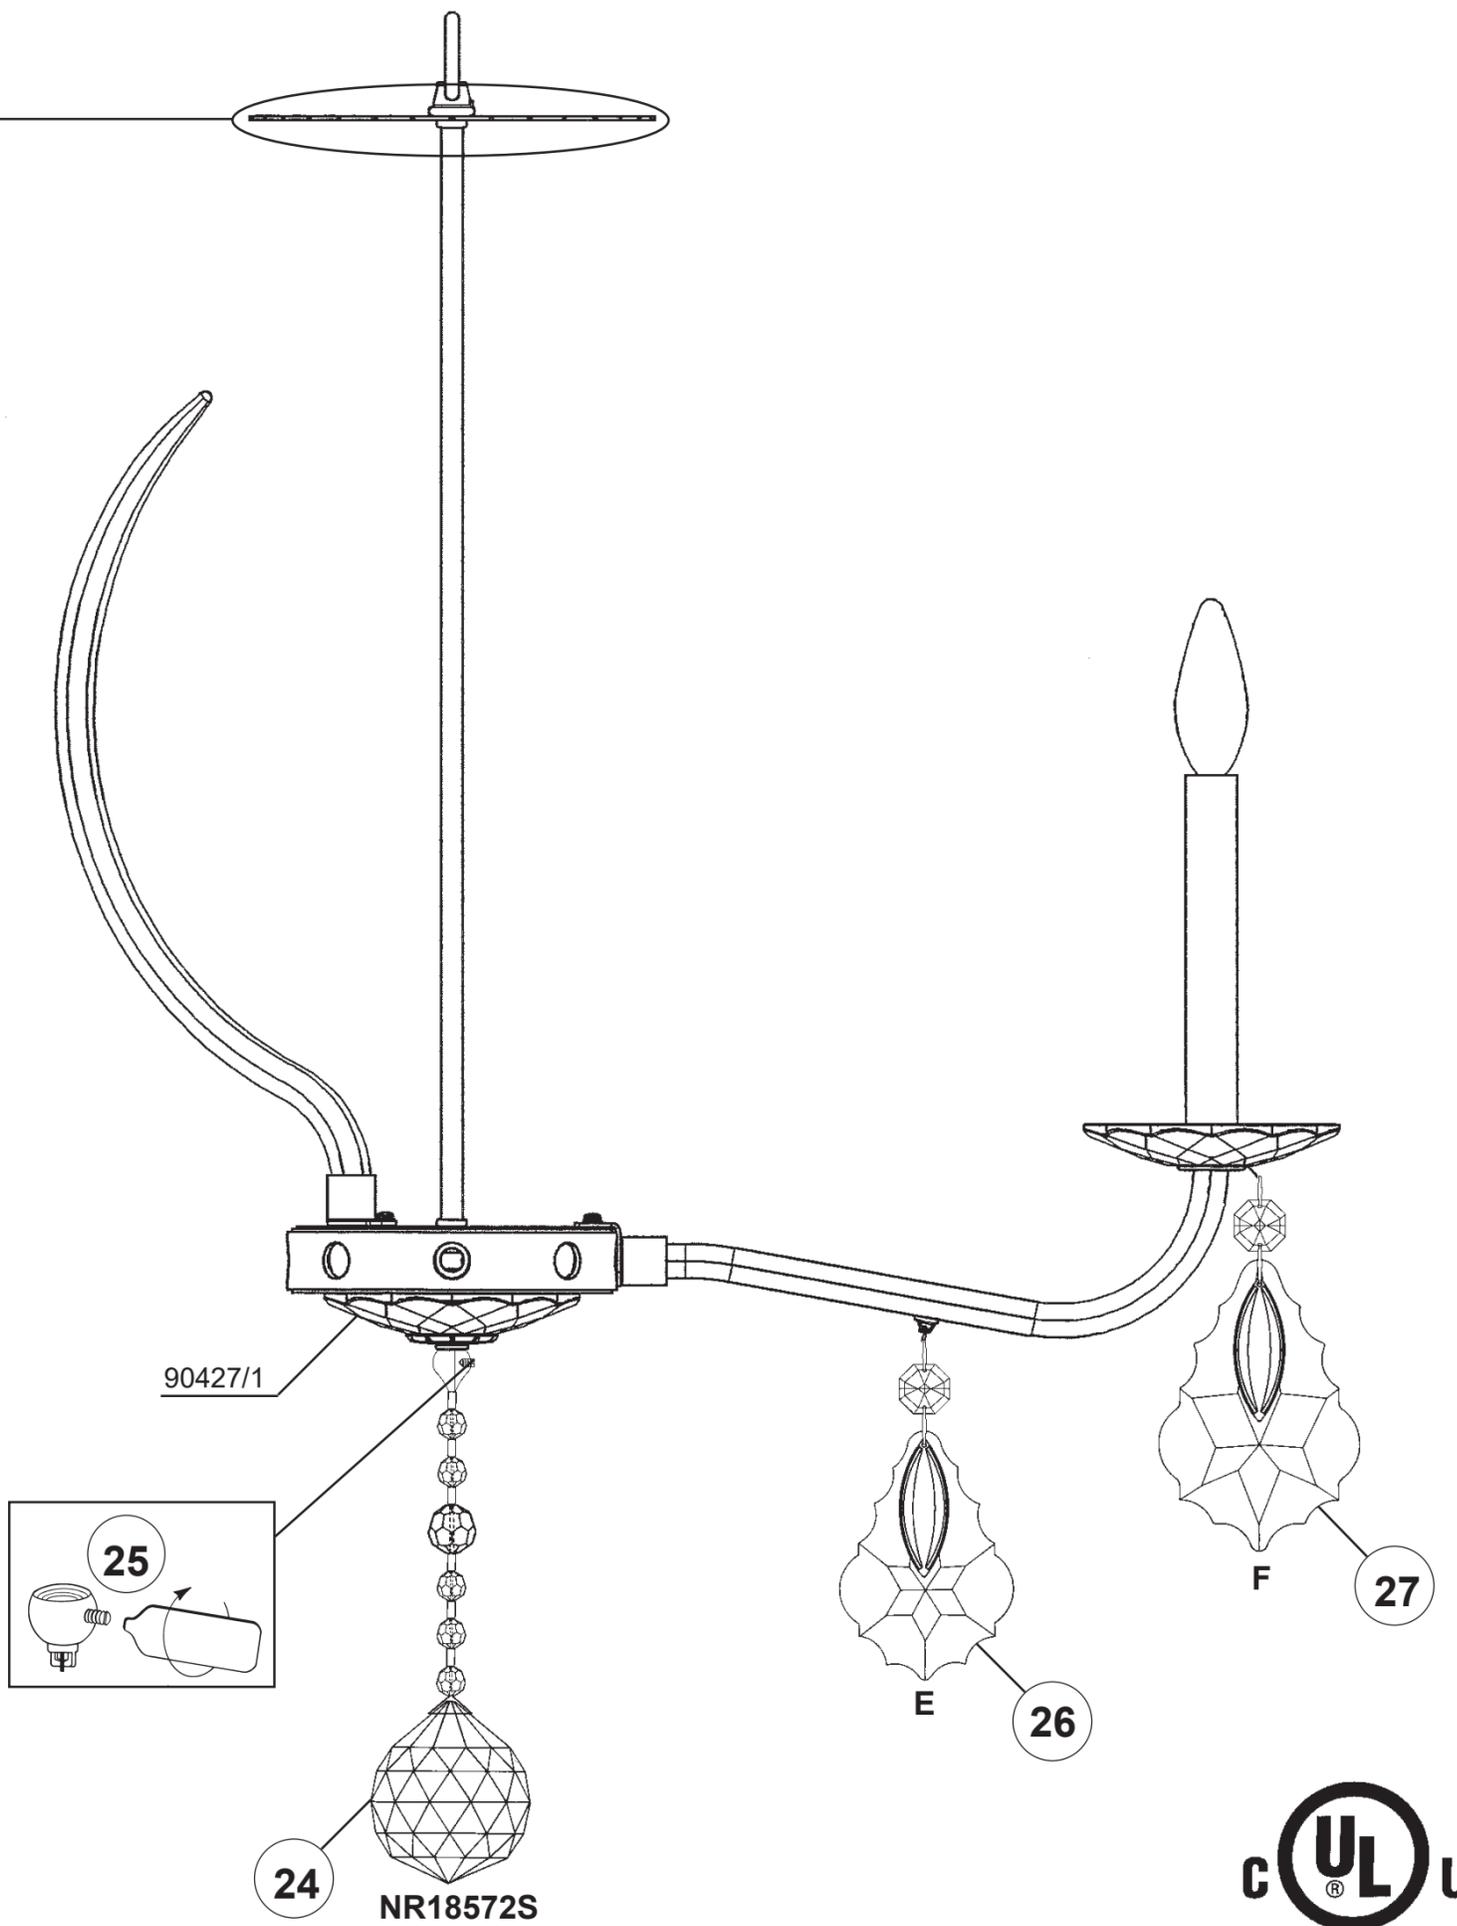

90427/1

25

24

NR18572S

26

27



# SARELLA RS8308N-\_\_ \_\_S



8 Lights  
Diameter: 30"  
Height: 31"  
Hanging Weight: 25lbs.


**T**HIS DESIGN IS THE PROPRIETARY  
TRADE DRESS/TRADEMARK OF  
W SCHONBEK LLC.

 **SCHONBEK** | 1870

 **SCHONBEK** | 1870




								
MAX <u>60</u> W	110-120 V							



**WARNING:**

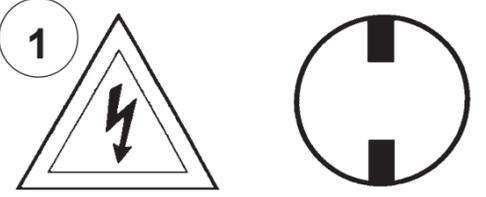1 

**Electrical Danger Turn Power Off**

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

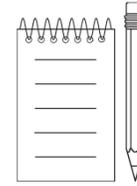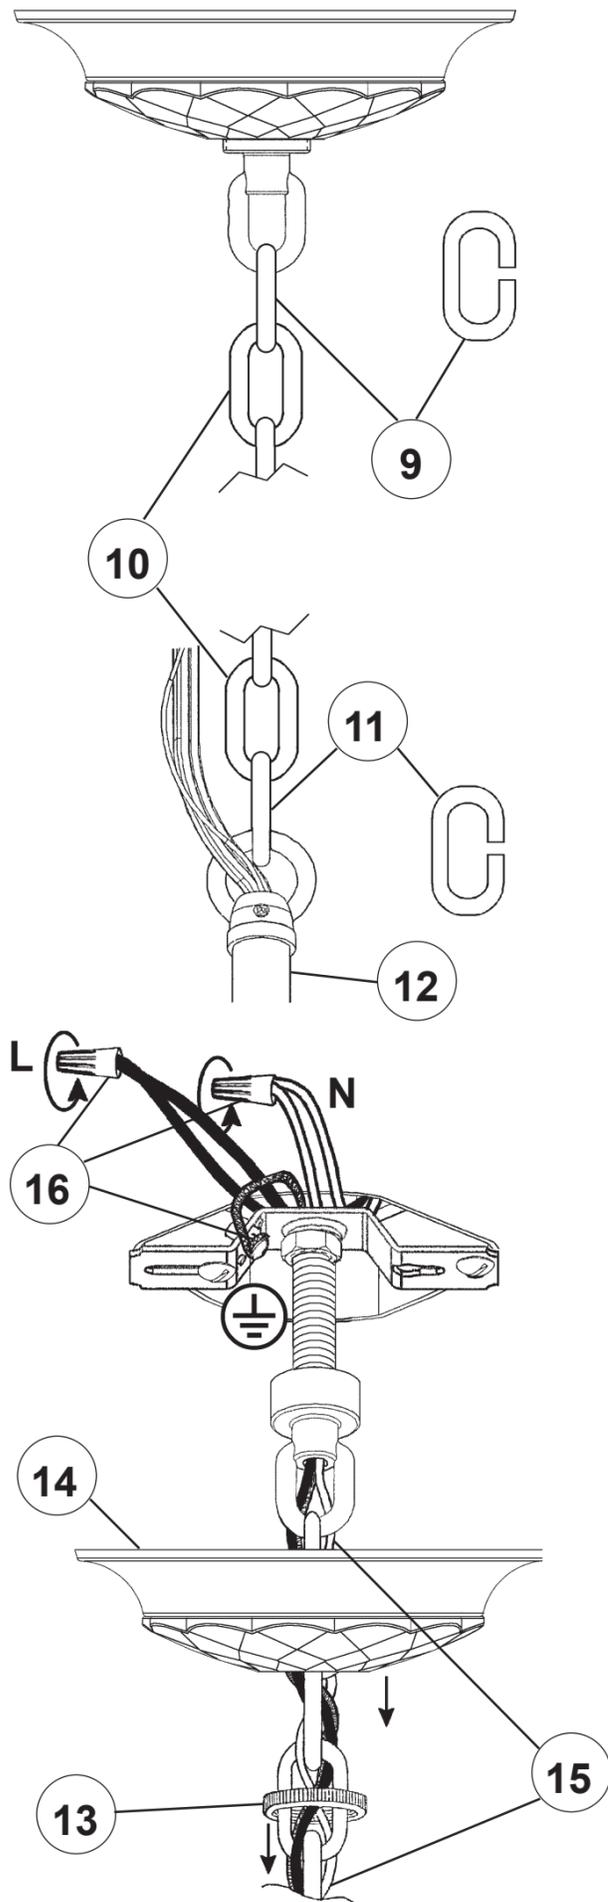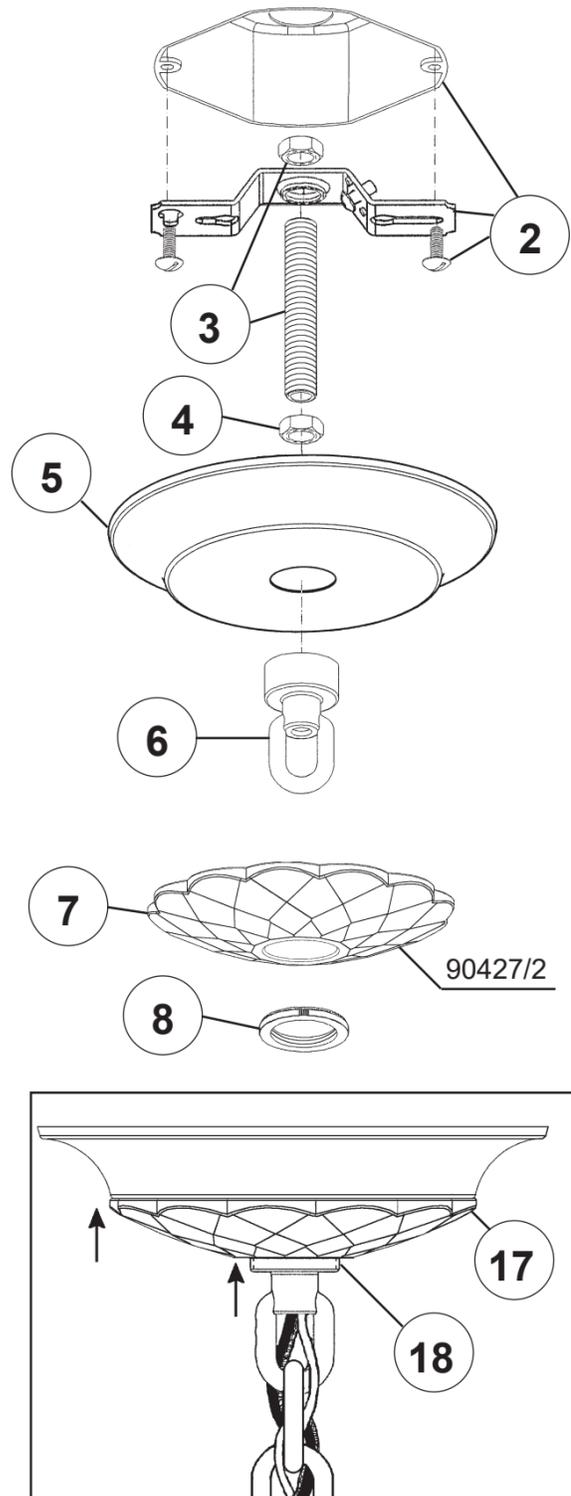


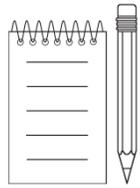


**21**

You will need 8 - B10  
25 Watts Recommended  
60 Watts Max

**Install bulbs and be sure  
to test fixture BEFORE  
trimming.**

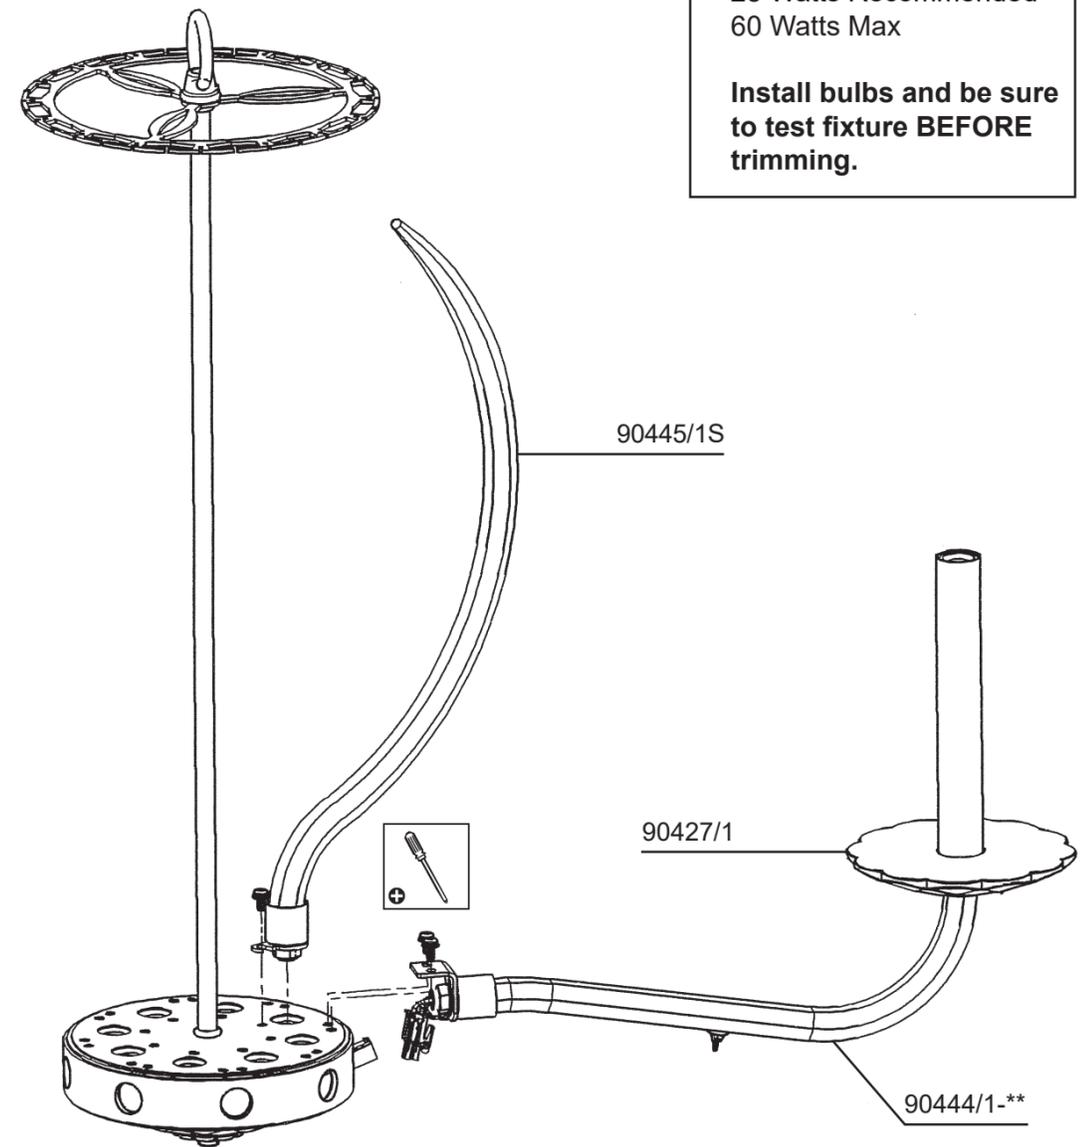

**19** Connect arm wires using plug-in connectors. See detailed illustration.



**20** Push wires into hole and attach arm into place by tightening screws.

**21** Install bobèche on every arm and screw bulbs into all sockets and test fixture before trimming. If any of the bulbs do NOT light - DISCONNECT POWER. Double check the wire connections.

**22** Install scroll(s) into hole pattern in washer. Tighten screw to secure scroll(s) in place.

