


ASSEMBLY INSTRUCTIONS

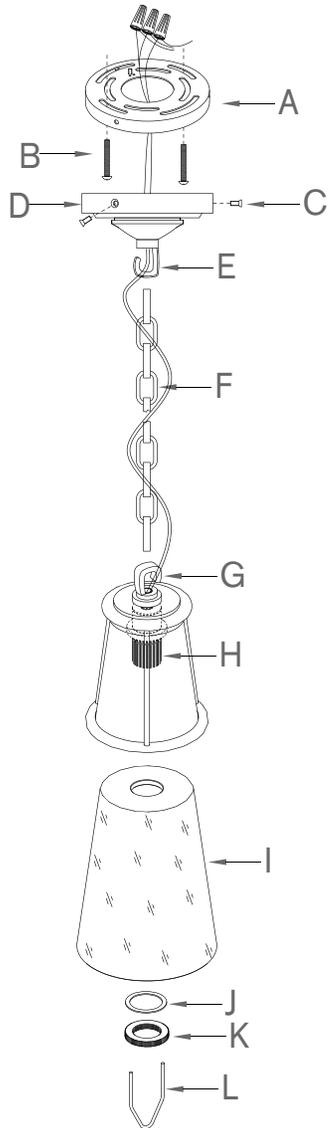

Robinson Small Pendant

Item # TOB5751

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

11. Tuck wire connections neatly into ceiling outlet box.
12. Attach canopy (D) to the affixed mounting plate (A) and secure canopy screws (C).
13. Remove socket ring (K) and washer (J) from threaded socket (H) by using wrench (L), carefully place shade (I) onto threaded socket (H) and secure by replacing washer (J) and socket ring (K).
14. Tighten with wrench (L). DO NOT OVER TIGHTEN OTHERWISE GLASS WILL BE DAMAGE.
15. Insert light bulb (not included) into socket.

*** Clean with a dry, soft cloth only. Do not use harsh abrasives or chemical agents.

