

Crosby Large 9 & Medium 6 Chandelier**700CRBY_****1.0**

CHANDELIER

GENERAL PRODUCT INFORMATION:

This product is suitable for indoor locations.

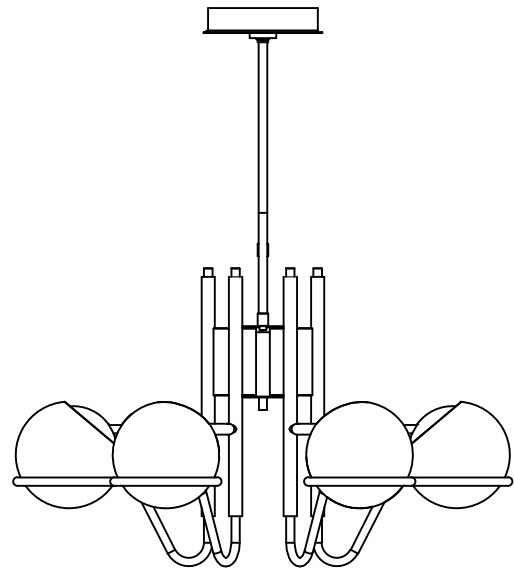
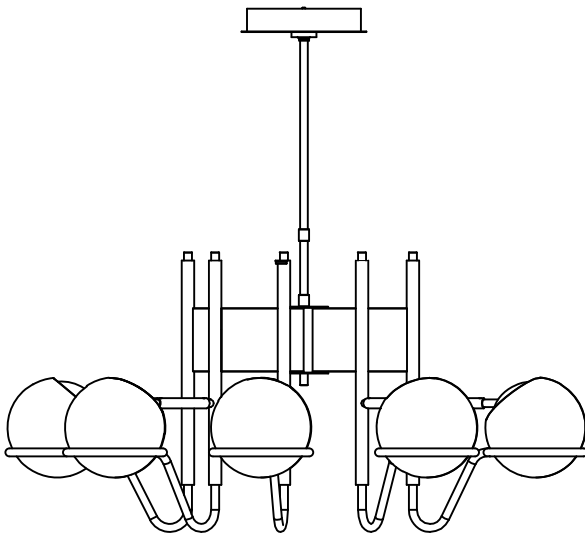
This product can be dimmed with a standard electronic dimmer.

This instruction shows a typical installation.

CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

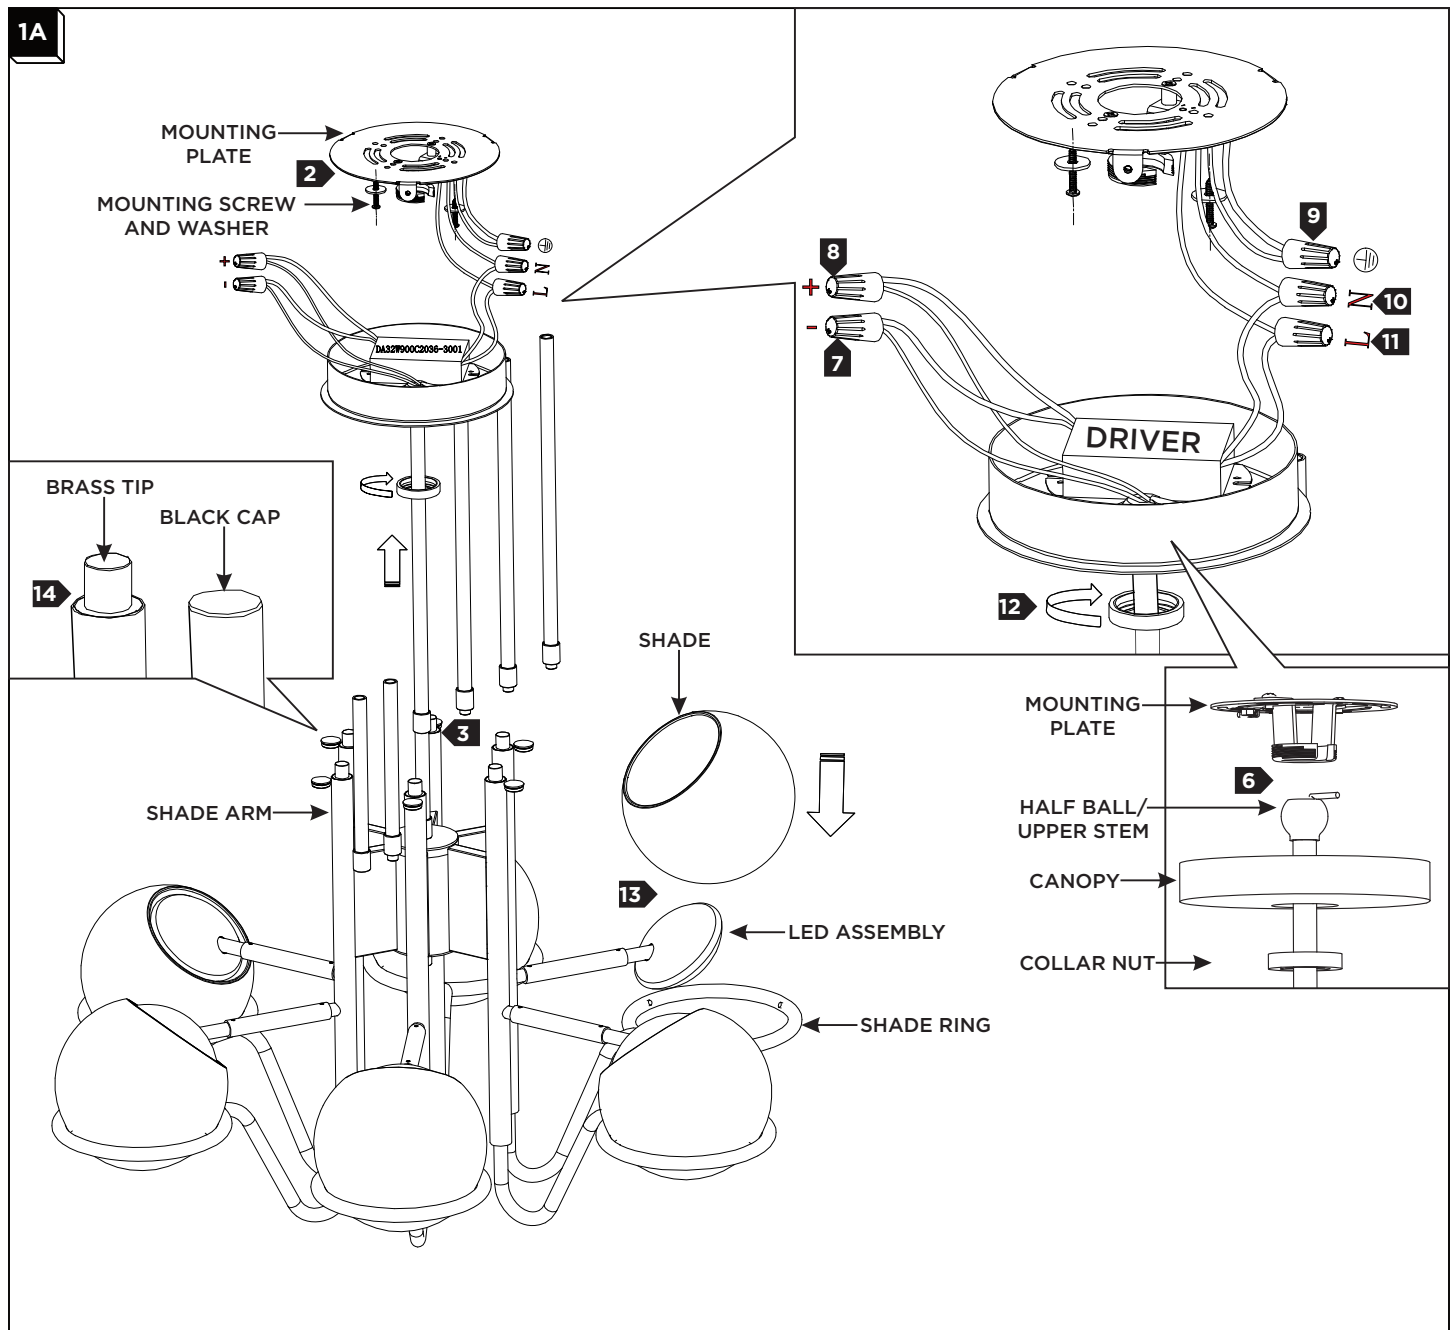
2 PERSON INSTALL**SAVE THESE INSTRUCTIONS!**

7400 Linder Ave., Skokie, IL 60077

T 847.410.4400 | F 847.410.4500

www.techlighting.com

Install the Fixture



- 1 Remove the mounting plate and driver from the canopy.
- 2 Secure the mounting plate to ceiling. **CAUTION: mounting screws must be screwed into a solid structure capable of supporting the fixtures weight.**
- 3 Determine the desired height of the fixture using the provided stems and half ball/upper stem and assemble them by screwing them together.
- 4 Slide the canopy, then the collar nut onto the half ball/stem assembly.
- 5 Feed the fixture wires through the stem assembly, then screw the stem assembly to the top of the fixture base.
- 6 Seat the half ball into the mounting plate ensuring no wires are being pinched.
- 7 Connect the negative (-) fixture wire to the negative (-) output driver wire with a wire nut.
- 8 Connect the positive (+) fixture wire to the positive (+) output driver wire with a wire nut.
- 9 Connect the fixture to a suitable ground in accordance with local electrical codes.
- 10 Connect the white input driver wire to the neutral power line wire with a wire nut.
- 11 Connect the black input driver wire to the hot power line wire with a wire nut.
- 12 Neatly place the driver, wire, and wire nut connections inside the canopy/electrical box, then slide the canopy up over the mounting plate and secure in place with the collar nut.
- 13 Install the shades onto the LED assemblies and place them securely in the shade ring.
- 14 The brass tip on top of the shade arms may be replaced with the black caps if desired.