


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER PRIOR TO INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

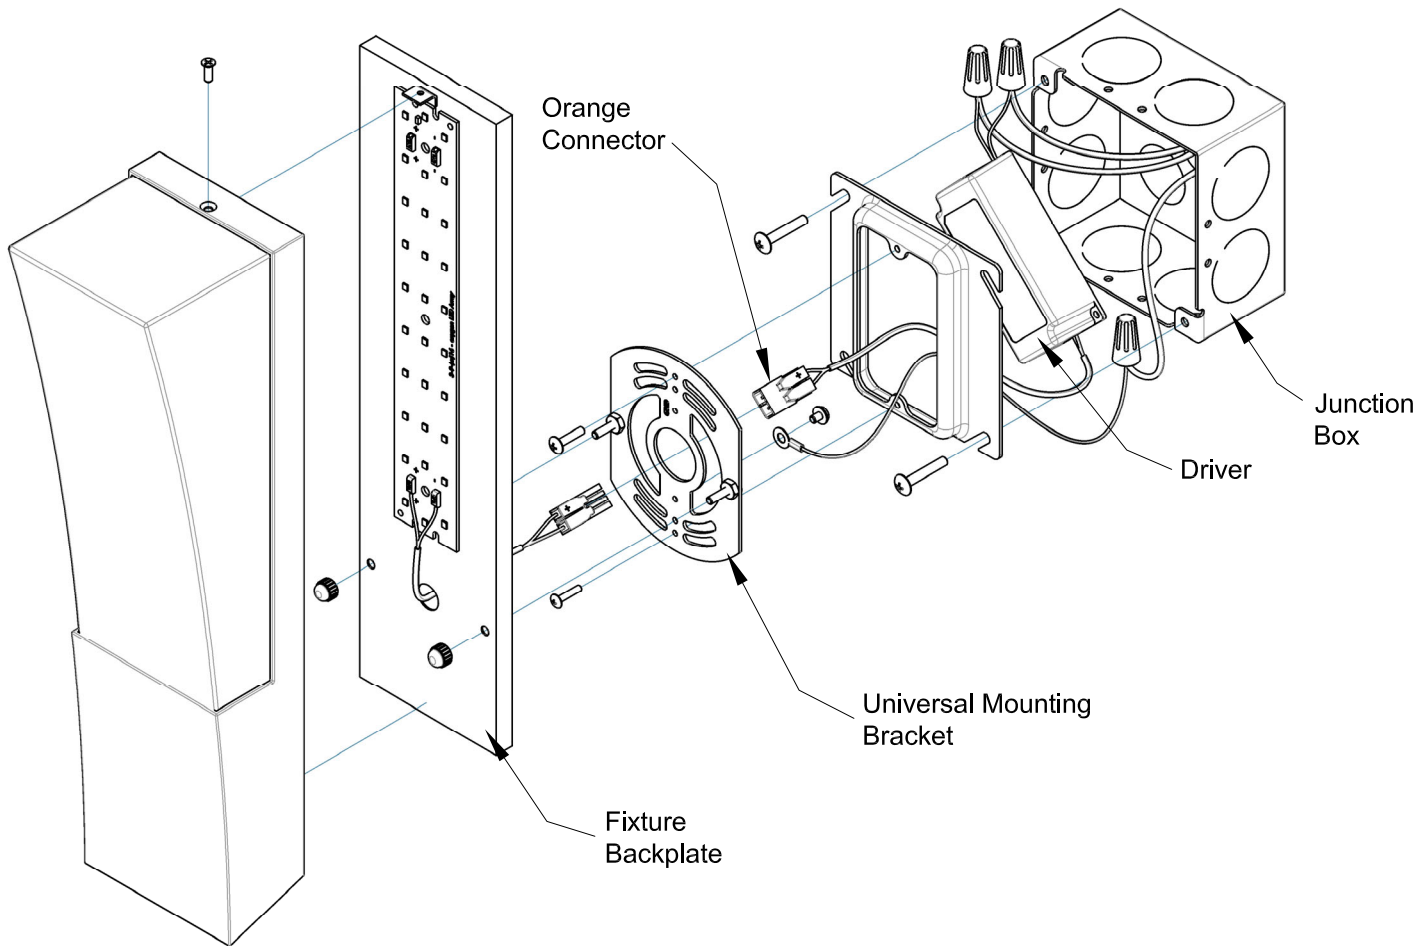

Installation Steps

1. Carefully unpack your new fixture and lay out all the parts on clean surface. Take care not to lose any small parts necessary for installation.
2. Make wire connections and place driver inside j-box, leaving the orange connector accessible. Attach ground wire to building ground wire using a wire nut.
 - **FOR DIMMING:** If using a dimmer (not included), follow wiring instructions enclosed with dimmer.
Note: For phase dimming, cap off purple and gray wires as they are only used for 0-10V dimming. Double check wiring. Tuck the wire connections neatly into the junction box.
 - **FOR NON-DIMMING:** If not using a dimming switch, with wire nuts, cap off purple and gray wires individually. Wire neutral (white) wire with neutral wire, hot wire (black) with hot wire. Double check wiring. Tuck the wire connections neatly into the junction box along with the driver.
3. The universal mounting bracket contains several pairs of threaded holes. Find the pair of holes that match the hole spacing in the fixture backplate, and secure the mounting bracket to the junction box by threading the two j-box screws through the key holes.
4. Connect the orange connector from the driver to the orange connector from the fixture.
5. Place fixture backplate over the mounting screws, so the screws pass through the key holes. Thread the thumb screws onto the mounting screws until the fixture is tight against the wall.
6. Place the fixture over the back plate bottom first. Install the screw on top of fixture to secure it to the wall.
7. Turn power back on at fuse or circuit box.

**CRESCENT scone
3-512-xx**

OXYGEN LIGHTING ©

oxygen

OXYGEN LIGHTING
201 RAILHEAD RD, FORT WORTH, TX 76106
TEL. (877) 607-0202 FAX (877) 607-0203
WWW.OXYGENLIGHTING.COM

ASSEMBLY INSTRUCTIONS