



ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER PRIOR TO INSTALLING OR SERVICING THIS FIXTURE.

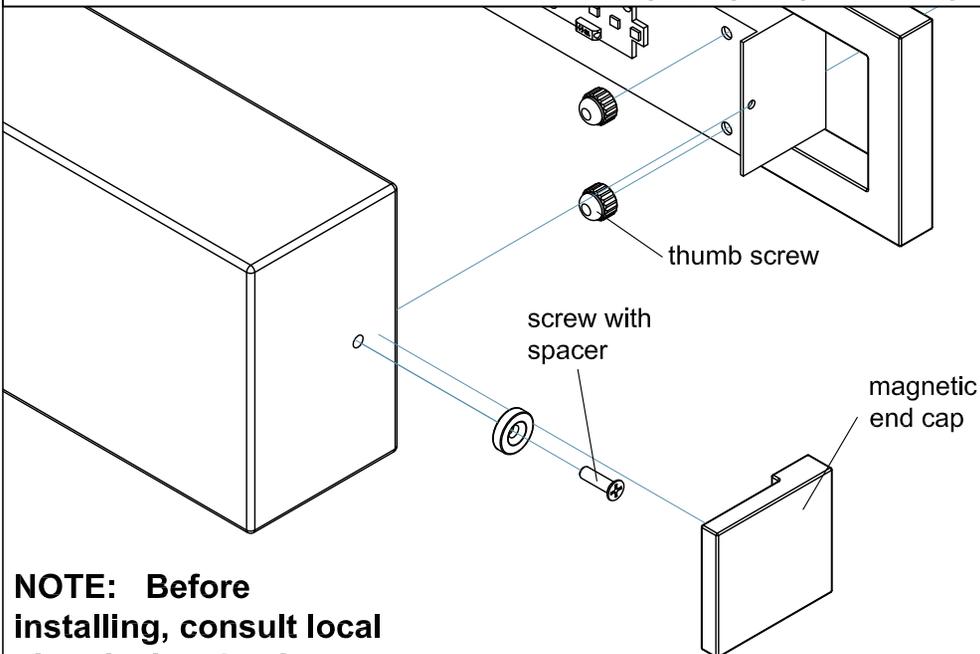

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

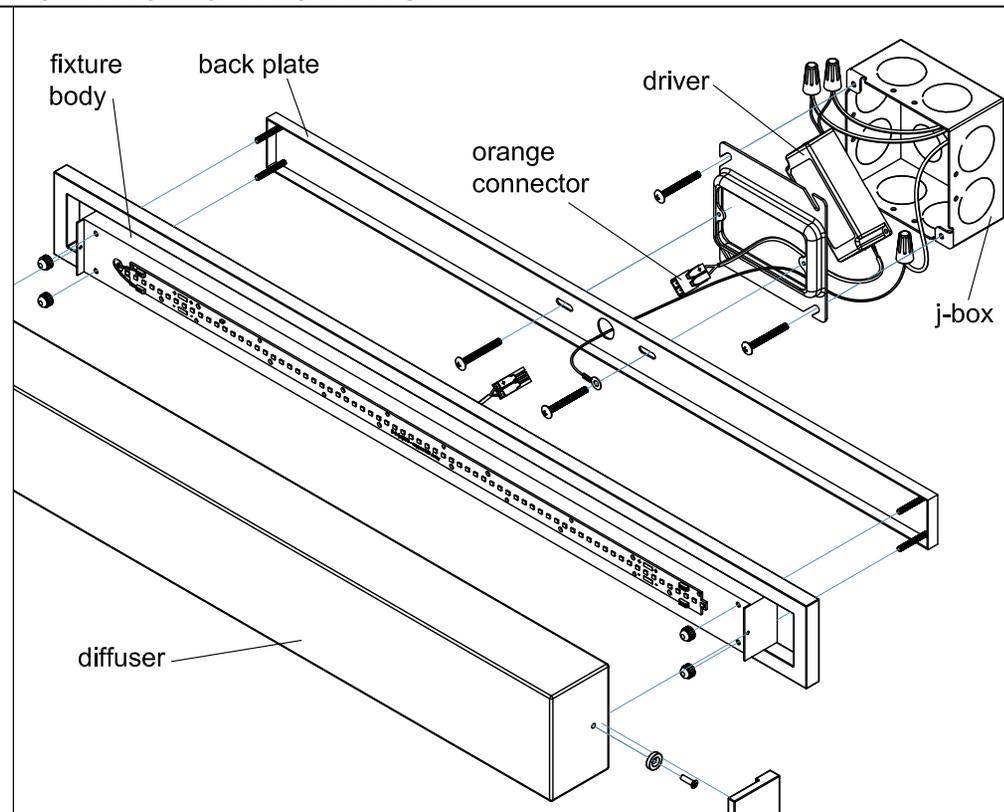

Installation Steps

1. Carefully unpack your new fixture and lay out all the parts on clean surface. Take care not to lose any small parts necessary for installation.
2. Place driver into the junction box and make wire connections. Refer to driver label for wire identification. Attach ground wire to building ground wire using a wire nut or attach them to the mounting plate with a green ground screw.
 - **FOR DIMMING:** If using a dimmer (not included), follow wiring instructions enclosed with dimmer. Double check wiring. Tuck the wire connections neatly into the junction box.
 - **FOR NON-DIMMING:** If not using a dimming switch, with wire nuts, cap off purple and gray wires individually. Connect white wire (neutral) with white wire, black wire (hot) with black wire. Double check wiring. Tuck the wire connections neatly into the junction box.
3. Feed orange connector from the driver through the center hole in the back plate, and secure the back plate to the j-box using j-box screws. Use the plastic anchors provided to mount the back plate to the wall. Back plate should be secure against wall.
4. Connect the orange connector from the fixture body to the orange connector from the driver.
5. Feed the orange connectors back through the center hole in the back plate. Place the fixture body over the back plate, and secure it to the wall using the thumb screws.
6. Place the diffuser over the back plate and secure it in place with the screw at each end of the diffuser. Place the magnetic square end caps over each screw.
7. Turn power back on at fuse or circuit box.

**AXEL vanity
3-552-xx**

oxygen

OXYGEN LIGHTING
201 RAILHEAD RD, FORT WORTH, TX 76106
TEL. (877) 607-0202 FAX (877) 607-0203
WWW.OXYGENLIGHTING.COM

ASSEMBLY INSTRUCTIONS