


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER PRIOR TO INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

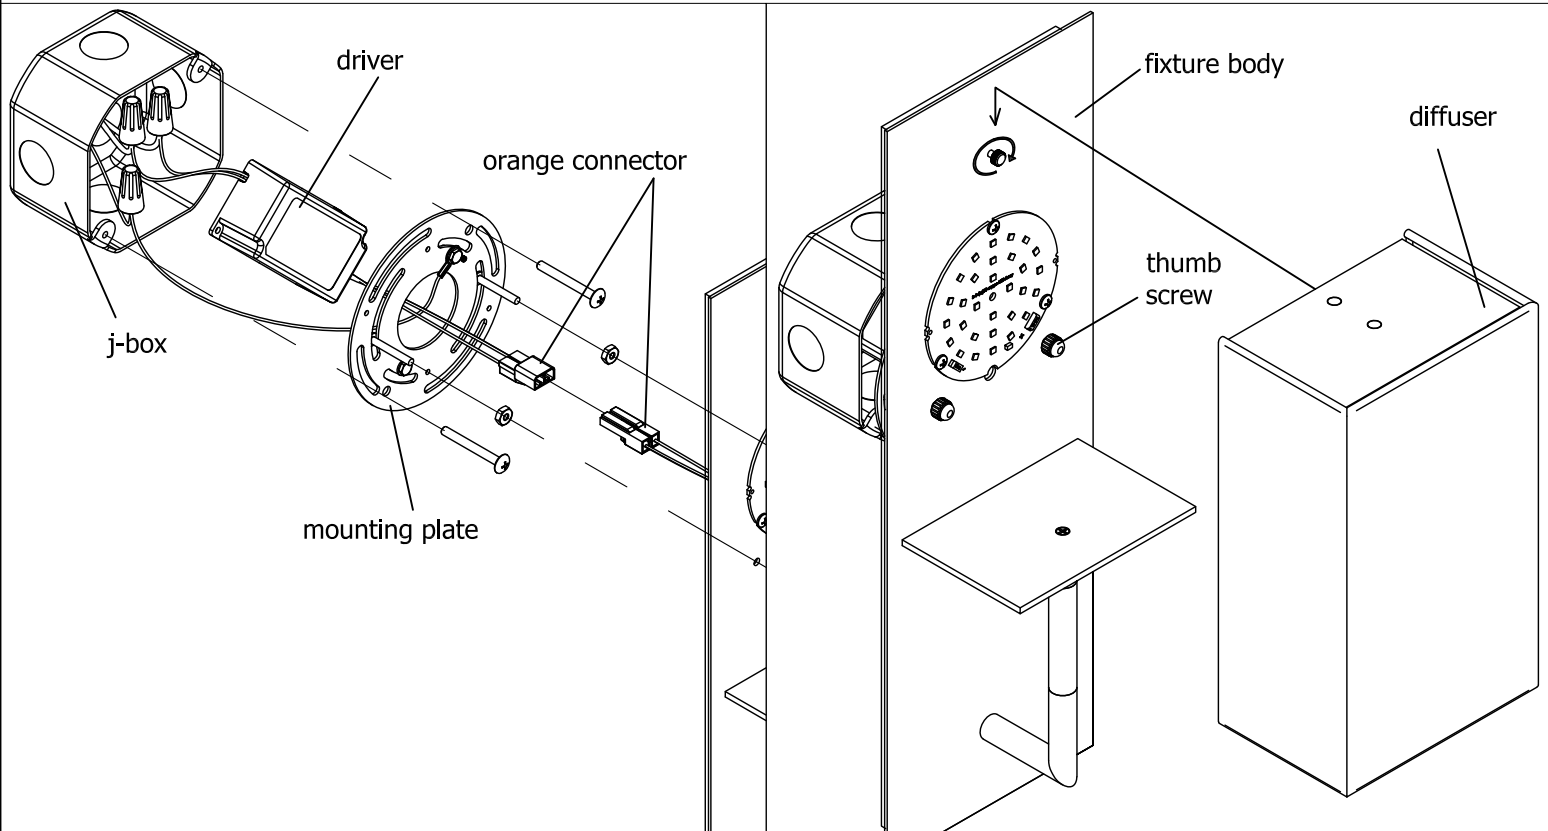

Installation Steps

1. Carefully unpack your new fixture and lay out all the parts on a clean surface. Take care not to lose any small parts necessary for installation.
2. Make wire connections from j-box to driver. Refer to driver label for wire identification.
 - **FOR DIMMING:** If using a dimmer (not included), follow wiring instructions enclosed with dimmer. Double check wiring. Tuck the wire connections neatly into the junction box.
 - **FOR NON-DIMMING:** If not using a dimming switch, with wire nuts, cap off purple and gray wires individually. Connect neutral wire (white) with neutral wire, hot wire (black) with hot wire. Double check wiring. Tuck the wire connections neatly into the junction box.
3. Tuck the wire connections and driver neatly into the junction box, leaving the orange connector and the ground wire accessible.
4. The universal mounting plate contains several slots and threaded holes. Find the pair of holes or slots that match the hole spacing in your fixture. Install the mounting screws and nuts like shown.
5. Secure the universal mounting plate to the j-box, keeping the mounting screws horizontally level.
6. Connect the orange connector from the driver to the connector from the fixture, and guide the fixture over the mounting screws. Secure the fixture with the thumb screws like shown.
7. Place diffuser onto the fixture body. If diffuser is loose, remove the screws at the top of the diffuser to access the bracket and tighten the thumb screws. Replace the diffuser and screws after tightening.
8. Once shade is secure, turn power back on at fuse or circuit box.

EPOCH scone
3-564-xx

OXYGEN LIGHTING ©

oxygen

OXYGEN LIGHTING
201 RAILHEAD RD, FORT WORTH, TX 76106
TEL. (877) 607-0202 FAX (877) 607-0203
WWW.OXYGENLIGHTING.COM

ASSEMBLY INSTRUCTIONS