


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirement.

Installation Steps:

1. Carefully unpack your new fixture and lay out all the parts on clear area. Take care not to lose any small parts necessary for installation.
2. Assemble the threaded nipple onto the cross bar and lock it in place by hex nut. Attach the cross bar assembly to outlet box by using two outlet box screws upwards. Secure the screw collar onto the threaded nipple.
3. Feed the wires from lamp holder through pipe/ shade and fixture loop, connect the pipe to the thread nipple from lamp holder, connect all the parts together until secure.
4. Weave the fixture wires including ground wire through fixture loop, every other chain, screw collar, collar ring, canopy and threaded nipple on the cross bar. Put one chain link on the fixture loop and the other one on screw collar.
5. Note, make wire connections:
 - *Attach ground wire to house ground wire using a wire nut or attach them to the cross bar with a green ground screw.
 - *Attach white or ribbed wire(neutral) from light to white wire from power source with a wire nut.
 - *Attach black or smooth wire(hot) from light to black wire from power source with a wire nut.
 - *Observing: ground wire with ground wire, neutral wire with neutral wire, hot wire with hot wire.
 - *Make sure all wire connectors are secured and do not easily pull off with the slight tug.
6. Tuck the wires connections neatly into the outlet box. Attach the canopy to the ceiling then thread the collar ring on screw collar to secure the canopy.
7. Install the light bulbs(Not included) in accordance with the fixture's specifications. **NOTE: DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**
8. Your installation is now complete. Return power to the outlet box and test the lamp body.

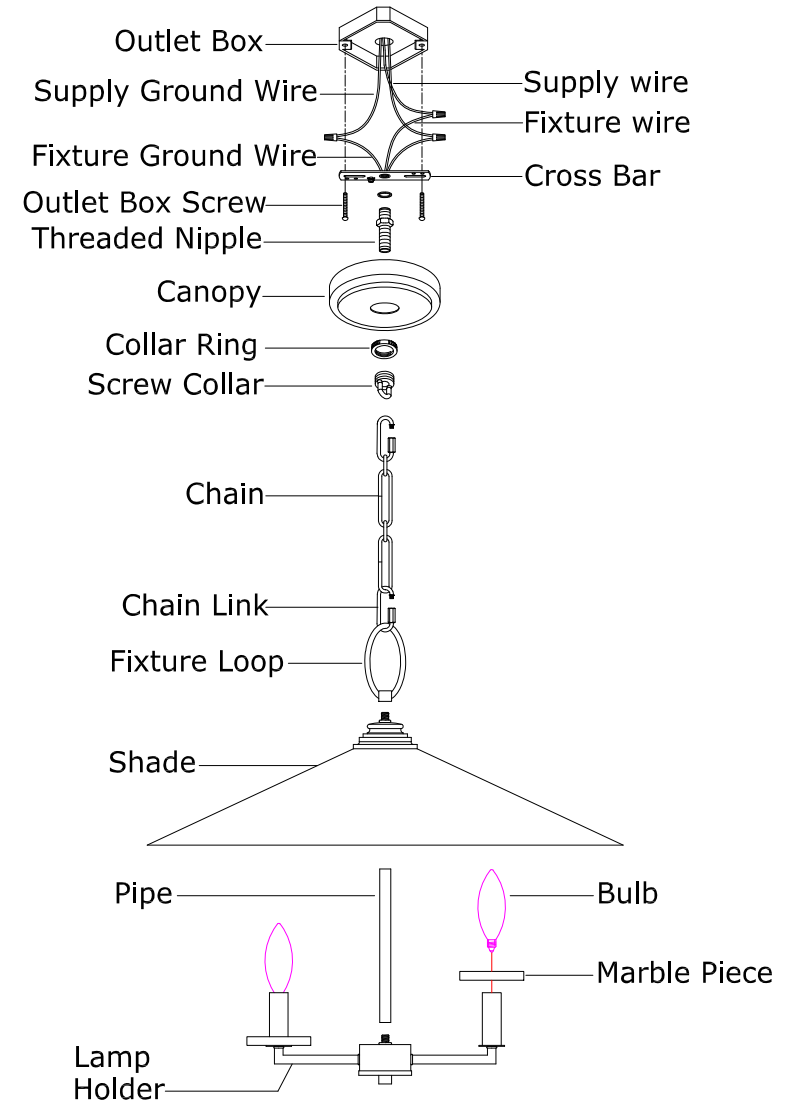

1953-22-XX, 1953-32-XX

Z-Lite
Est. 1987