

# SK2301


## ASSEMBLY & INSTALLATION GUIDE

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

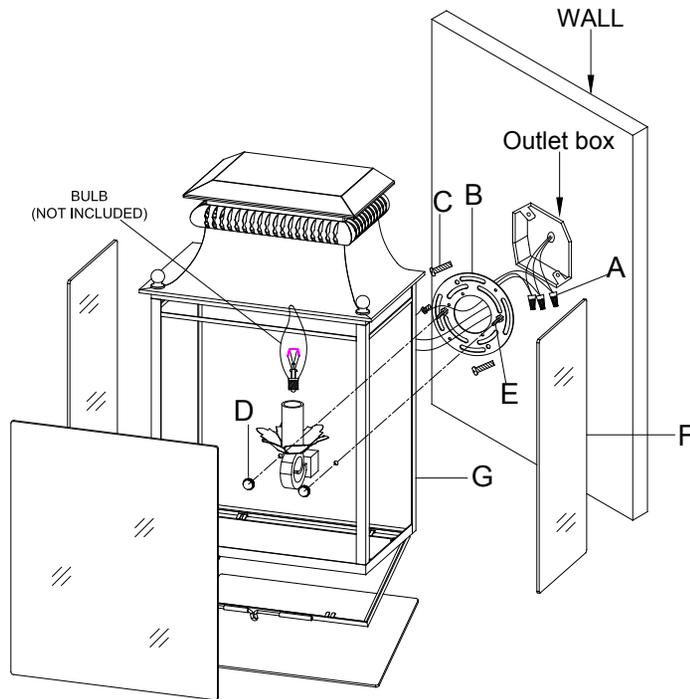

1. Remove the universal mounting plate from the outdoor lantern by removing the cap nuts.
2. Put the universal mounting plate on the J-box of the wall and secure with screw (C).
3. Connect the neutral(Ribbed or white, without any marking) fixture wire to the neutral(usually white) wire from J-box, fasten both wires together with wire connector nut and wrap with electrical tape.
4. Repeat the procedure with the hot (Round or black, with UL marking) wire to the hot (usually black) outside of the connections from J-box, Always make sure that no wire strands are left.
5. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
6. Attach ground (Copper in color) fixture wire to ground wire from ceiling J-box (usually green or copper in color), and fasten together with a wire connector nut.
7. IT IS IMPERATIVE THAT THE J-BOX IN YOUR HOME BE PROPERLY GROUNDED.
8. Tuck wire connections neatly into J-box.
9. Put the lantern onto the back plate and let finial(D) through the holes in lantern and secure with thread rod(E) .
10. To install glass panels (F) provided to each section, make sure the metal tab(G) is flipped up. Place glass panel to each frame , secure the glass panel by bending back the metal tab(G) downwards.
11. Open the door on the lantern, then insert the lighting bulbs (Not included) Type C, MAX 60W into sockets.
12. Close the door on the lantern and secure by the hook at the front door.
13. INSTRUCTION FOR MOUNTING OUTDOOR FIXTURE IN WET LOCATION:
14. Mounting surface should be clean, dry, flat and 1/4" larger than canopy/fixture base on all sides; Any gaps between the mounting surface and canopy exceeding 3/16" should be corrected as required.
15. With silicone caulking compound, caulk completely around where back of canopy meets the wall surface to prevent water from seeping into J-box.
16. This lamp is only installed on wood wall.