



## ASSEMBLING & INSTALLATION INSTRUCTIONS

The drawing shown may not exactly match the product enclosed.  
However, the installation instructions do apply to this product.

4724 4725 4726 47199

- ◆ **WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.**
- ◆ **ATTENTION! COUPER LE COURANT AU FUSIBLE OU UN DISJONCTEUR.**

### ASSEMBLING THE FIXTURE (Fig.2)

1. Raise the at both ends of arm(F) insert to the top and bottom square hole of the lamp body, aligning the end of arm's thread hole with the plate's hole, lock it securely with the screw. Raise the cover(E) to the bottom cover of the lamp body(B), by turn it clock wise until tight. Raise the loop(A) to the top coupling of the lamp body(B), by turn it clock wise until tight.
2. Install the light bulbs (Not included) in accordance with the fixture specifications.  
**NOTE: DO NOT EXCEED THE SPECIFIED WATTAGE!**
3. Raise the glass(C) insert to the lamp holder, by turn it until tighten.

### HANGING THE FIXTURE (Fig.1)

1. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old single bar. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old single bar. Carefully unpack new lamp and lay all the parts on a clear surface.
2. Thread nipple (I) into loop (L) until snug.
3. Thread other end of nipple (I) with loop attached into single bar (J) until snug.
4. Place lock washer (H) over end of nipple protruding through single bar and thread hex nut (G) onto nipple until tight.
5. Take this single bar assembly and mount to ceiling junction box with junction box screws (K). Tighten screws securely with screwdriver.
6. Using proper chain pliers to open one end link of the chain provided and connect to the fixture loop. Close the link.
7. By measuring, determine correct number of links needed for proper hanging height. Using proper chain pliers disconnect and discard remaining chain.
8. Lace the fixture wires through the chain.
9. Slip loop collar (N) over the chain, then do the same with the canopy (M).
10. Open the other end link of the chain and hang the lamp body on the loop at the ceiling. Close the link.
11. Feed the lamp body wires through the loop (L) and nipple (I) and pull until taut.

### CONNECTING THE WIRES (Fig.3)

1. Take the black wire from the ceiling junction box and the smooth wire leg from the fixture and twist bare ends together. Twist wire connector onto end of wire until snug.
2. Repeat same process with white junction box wire and ribbed wire leg of fixture wire.  
**NOTE:** Twist wires together in the same direction you twist the wire connector onto wires.
3. If your junction box has a grounding wire (green or bare copper), attach this wire and the bare copper wire from the fixture together as step 1. If junction box has no ground wire, attach the bare copper fixture wire to the green ground screw on the single bar.
4. Tuck these wire connections neatly into the ceiling outlet box and then raise the canopy all the way to the ceiling. Raise the loop and thread onto ceiling loop protruding through canopy.

Your installation is now complete. Return power to the junction box and test the fixture.

FIG.2

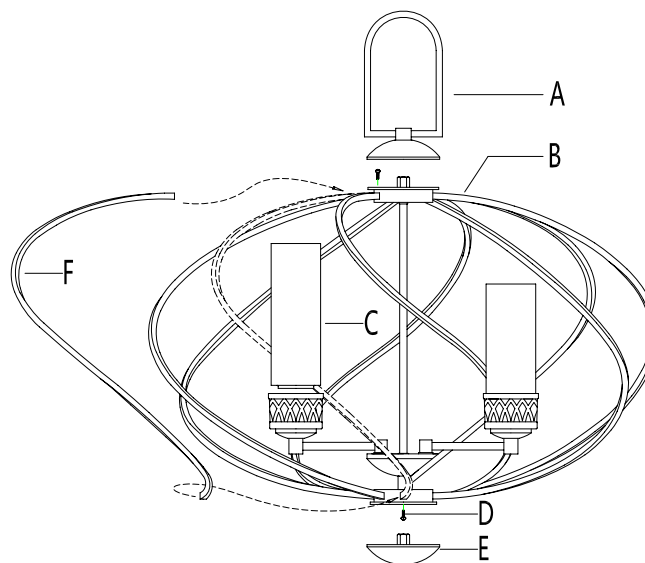


FIG.1

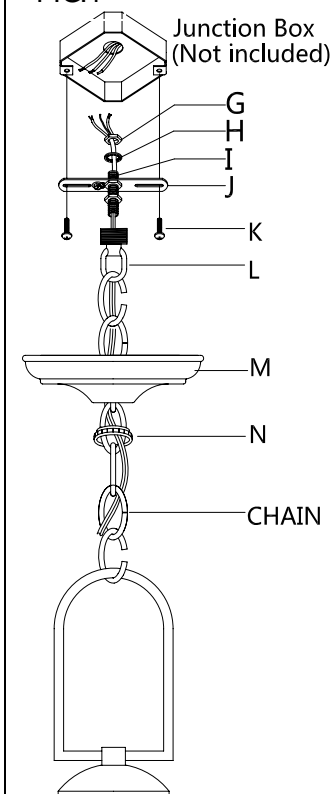


FIG.1

FIXTURE WIRES

Black or Smooth



HOUSE WIRES  
Black(Hot)

FIXTURE WIRES

White or Ribbed



HOUSE WIRES  
White (Neutral)

FIXTURE WIRES

Bare Copper (Ground)



HOUSE WIRES  
Green or Bare Copper(Ground)

Thank you for purchasing a **LIVEX** product.

Need assistance with parts or assembly? Please call customer service at: **800-761-8056**

Or visit us online at: [WWW.LIVEXLIGHTING.COM](http://WWW.LIVEXLIGHTING.COM)