
SimplyShade

Bali

Cantilever

11' Octagon / SSAD45-11 10' Square / SSAD45-10SQ

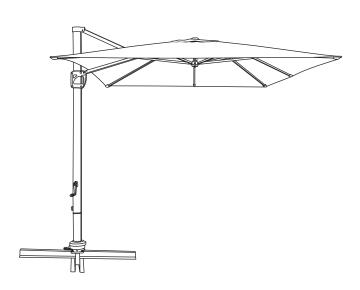


Instruction Manual

Thank you for your purchase of SimplyShade's Bali Cantilever Umbrella.

Please remove all contents from the package, inspect and review checklist. CAUTION: To reduce personal injury and damage to your umbrella, read and follow this assembly and operation guide We recommend a two-person team for assembly and disassembly. Save information for future reference.

A - Cross Bars (2) B - Foot Pedal C - Rotating Hub Cover D - Rotating Hub C - Main Frame C - Main Frame Support Tube C - CHECKLIST K - Canopy Support Beam L - Finial M - Canopy N - Ribs O - Light Adapter

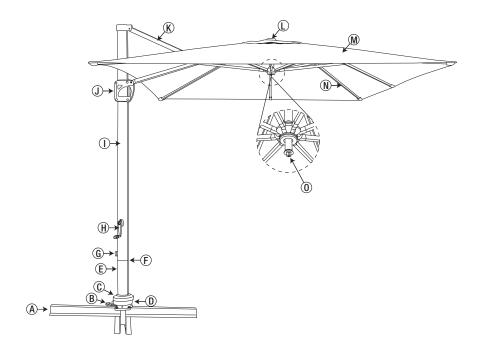

PART LI	ST		
Part		Description	Qty.
1		Cross Bars	2
2		Main Frame with Canopy	1
3		Support Stem	1
4		Main Frame Support Tube	1
(5)		Gasket	1
6		Rotating Hub Cover	1
7		Rotating Hub	1
8		Foot Pedal	1
9		Knob	1
10		Crank Handle	1
11)		Large Bolts	4
12		Medium Bolts	4
13	7	Small Screw	1
14	0	Washers	8
15	5==3	Wrench	1

REQUIRED FOR ASSEMBLY:


- One (1) Phillips Screwdriver
- Four (4) 40 lb. weights square stones or concrete weights. (160 lb. total weight needed for support weights not included) Stones & weights, standard sizes can be used up to 18" L x 18" W x 1.5" H.

NOTE: Using the cross bar stand without weights will damage your umbrella and may cause injury.

STEP 1 Assemble Cross Bar Stand


Select area to set base and place in desired location. Set cross bars in a cross position (Fig. 1). Secure stand with (4) square stones or concrete weights (weights not included).

IMPORTANT: Cross bar stand will not support umbrella without proper weights. Using the stand without weights will damage your umbrella.

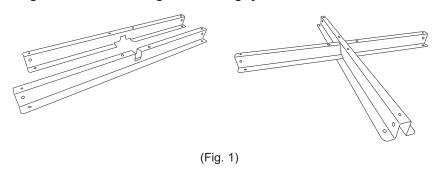


STEP 2 Assemble Rotating Hub to Cross Bar Stand

Attach foot pedal to rotating hub (Fig. 2). Turn rotating hub on side and secure foot pedal with small screw underneath foot pedal by tightening with phillips screwdriver (Fig. 3). Turn rotating hub upright and set onto cross bar stand (Fig. 4). By lining up holes, attach rotating hub to cross bar stand with 4 supplied large bolts and washers. Tighten with supplied wrench (Fig. 5).

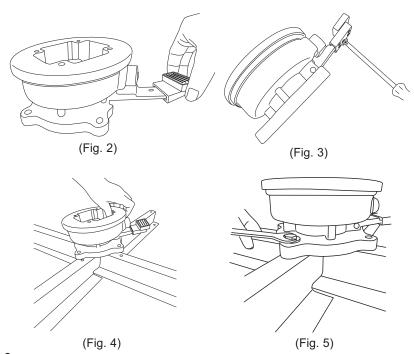


STEP 3 Assemble Support Stem to Rotating Hub

Remove gasket and main frame support tube from support stem (Fig. 6) and set aside. Slide support stem over rotating hub (Fig. 7) and line up holes. Tighten with 4 supplied medium bolts and washers. Tighten with supplied wrench (Fig. 8). Slide rotating hub cover over rotating hub (Fig. 9).

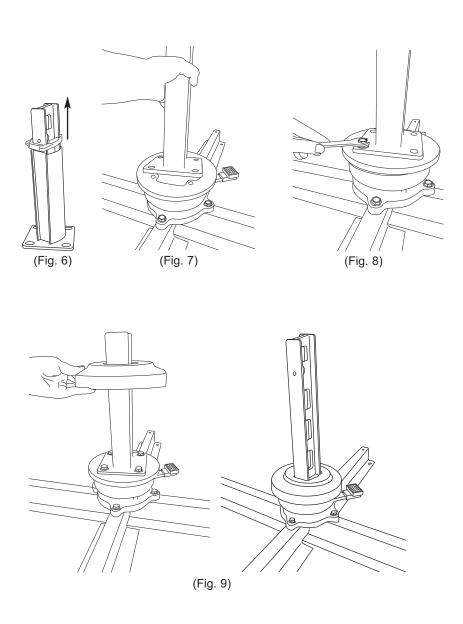

STEP 4 Assemble Main Frame to Base


Slide main frame support tube over back over support stem (Fig. 10). Slide gasket over support stem and snap onto main frame support tube (Fig. 11). Slide main frame over support stem (Fig. 12). **NOTE:** Make sure back side of main frame is on the same side as hole located on support stem. Once main frame is set in place on support stem, secure together with knob. Tighten knob by turning clockwise (Fig. 13), without over tightening.

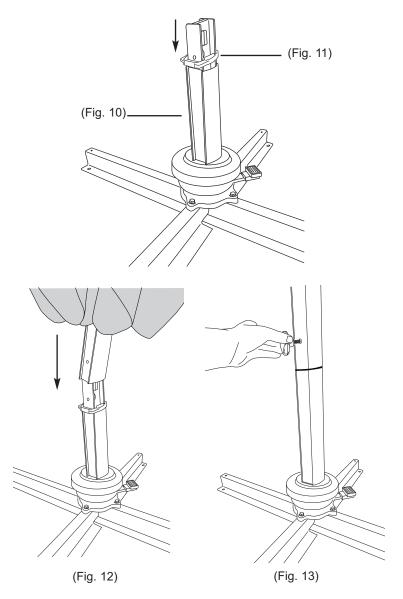

STEP 5 Opening Umbrella


Attach crank handle to crank mechanism (Fig. 14). From closed position, turn the crank clockwise (Fig. 15) until the umbrella is fully opened (Fig. 16) and the hub is at the top most position (Fig. 17). Tilt umbrella to desired position. See Step 6 for tilt operation.

NOTE: When cranking umbrella open, if you feel resistance and the umbrella is not opening, do not force the crank. Gently spread umbrella ribs with hands, then continue to crank open.

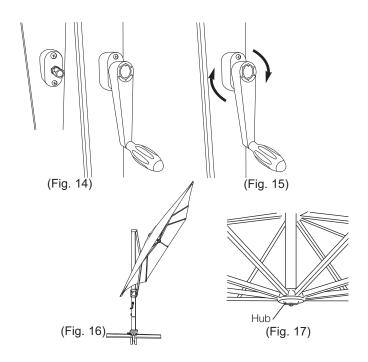


STEP 6 Tilting Umbrella

To tilt umbrella, squeeze the main frame grip handle (Fig. 18) and slide handle to desired tilt position (Fig. 19). Release main frame grip handle to lock into tilt position.

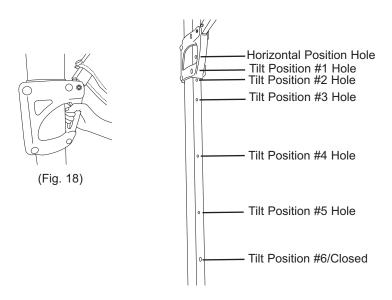


Tilt Positions (Fig. 19)

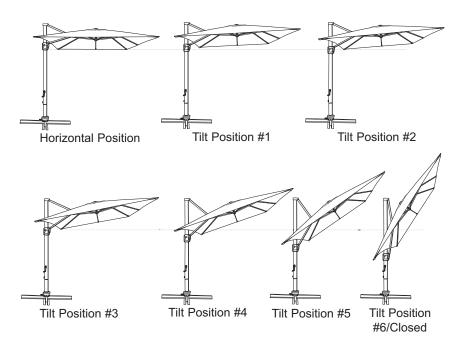


STEP 7 Rotating Umbrella 360°

Place your foot on the foot pedal of the rotating hub and place hands on the main frame (Fig. 20). Swivel the umbrella frame in either direction until desired position is reached. There are 12 locking positions for the umbrella to rotate 360° (Fig. 21). Step off the foot pedal to engage rotating lock. Your umbrella will now be locked into desired location.

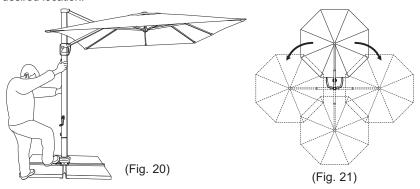

STEP 8 Closing Umbrella

To close umbrella, squeeze main frame grip handle (Fig. 22) and slide grip handle down to closed position (Fig. 23). Turn crank handle counter-clockwise (Fig. 24) until umbrella is closed (Fig. 25). Use ties to secure canopy to the main frame when umbrella is not in use.

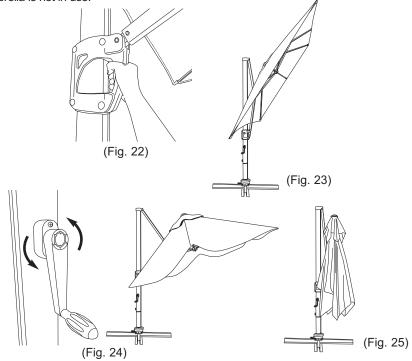


Features

To ATTACH Umbrella Light:

Loosen the light adapter built into the umbrella runner by turning counter-clockwise (Fig. 26). After loosening, pull down light adapter post (Fig. 27) to attach the umbrella light (Fig. 28 and 29) (sold separately).

To REMOVE Umbrella Light and CLOSE adapter:

Remove umbrella light, and gently push up the light adapter post back into umbrella runner and tighten turning clockwise (Fig. 26).

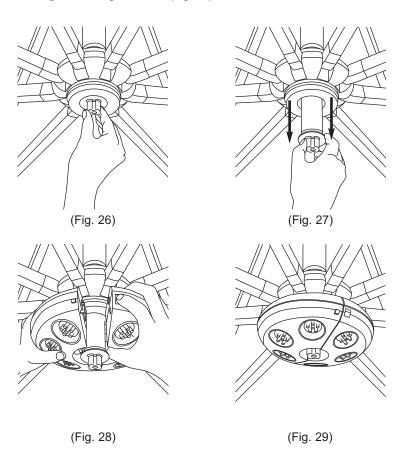

WARRANTY:

The manufacturer warrants that this umbrella, when subject to normal and proper use, will be free from manufacturing defects for a period of one year from the original date of purchase. Should any defect occur during the specified time period, the manufacturer will repair, replace, or provide replacement parts, at its own option. Limited warranty against fabric fading, based on fabric grade. Warranty is not transferable.

We will not warrant any claim coverage unless both the original sales receipt and request form are sent to us. Any items that are returned for warranty or non warranty purposes must be issued a Return Authorization Number. Only

upon issuance of an RA# and inspection by our QC department will credit or replacement of umbrella be issued. It is the customer's responsibility to pay the freight on return products or replacement parts. ALL RETURNED ITEMS MUST INCLUDE THE RA# CLEARLY WRITTEN ON THE RETURN PACKAGE or package will be refused by our warehouse personnel.

NOTE: Damages and failure caused by improper use due to neglect of reasonable and necessary care are not covered by this warranty.

Additionally, acts of nature (including but not limited to wind, hurricanes, tornadoes, and storms) are not covered by this warranty.

SAFETY PRECAUTIONS:

- Close the umbrella in windy conditions or when a storm approaches.
 Never allow the umbrella to flap in the wind; this could damage the canopy.
- Do not leave open umbrella unattended. If damage occurs, this is not covered by the warranty.
- When adjusting the umbrella, make sure that no person(s) or item(s) are close to the umbrella. This is important to prevent injury or material damage.

CARE AND MAINTENANCE:

- When not in use, close and cover umbrella with a protective cover (sold separately).
- Allow a wet canopy to dry opened up.
- If necessary, clean the fabric with lukewarm water, mild detergent, and a sponge.
- Wipe sliding marks on the aluminum poles with a damp cloth.

Winter Storage:

- · Store in a dry, protective place.
- Any visible defects must be repaired by a professional.

After the Winter:

- Areas subject to turning and sliding can be treated with a non-staining lubricant spray (silicone-based).
- Check the condition and function of the umbrella. Any defects must be repaired by a professional.