



**This product supports dimming**

**Caution- The max wattage for this fan is 300w. Lamps exceeding this wattage could damage the control and receiver.**

**CEILING FAN LIGHT**

**READ AND SAVE THESE INSTRUCTIONS**

**CAUTION:**

1. Be certain that no bare wire strands are exposed outside of the wire connectors
2. Disconnect power at main circuit breaker to prevent possible injury from electrical shock.
3. Warning - to reduce the risk of electric shock, this fan must be installed with an isolating wall control/switch
4. Warning - to reduce the risk of fire, electric shock, or personal injury, mount to outlet box marked (a) acceptable for fan support of 22.7 kg or less, and use mounting screws provided with the outlet box.
5. The fan must be mounted with the fan blades at least 7 feet from the floor to prevent accidental contact with the ceiling fan.

**ASSEMBLY & INSTALLATION INSTRUCTIONS**

**Notice:**

1. This product contains chemicals known to the state of California to cause cancer, birth defects and / or other reproductive harm. Thoroughly wash hands after installing, handling, cleaning, or otherwise touching this product.
2. Before using this product and doing maintenance, please read these instructions carefully and save them for future use.
3. This product is suitable for use with solid-state speed controls
4. The installation is to be in accordance with the national electrical code, ANSI/NFPA 70 and local codes.
5. After being wired, the ungrounded wire and grounded/grounding wire must be separated in two side of the outlet box
6. The splices, after being made, should be turned upward and pushed carefully up into the outlet box.
7. The remote controller is suitable for ceiling fan use.
8. This unit is packed completely for ceiling fan use.


Disconnect the power before installation.

Use and Installation:

Remove all fixture components and the parts bag from the carton.

1. The groove of the fan blade (I) is aligned with the bolt on the motor (J) shaft, and then Plastic fastener (K) is used to screw into the middle axis of the motor (J) to tighten and fix the fan blade (I).  
Align the hole of the curved glass (L) with the outer frame hole (M) and pass the round nut and threaded pipe (N) through the outer frame hole (M) Pass through the curved glass hole (L), pass through the baffle hole (O), screw in the threaded pipe (N) with a round nut (P), and fix the curved glass (L)  
Install light bulb (Q) into socket (R) by threading in a clockwise direction.
2. Pass fixture, safety cable(1) and wire through the rod(B).place the rod into the center column(E),align the holes at the bottom of the rod with the center column and carefully insert hitch pin(F) through,theninsert the lock pin(G) through the holes near the end of the hitch pin.Tighten the screws(H) with tool.
3. Put the canopy (5) and hanging ball (D) through the wire, through the safety cable (1) and through rod (B), insert the pin (C) into the rod (B) side hole , insert the pin (C) into the positioning groove of the hanging ball (D), and lock the screw on the side of the hanging ball to fix it on the rod (B).
4. Secure the hanger bracket(A) to the junction box with the screws (4) and washers (3) ,then place the downrod ball(D) into the hanger bracket (A).  
An additional safety support is provided to prevent the fan from falling. Secure the safety cable to the ceiling joist with screw and washer,as illustrated in Figure 1.
5. Connect main power wire from junction box with the wires of the controller, black with black, white with white and attach fixture ground wire and ground wire from outlet box with wire nut. Connect the output wires from controller and fixture wires with wire connector, colors: black with black, white with white, blue with blue.
6. Secure the canopy (5) to hanger bracket (2) with screws (6) .

Figure 1

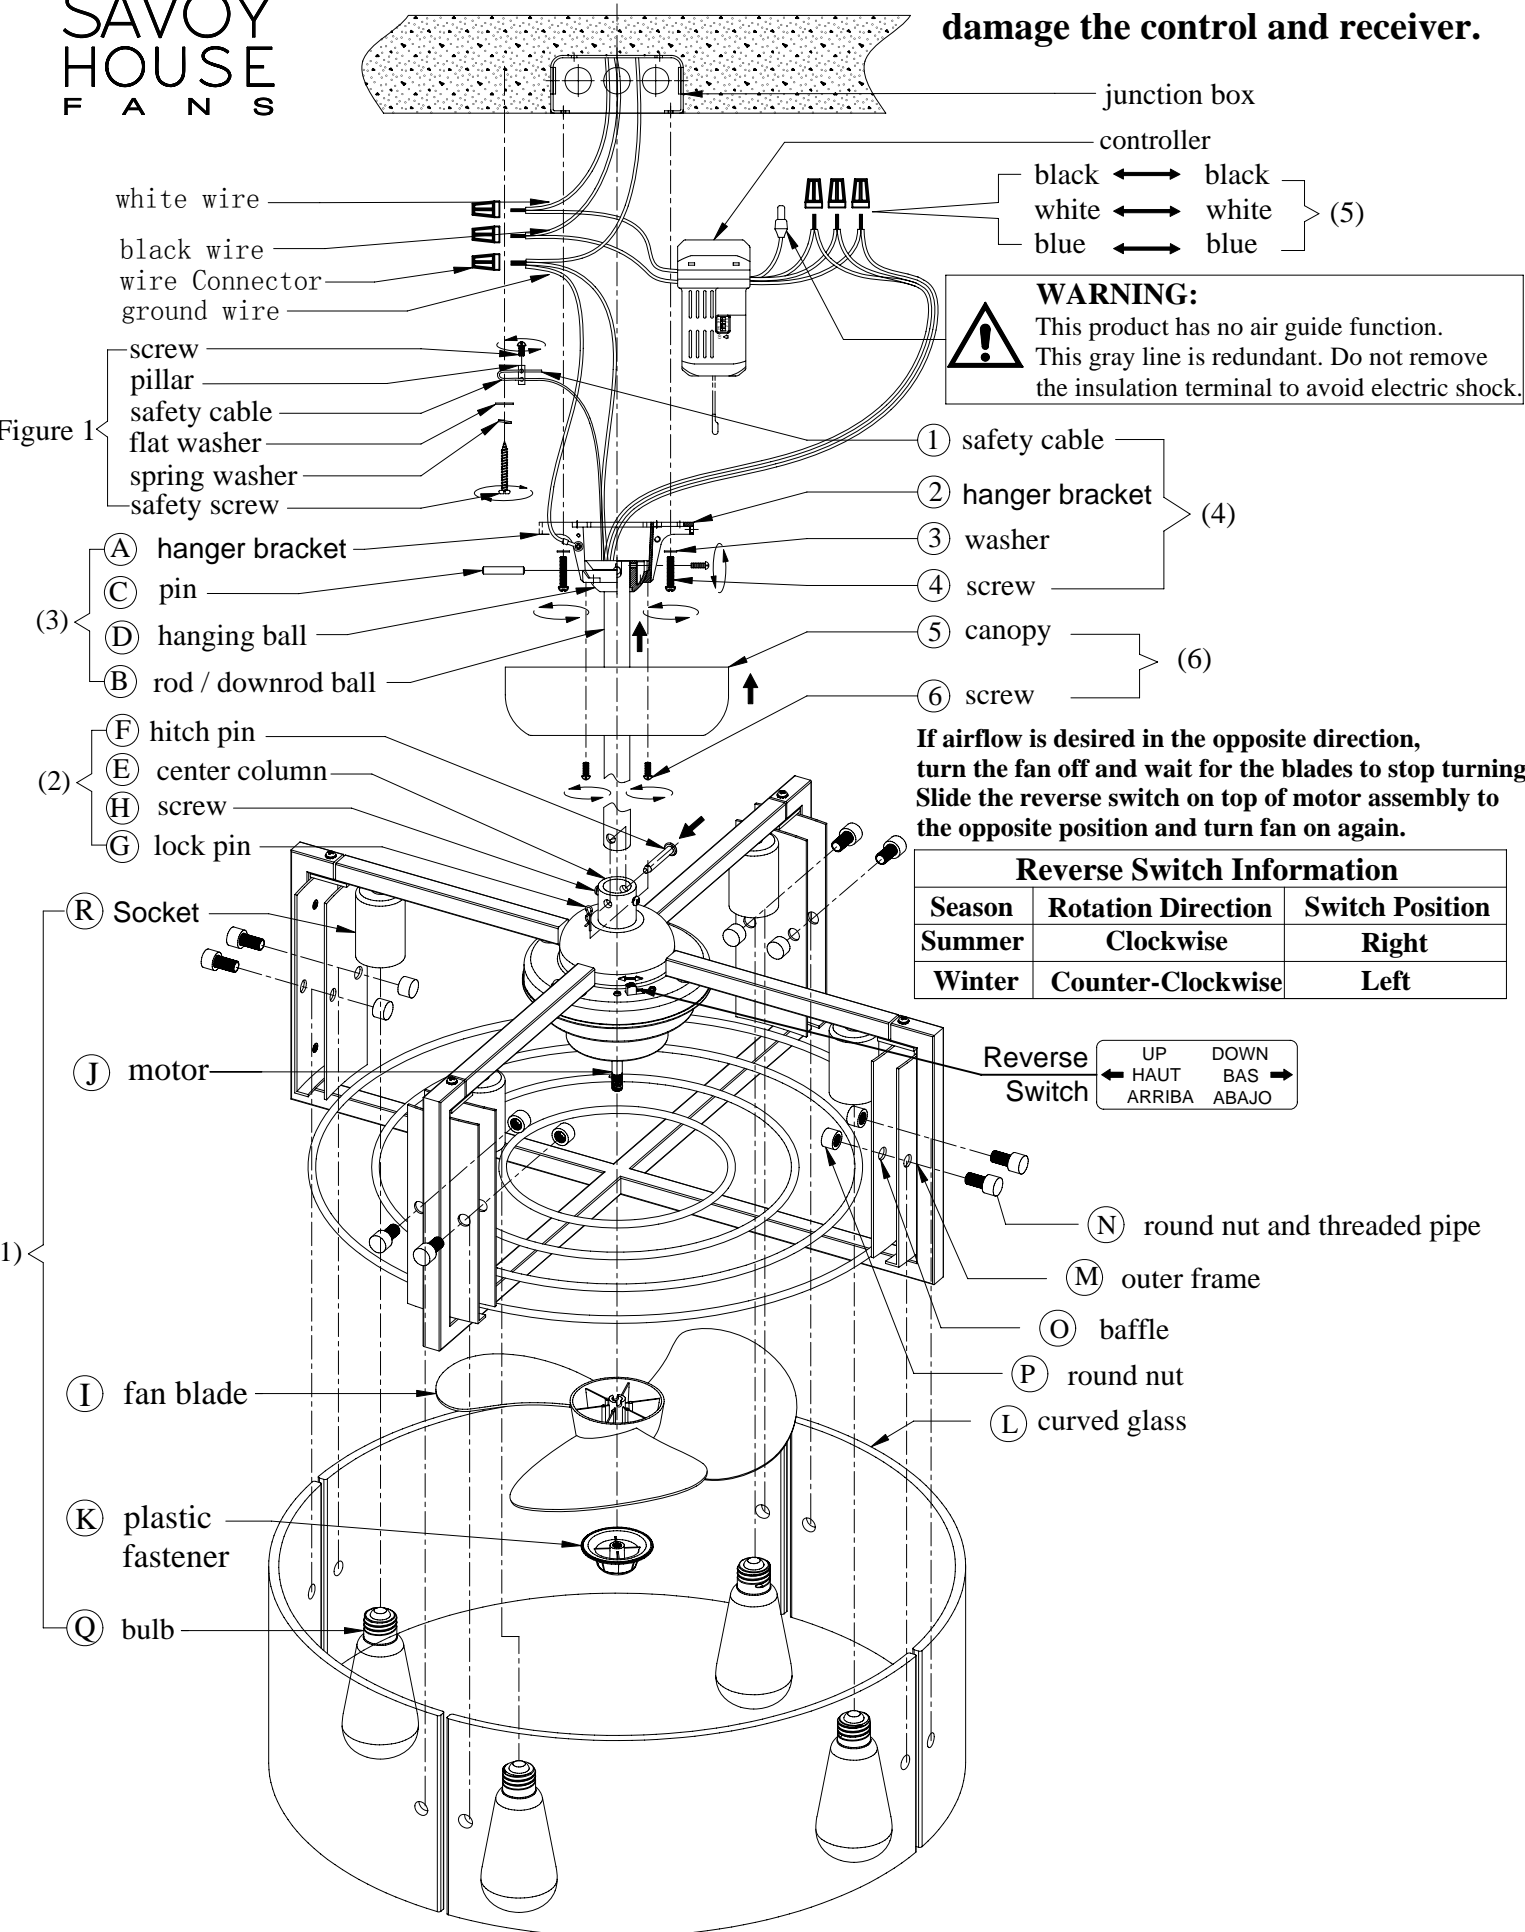

**WARNING:**  
This product has no air guide function.  
This gray line is redundant. Do not remove the insulation terminal to avoid electric shock.